
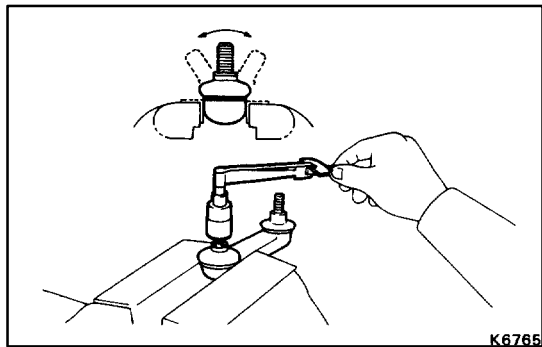


Stabilizer Bar COMPONENTS

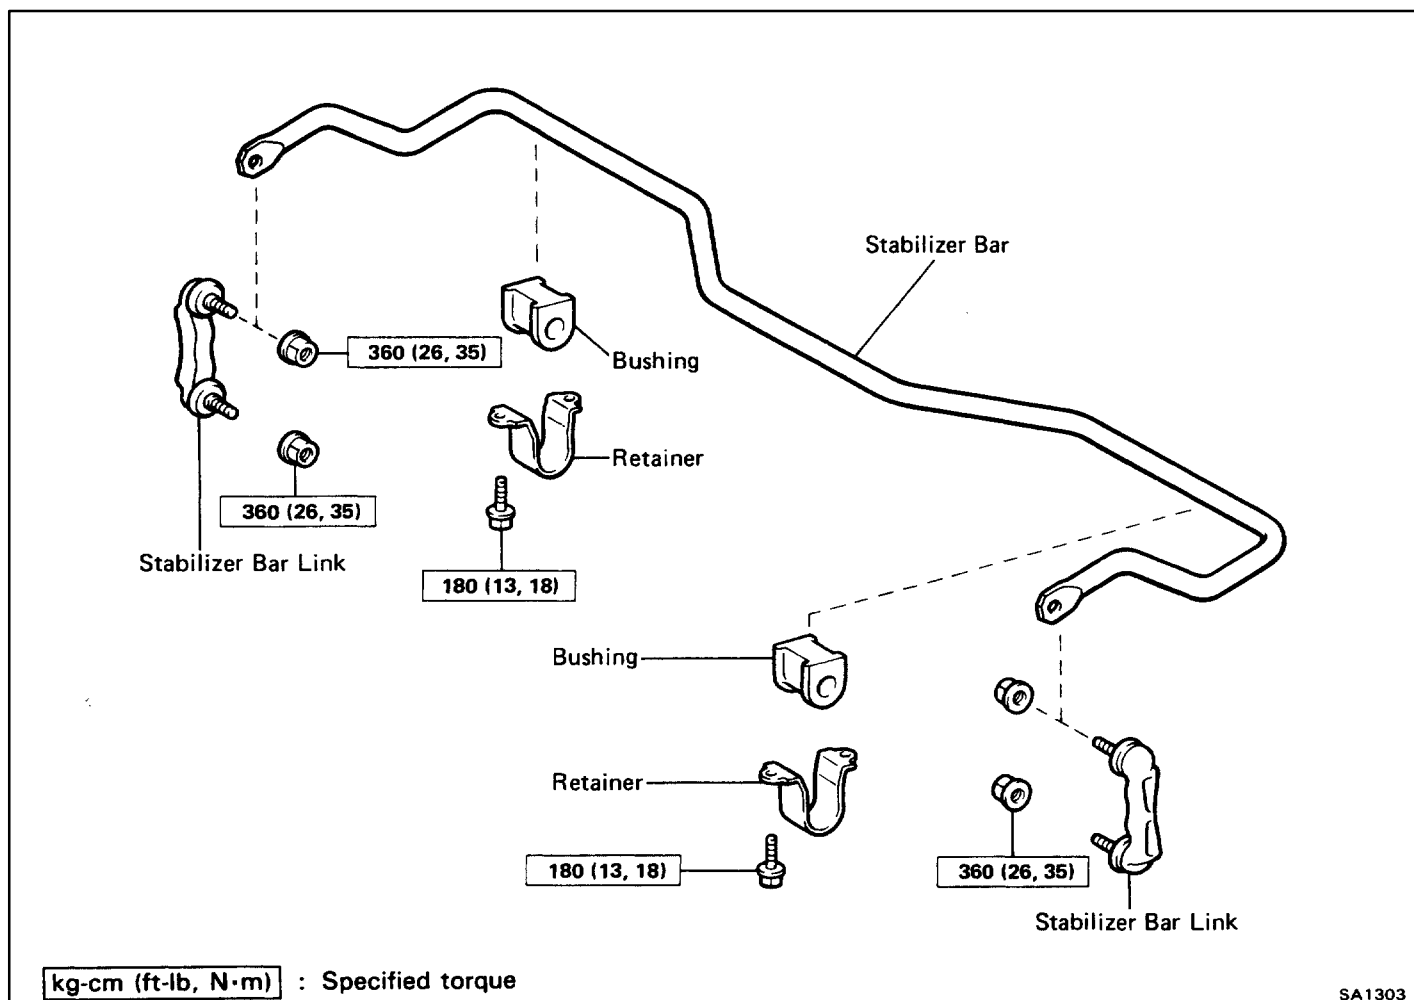

INSPECTION OF STABILIZER BAR LINK BALL JOINT

INSPECT BALL JOINT FOR ROTATION CONDITION

- Flip the ball joint stud back and forth 5 times as shown in the figure, before installing the nut.
- Using a torque gauge, turn the nut continuously one turn each 2–4 seconds and take the torque reading on the fifth turn.

Torque (turning):

3–12 kg-cm (2.6–10.4 in.-lb, 0.3–1.2 N·m)

If not within specification, replace the stabilizer bar link.