

## PRE-CHECK

### 1. SETTING OF THE THEFT DETERRENT SYSTEM

#### Setting Conditions

- (a) Close all the doors.
- (b) Close the engine hood and luggage compartment door.
- (c) Remove the ignition key out of the ignition key cylinder.

### 2. SETTING OF THE THEFT DETERRENT SYSTEM

#### Setting Operation

When any of the following operations (a), (b) or (c) is performed, the theft deterrent indicator light will light up as shown below.

- (1) Lock the left or right door using the key. (All doors are locked by key-interlinked lock operation)
- (2) Lock all the doors using the wireless door lock control system.
- (3) With one of the doors locked, lock the other door without using the key (keyless door lock).

Elapsed time after operation	Indicator light
Within about 30 seconds	Light up
After about 30 seconds	Blinks *1

\*1: 1 sec. on, sec. off

#### HINT:

When the theft deterrent system is set, doors cannot be locked or unlocked with the door lock control switch and the luggage compartment door cannot be unlocked with the luggage compartment door opener switch.

### 3. CANCELING OF THE THEFT DETERRENT SYSTEM IN THE SET CONDITION

#### Cancelling Operation

#### HINT:

- Check if the theft deterrent indicator light is blinking.
  - When any of the following operations (a), (b), (c) or (d) is performed, the theft deterrent system is canceled and indicator light will go off.
- (a) Unlock the left or right door using the key.
  - (b) Unlock all the doors using the wireless door lock control system.
  - (c) Insert the ignition key in the ignition key cylinder and turn it to the ACC or ON position.  
(This is operative only when the theft deterrent system has never operated.)
  - (d) Unlock the luggage compartment door with the key. \*1

\*1: The theft deterrent systems is temporarily canceled only while the luggage compartment door is open. Approximately 2 seconds after the luggage compartment door is closed, the theft deterrent system is reset.

#### 4. CHECK OF THE THEFT DETERRENT SYSTEM OPERATION

Check if the theft deterrent indicator light is blinking.

When any of the following operation (a) or (b) is performed, the system sounds the horns and theft deterrent horn and flashes the headlights and taillights for about one minute to alert. At the same time, the system disconnects the starter motor circuit and locks all doors (if all doors are not locked, the system repeats door locking operation every 2 seconds during the one minute alert time).


- (1) Open the engine hood using the engine hood opener lever.
- (2) Unlock any of the doors without key operation.

#### 5. CANCELING OF THE THEFT DETERRENT SYSTEM IN OPERATING CONDITION.

The theft deterrent operation can be canceled when any of the following conditions is met:

No.	Condition	Canceling Operation
1	Unlock left or right door with the key.	○
2	Unlock doors with wireless door lock control system.	○
3	Insert key into ignition key cylinder and turn it to ACC or ON position.	○
4	About 1 minute passes after theft deterrent operation begins.	Automatic stop*1

\*1: In this case, the theft deterrent system resets in about 2 seconds after if all doors are closed.

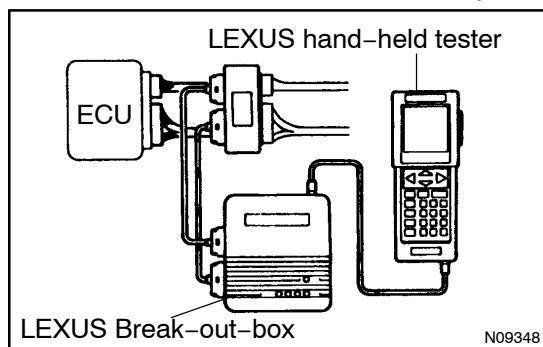

#### 6. ECU TERMINAL VALUES MEASUREMENT BY USING LEXUS BRAKE-OUT-BOX AND LEXUS HAND-HEID TESTER

- (a) Hook up the LEXUS hand-held tester and LEXUS brake-out-box to the vehicle.
- (b) Read the ECU input/output values by following the prompts on the tester screen.

##### HINT:

LEXUS hand-held tester has a "Snapshot" function. This records the measured values and is effective in the diagnosis of intermittent problems.

Please refer to the LEXUS hand-held tester/LEXUS brake-out-box operator's manual for further details.