



## REMOVAL

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. DISCONNECT IGNITION COIL WITH IGNITER CONNECTORS
4. REMOVE IGNITION COIL WITH IGNITERS FROM SPARK PLUGS

Remove the bolt.

**Torque: 7.5 N·m (80 kgf·cm, 66 in.·lbf)**