



REMOVAL

1. REMOVE ENGINE UNDER COVER AND ENGINE UNDER COVER NO.2
2. DISCONNECT CRANKSHAFT POSITION SENSOR CONNECTOR
3. REMOVE CRANKSHAFT POSITION SENSOR

Torque: 6.5 N·m (65 kgf·cm, 58 in.·lbf)