


Key Unlock Warning Switch Circuit

CIRCUIT DESCRIPTION

The key unlock warning switch goes on when the ignition key is inserted in the key cylinder and goes off when the ignition key is removed.

The ECU operates the key confinement prevention function while the key unlock warning switch is on.


WIRING DIAGRAM

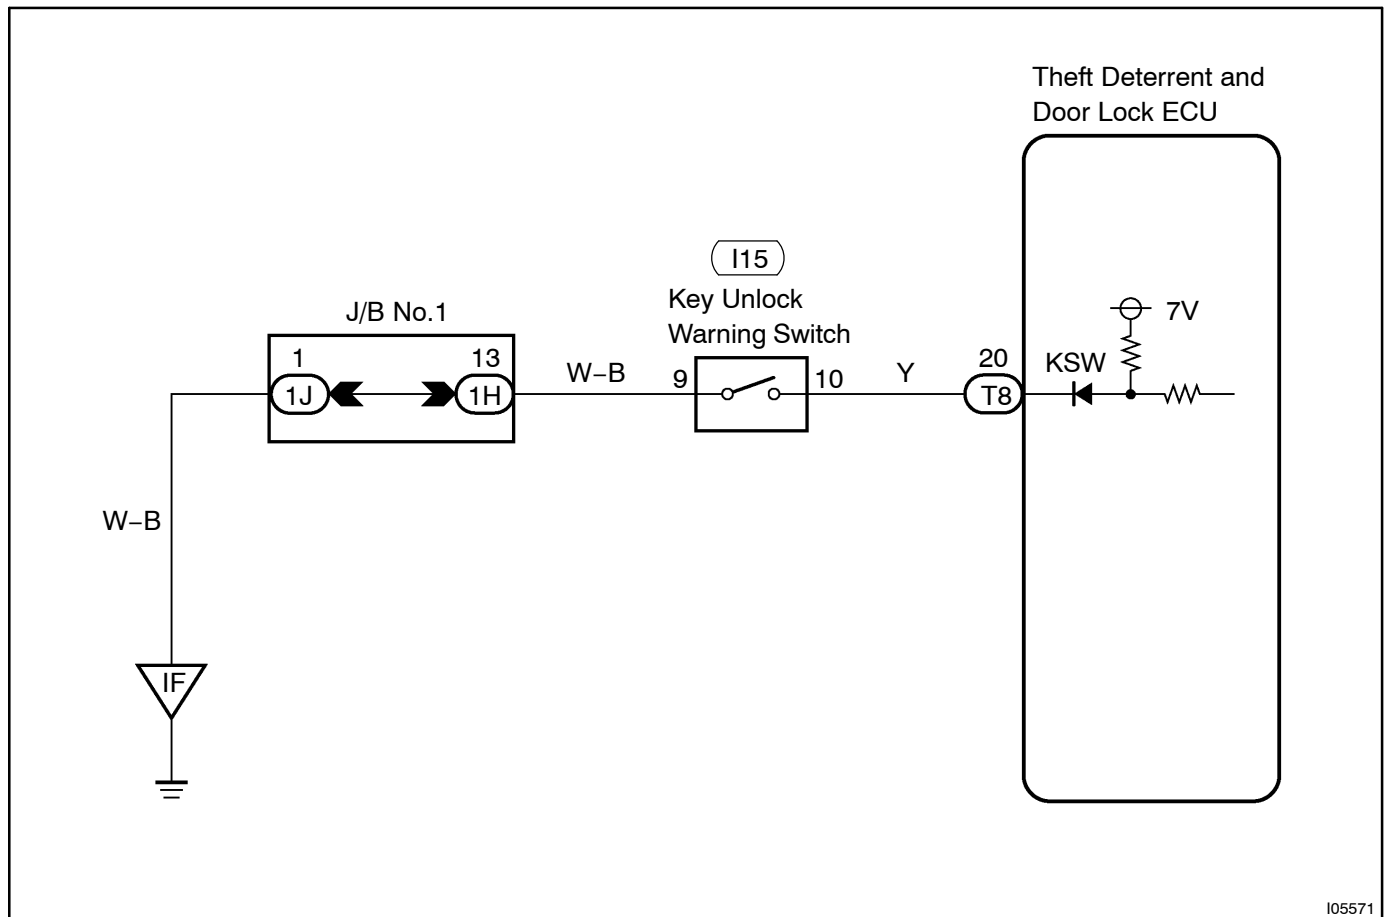

I05571

INSPECTION PROCEDURE

1	Check key unlock warning switch.
---	----------------------------------

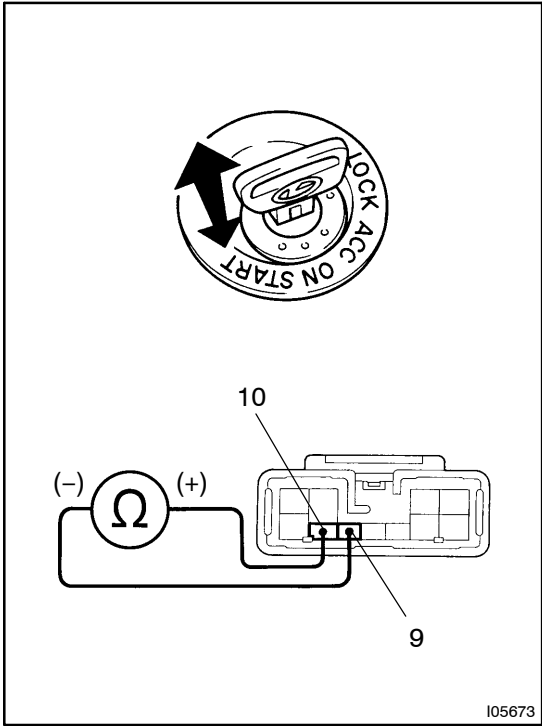

PREPARATION:

Disconnect key unlock warning switch connector.

CHECK:

Check continuity between terminal 9 and 10 of key unlock warning switch connector, when the key is inserted to the key cylinder or removed.

OK:

Switch position	Terminal No. to continuity
ON (Key inserted)	9 - 10
OFF (Key removed)	

NG	Replace key unlock warning switch.
----	------------------------------------

OK

2	Check harness and connectors between ECU and key unlock warning switch, key unlock warning switch and body ground (See page IN-29).
---	--

NG	Repair or replace harness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-622](#)).