



INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. DRAIN ENGINE COOLANT
4. DISCONNECT THROTTLE BODY
(See page SF-59)
5. REMOVE ECT SENSOR
 - (a) Disconnect the ECT sensor connector.
 - (b) Remove the ECT sensor and gasket.

