



INSPECTION

INSPECT FUEL TANK AND LINE

- Inspect the fuel lines and connections for cracks, leakage or deformation.
- Inspect the fuel tank vapor vent system hoses and connections for looseness, kinks or damage.
- Inspect the fuel tank for deformation, cracks, fuel leakage or tank band looseness.
- Check the filter neck for damage or fuel leakage.
- Hose and tube connections are as shown in the illustration.

If the problem is found, repair or replace the parts as necessary.

