


## INSTALLATION

### 1. INSTALL FUEL FILTER AND FUEL PRESSURE REGULATOR

- (a) Apply a light coat of gasoline to 2 new O-rings, and install it to the fuel pressure regulator and fuel filter.
- (b) Attach the fuel filter to the fuel pressure regulator.
- (c) Attach the pressure regulator and fuel filter to the fuel pump bracket.
- (d) Check that the fuel pressure regulator and fuel filter rotate smoothly.

#### NOTICE:

**If it does not rotate smoothly, the o-ring may be pinched, so remove the pressure regulator, fuel filter and do steps (a) and (b) above again**

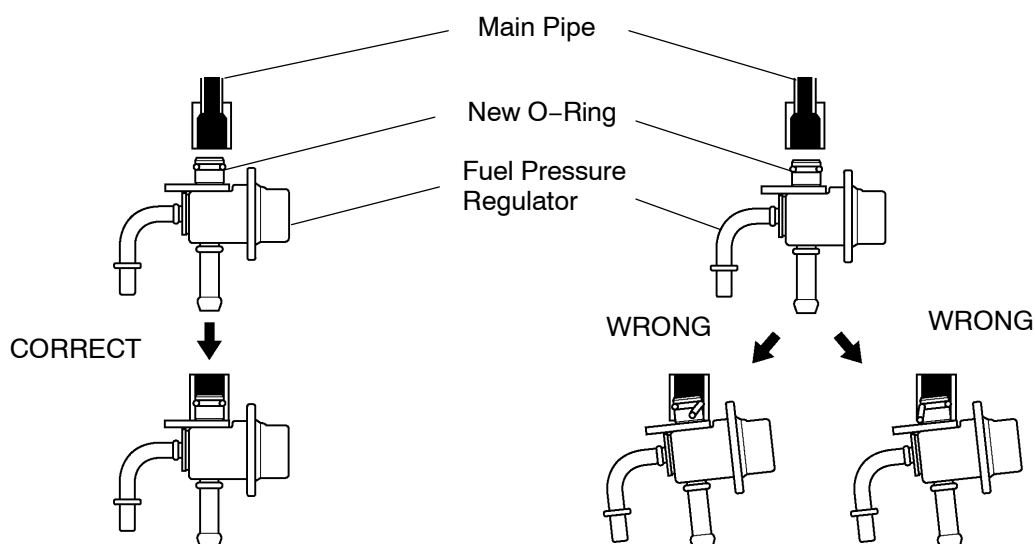

B01413

- (e) Install the screw.

**Torque: 2.0 N·m (20 kgf·cm, 18 in.·lbf)**

### 2. INSTALL FUEL PUMP TO FUEL PUMP BRACKET

- (a) Connect the fuel hose (from fuel pump) to the pressure regulator.
- (b) Install the rubber cushion to the fuel pump.
- (c) Install the fuel pump by pushing the lower side of the fuel pump.
- (d) Connect the ground strap to the fuel pump earth clamp with the screw.

3. **INSTALL FUEL PUMP AND SUCTION TUBE ASSEMBLY**  
(See page SF-11)