

INSTALLATION


1. INSTALL FUEL PUMP FILTER TO FUEL PUMP

Install the fuel pump filter with a new clip.

2. INSTALL FUEL PUMP TO FUEL PUMP BRACKET

- Install the fuel pump earth clamp to the fuel pump with the screw.
- Connect the fuel hose to the outlet port of the fuel pump.
- Install the rubber cushion to the fuel pump.
- Install the fuel pump by pushing the lower side of the fuel pump.
- Connect the ground strap to the fuel pump earth clamp with the screw.


3. CONNECT LEAD CONNECTOR TO FUEL PUMP

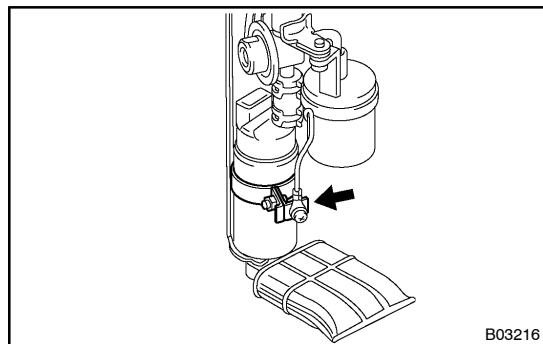

4. INSTALL FUEL PUMP AND SUCTION TUBE ASSEMBLY TO FUEL TANK

- Install a new gasket to the fuel pump set plate.
- Insert the fuel pump and suction tube assembly into the fuel tank.
- Connect the fuel hose to the fuel pump bracket, and install the fuel pump bracket to the fuel tank.

Torque: 5.5 N·m (55 kgf·cm, 48 in·lbf)

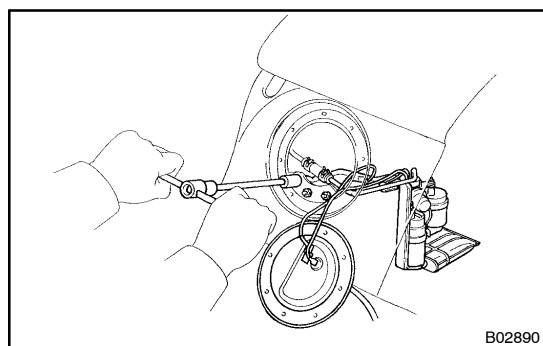


- Install the fuel pump set plate with the 8 bolts.


Torque: 3.5 N·m (35 kgf·cm, 31 in·lbf)


5. INSTALL PARTITION COVER

6. INSTALL SEAT BACK AND CUSHION

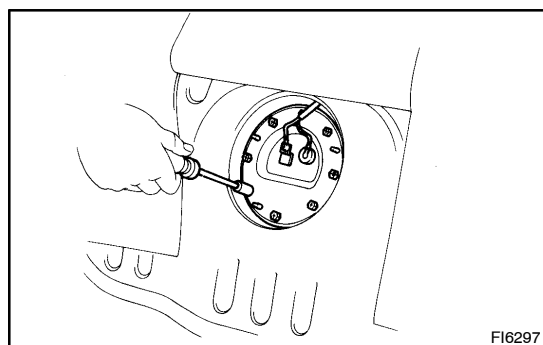

7. CONNECT FUEL PUMP CONNECTOR

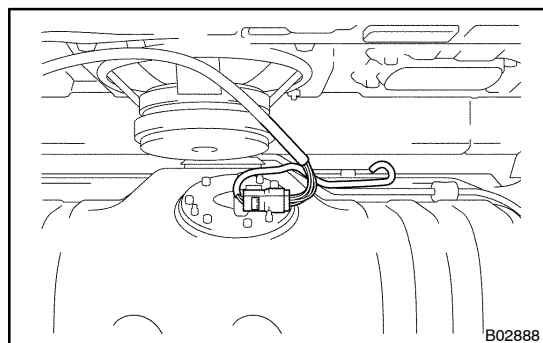

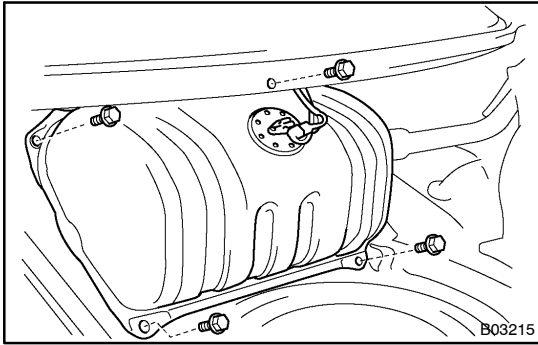

8. **INSTALL 4 FUEL TANK MOUNTING BOLTS**
Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)
9. **INSTALL LUGGAGE COMPARTMENT TRIM COVER**
10. **INSTALL LUGGAGE COMPARTMENT FLOOR MAT**