

## INSTALLATION

### 1. INSTALL FUEL PRESSURE PULSATION DAMPERS

Using SST, install 2 new gaskets, the rear fuel pipe and pulsation damper. Install the 2 pulsation dampers.

SST 09612-24014 (09617-24011)

**Torque:**

**39 N·m (400 kgf·cm, 29 ft·lbf)**



**33 N·m (340 kgf·cm, 24 ft·lbf) for SST**

**HINT:**

Use a torque wrench with a fulcrum length of 30 cm (11.81 in.).

### 2. CONNECT ENGINE WIRE

- (a) Connect the engine wire protector with the 4 bolts to the intake manifold and LH front bearing cap.
- (b) Connect the engine wire from the wire clamp on the LH cylinder head cover.
- (c) Connect the engine wire from the wire clamp on the timing belt rear plate.
- (d) Connect the engine wire from the wire clamps on the timing belt cover.
- (e) Connect these connectors:
  - LH side injector connectors
  - LH side ignition coil connectors
  - LH side camshaft oil control valve connector
  - VVT 2 sensor connector
  - Camshaft position sensor connector

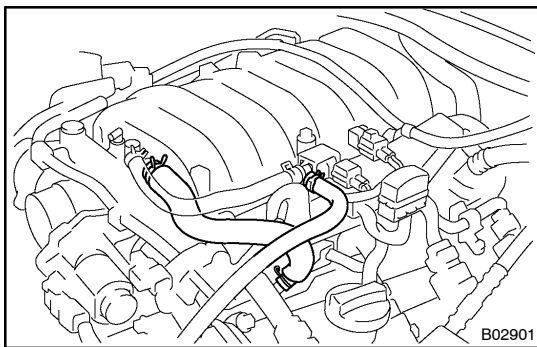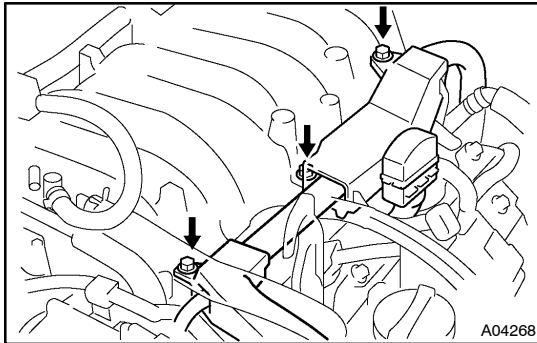

- (f) Connect these hoses and connectors:
  - Brake booster vacuum hose
  - PCV hose

### 3. INSTALL LH SIDE V-BANK COVER BRACKETS

**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**

### 4. INSTALL VSV FOR EVAP

(See page SF-65)

### 5. CHECK FOR FUEL LEAKS

(See page SF-1)

### 6. CONNECT ACCELERATOR CABLE

### 7. INSTALL V-BANK COVER