


## REMOVAL

### 1. REMOVE FUEL PUMP AND SUCTION TUBE ASSEMBLY (See page SF-9)

### 2. REMOVE FUEL PUMP


- (a) Remove the screw, and disconnect the ground strap from the fuel pump earth clamp.

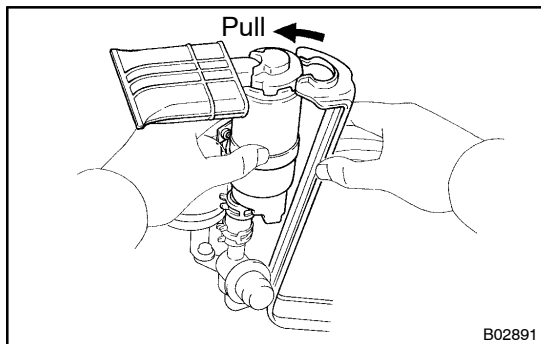

- (b) Pull out the lower side of the fuel pump from the fuel pump bracket.

- (c) Remove the rubber cushion from the fuel pump.

- (d) Disconnect the fuel hose (from fuel pump) from the fuel pressure regulator, and remove the fuel pump.

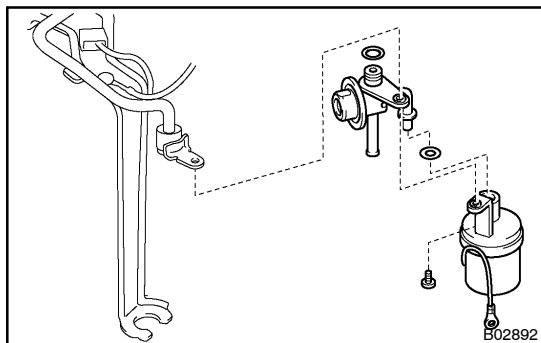

### 3. REMOVE FUEL FILTER AND FUEL PRESSURE REGULATOR

- (a) Remove the screw, fuel filter and fuel pressure regulator.
- (b) Remove the 2 O-rings from fuel pressure regulator and fuel filter.