


REMOVAL


CAUTION:

Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE LUGGAGE COMPARTMENT TRIM COVER
3. REMOVE 4 FUEL TANK MOUNTING BOLTS

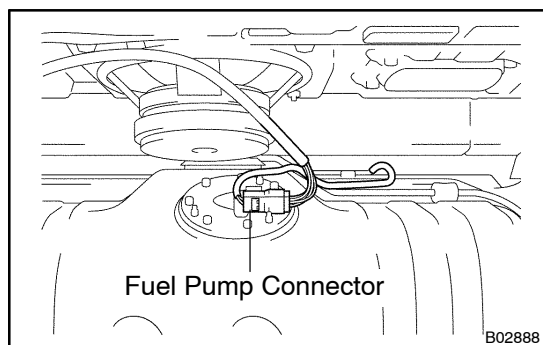


4. DISCONNECT FUEL PUMP CONNECTOR
5. REMOVE SEAT CUSHION AND BACK

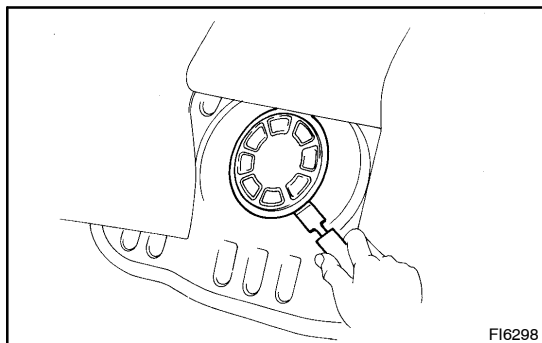


6. REMOVE PARTITION COVER

Using a scraper, pry out the partition cover.

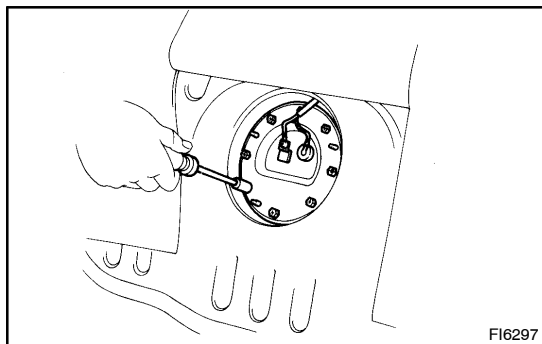


7. REMOVE FUEL PUMP AND SUCTION TUBE ASSEMBLY FROM FUEL TANK


- (a) Remove the 8 bolts, and disconnect the fuel pump set plate from the fuel tank.

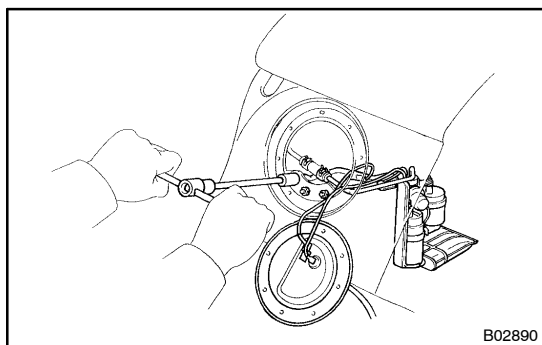


- (b) Remove the 3 nuts, and disconnect the fuel pump bracket from the fuel tank.
- (c) Disconnect the fuel hose from the fuel pump bracket, and pull out the fuel pump and suction tube assembly.
- (d) Remove the gasket from the fuel pump set plate.

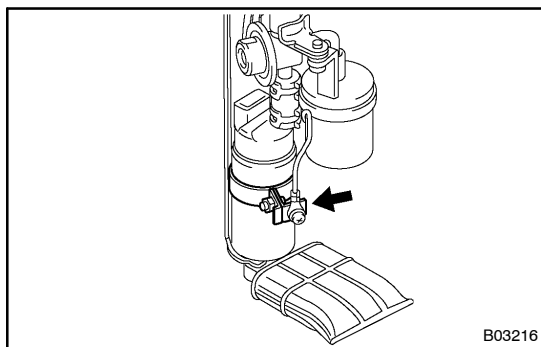**8. DISCONNECT LEAD CONNECTOR FROM FUEL PUMP****9. REMOVE FUEL PUMP FROM FUEL PUMP BRACKET**

- (a) Remove the screw, and disconnect the ground strap from the fuel pump earth clamp.

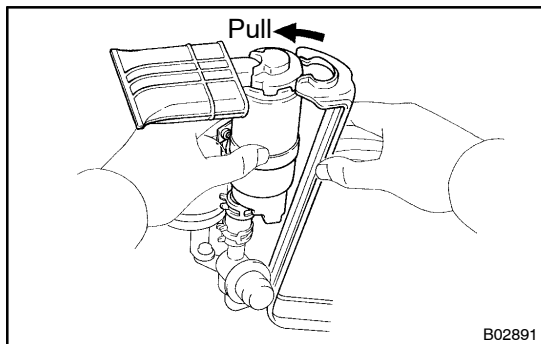

- (b) Pull out the lower side of the fuel pump from the fuel pump bracket.
- (c) Remove the rubber cushion from the fuel pump.
- (d) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.
- (e) Remove the screw and fuel pump earth clamp.

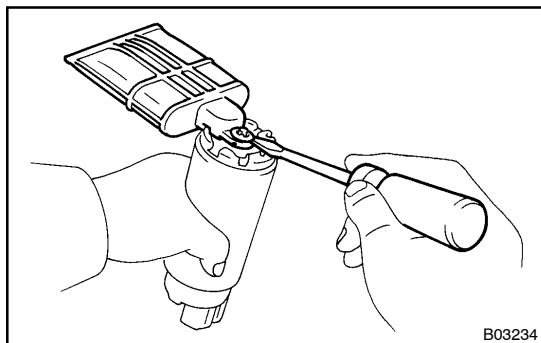**10. REMOVE FUEL PUMP FILTER FROM FUEL PUMP**

- (a) Using a small screwdriver, remove the clip.
- (b) Pull out the fuel pump filter.