

INSTALLATION

Installation is in the reverse order of removal.

(See page SF-34)