


# AUTOMATIC GLARE-RESISTANT EC MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 60)

\* 1 : W/ MEMORY

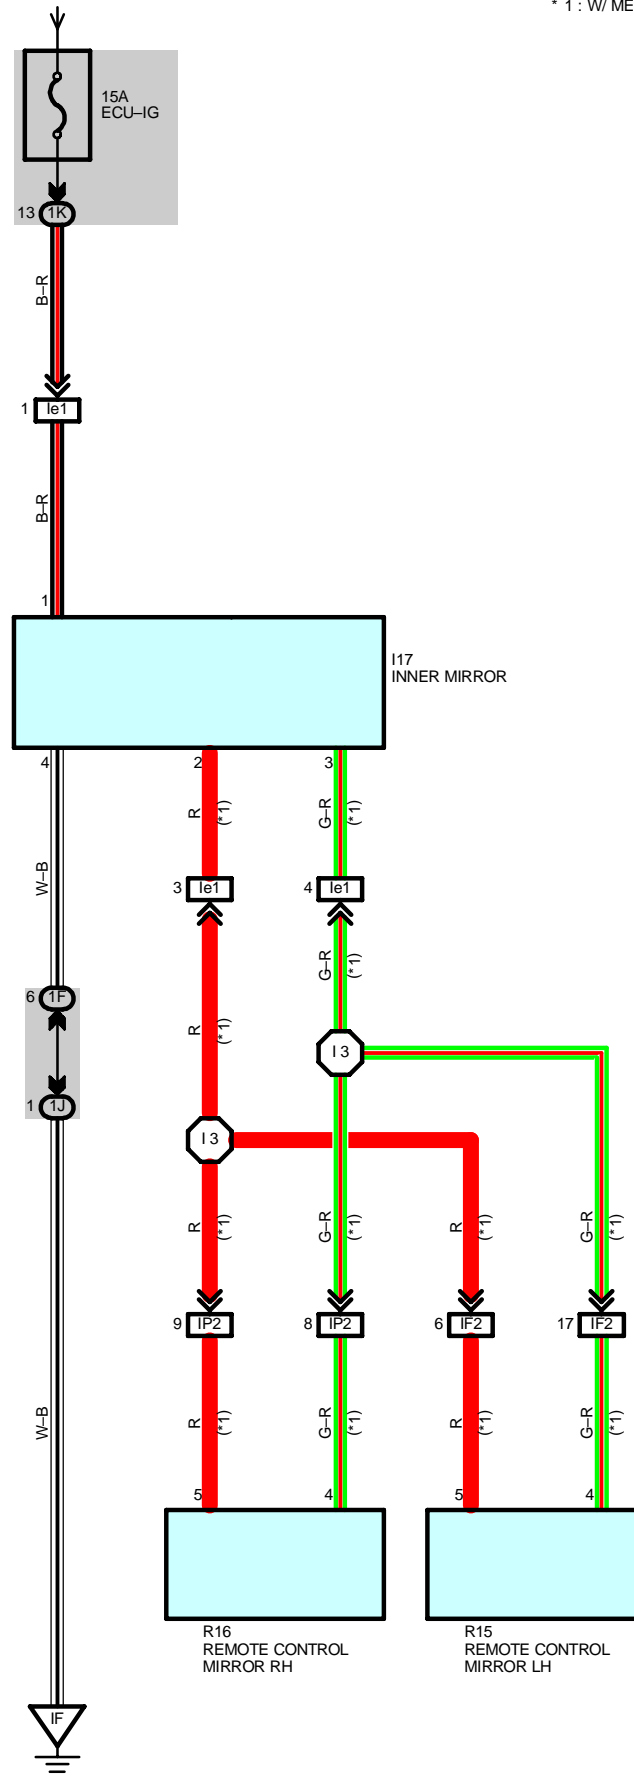

## SERVICE HINTS

### I17 INNER MIRROR

- 1-GROUND: Always approx. 12 volts with the ignition SW at **ON** position  
 4-GROUND: Always continuity

### ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I17	32	R15	33	R16	33

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	20	Roof Wire and J/B No. 1 (Left Kick Panel)
1J	20	Cowl Wire and J/B No. 1 (Left Kick Panel)
1K		

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF2	40	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IP2	42	Front Door RH Wire and Cowl Wire (Right Kick Panel)
Ie1	42	Roof Wire and Cowl Wire (Left Kick Panel)

 
### ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	40	Left Kick Panel

### ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	42	Cowl Wire			

I17



R15, R16

