


SEAT HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 60)

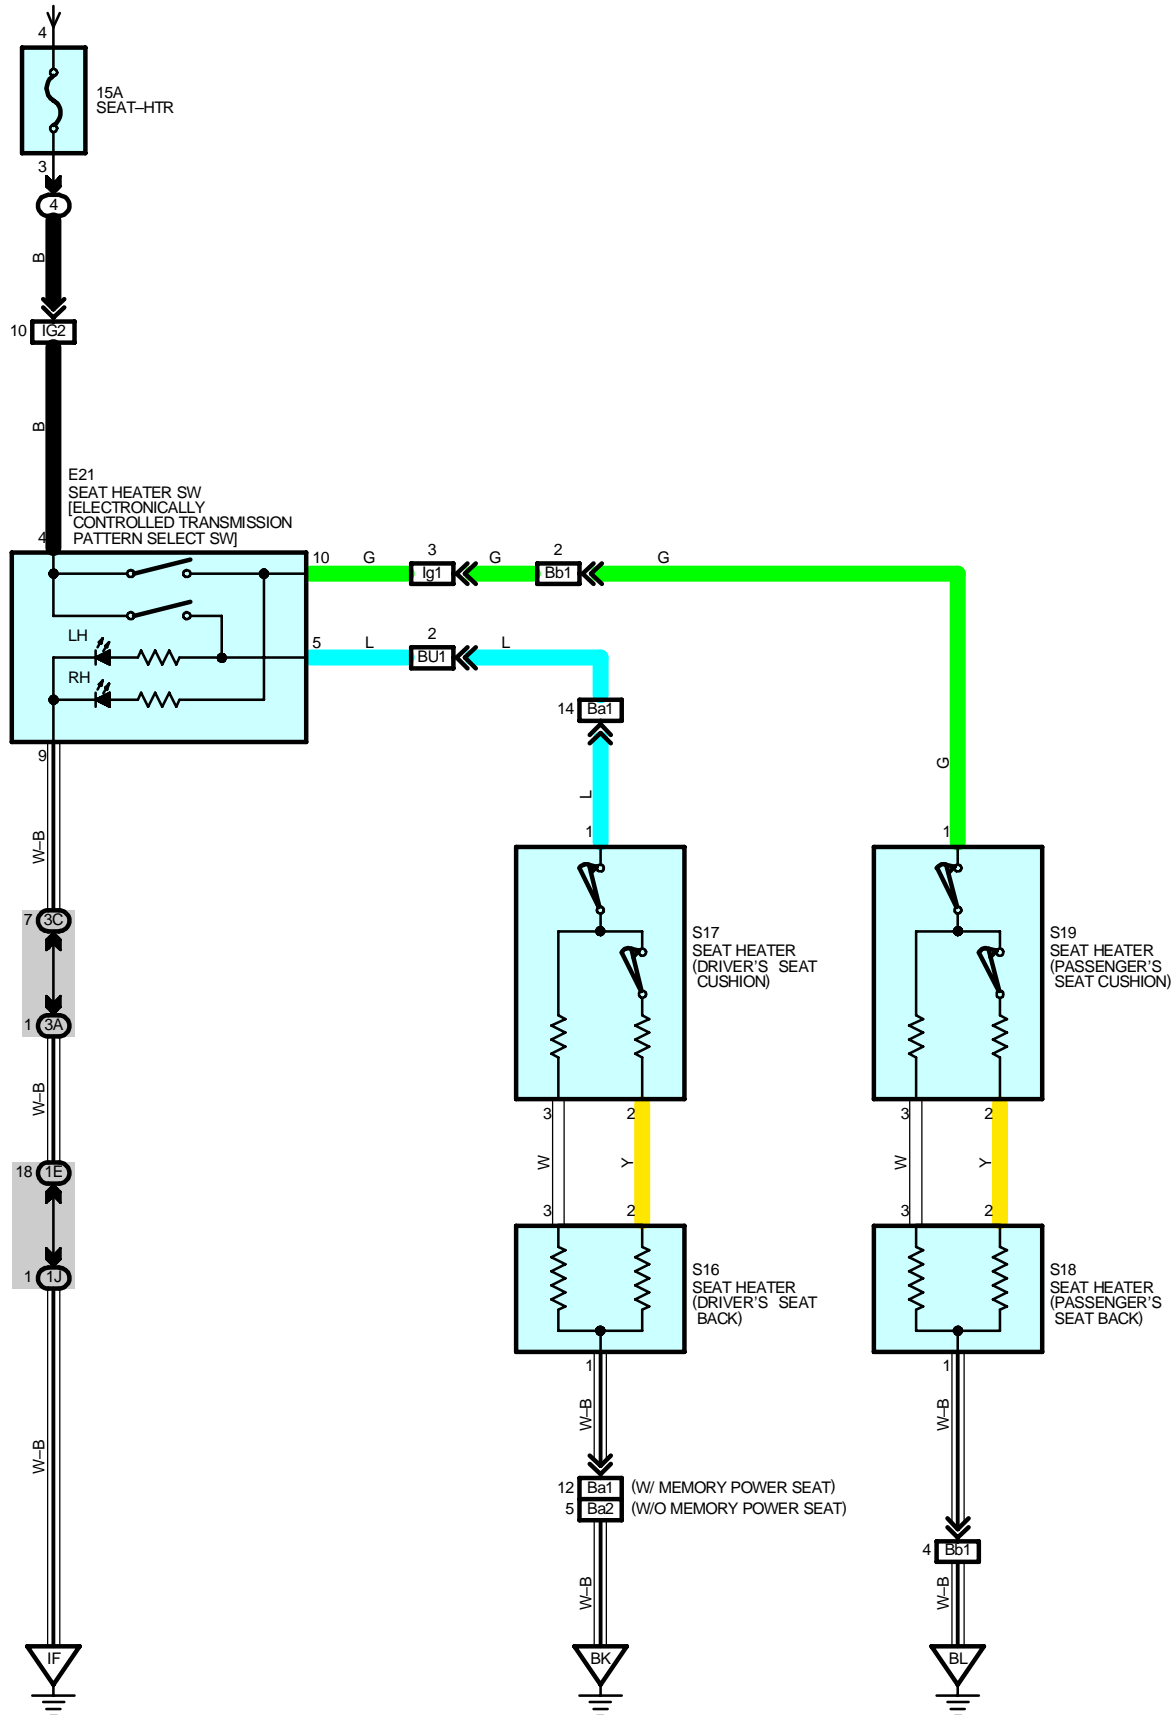

SERVICE HINTS

E21 SEAT HEATER SW [ELECTRONICALLY CONTROLLED TRANSMISSION PATTERN SELECT SW]

4-GROUND : Approx. 12 volts with the ignition SW at **ON** position

9-GROUND : Always continuity

○ : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| E21 | 30 | S17 | 34 | S19 | 34 |
| S16 | 34 | S18 | 34 | | |

○ : RELAY BLOCKS

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|-------------------------------------|
| 4 | 23 | R/B No. 4 (Front Side of J/B No. 1) |

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|--|
| 1E | 20 | Instrument Panel Wire and J/B No. 1 (Left Kick Panel) |
| 1J | 20 | Cowl Wire and J/B No. 1 (Left Kick Panel) |
| 3A | 22 | Instrument Panel Wire and J/B No. 3 (Behind the Instrument Panel Center) |
| 3C | | |


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|---|
| IG2 | 40 | Instrument Panel Wire and Cowl Wire (R/B No. 5) |
| Ig1 | 42 | Instrument Panel Wire and Floor No. 3 Wire (Left Kick Panel) |
| BU1 | 44 | Instrument Panel Wire and Floor Main Wire (Left Kick Panel) |
| Ba1 | 46 | Floor Main Wire and Front Seat LH Wire (Under the Front LH Seat) |
| Ba2 | | |
| Bb1 | 46 | Floor No. 3 Wire and Front Seat RH Wire (Under the Front RH Seat) |

▽ : GROUND POINTS

| Code | See Page | Ground Points Location |
|------|----------|----------------------------|
| IF | 40 | Left Kick Panel |
| BK | 44 | Under the Center Pillar LH |
| BL | 44 | Under the Center Pillar RH |

E21

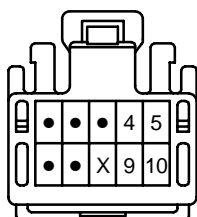

S16, S18



S17, S19 ORANGE

