


## TERMINALS OF ECU

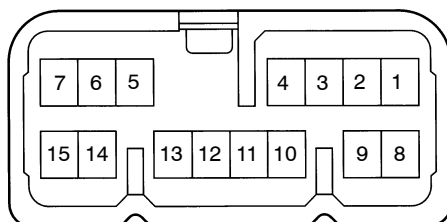

I00227

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
1 – Ground ( GND – Ground )	W – B	Always.	10 – 14 V
2 – 3 ( BZR2 – BZR )	W	Buzzer does not sound.	Below 1 V
		Buzzer sounds.	8 – 10 V
4 – Ground ( TRLY – Ground )	BR	Taillight does not light up.	Below 1 V
		Taillight lights up.	8 – 10 V
5 – Ground ( T – Ground )	L – O	Luggage compartment door key switch "ON".	Below 1 $\Omega$
		Luggage compartment door key switch "OFF".	1M $\Omega$ or higher
7 – Ground ( UL3 – Ground )	G	Door key lock and unlock switch "UNLOCK". (Driver's Door)	Below 1.5 V
		Door key lock and unlock switch "LOCK". (Driver's Door)	8 – 10 V
8 – Ground (+B – Ground )	R	Always.	10 – 14 V
10 – Ground (KSW – Ground )	Y	Key unlock warning switch "ON". (Ignition key is inserted into key cylinder)	Below 1 V
		Key unlock warning switch "OFF". (Ignition key pull out key cylinder)	10 – 14 V
11 – Ground (LSWD – Ground)	L – W	Driver door unlock detection switch "ON".	Below 1 V
		Driver door unlock detection switch "OFF".	10 – 14 V
12 – Ground (LSWP – Ground)	P	Passenger door unlock detection switch "ON".	Below 1 V
		Passenger door unlock detection switch "OFF".	10 – 14 V
13 – Ground (IG – Ground)	Y – G	Turn the ignition switch "OFF" or "ACC".	Below 1 V
		Turn the ignition switch "ON".	10 – 14 V
14 – Ground (CTY – Ground )	G – B	Door courtesy switch "ON".	Below 1 V
		Door courtesy switch "OFF".	10 – 14 V
15 – Ground (L – Ground )	G – Y	Door key lock and unlock switch "LOCK".	Below 1 V
		Door key lock and unlock switch aer not "OFF" or "UNLOCK".	8 – 10 V