



INSTALLATION

1. INSTALL STARTER

- (a) Install the wire clamp to the wire bracket with the bolt.
Torque: 9.81 N·m (98 kgf·cm, 87 in·lbf)
- (b) Connect the starter wire with the nut.
Torque: 9.81 N·m (98 kgf·cm, 87 in·lbf)
- (c) Connect the starter connector.

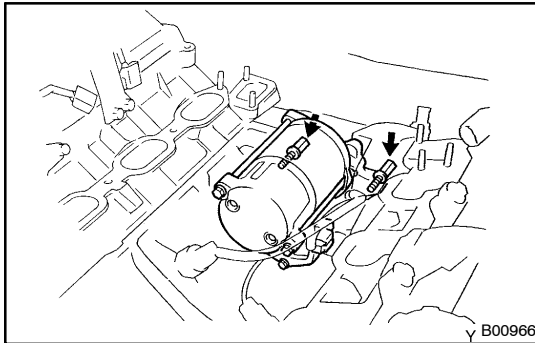

- (d) Install the starter with the 2 bolts.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

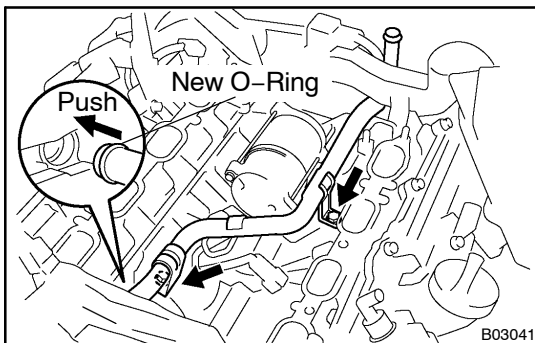

2. INSTALL WATER BYPASS PIPE

- (a) Install the water bypass pipe bracket to the water bypass pipe.
- (b) Install a new O-ring to the water bypass pipe.
- (c) Apply soapy water to the O-ring.
- (d) Push in the water bypass pipe end into the pipe hole of the water pump.
- (e) Install the wire clamp to the bracket on the water bypass pipe.
- (f) Install the water bypass pipe with the 2 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. INSTALL REAR WATER BYPASS JOINT

(See page EM-54)

4. INSTALL INTAKE MANIFOLD ASSEMBLY

(See page EM-54)

5. CONNECT THROTTLE BODY

(See page SF-61)

6. INSTALL INTAKE AIR CONNECTOR

7. CONNECT ACCELERATOR CABLE

8. INSTALL V-BANK COVER