

## SYSTEM OUTLINE

The PPS (Hydraulic reaction type) controls the hydraulic pressure applied to the hydraulic reaction chamber in the gear box control unit using the PPS ECU, to change the steering force and provide optimum steering feeling at any vehicle speed and under any steering conditions.

(PPS operation)

When the ignition SW is turned on the starting current flows from the **ECU-IG** fuse to **TERMINAL 4** of the PPS ECU. The PPS ECU monitors vehicle speed, input signal to **TERMINAL 5** of the ECU. When the vehicle speed is low, the PPS ECU sends a higher-current from **TERMINAL 1** of the ECU to **TERMINAL 1** of the PPS solenoid to **TERMINAL 2** to **TERMINAL 2** of the ECU to **TERMINAL 6** to **GROUND**, increasing the solenoid valve opening angle to provide comfortable steering operation. When the vehicle speed is high, the PPS ECU decreases the solenoid valve opening angle by reducing the current to the valve to provide responsive steering feeling.

## SERVICE HINTS

### P3 PPS SOLENOID

1-2 : Approx. **7.7 Ω (25°C, 77°F)**

### P5 PPS ECU

4-GROUND : Approx. **12 volts** with ignition SW at **ON** position

6-GROUND : Always continuity

## : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
A22		<a href="#">32</a>		C25	D	<a href="#">30</a>		P5		<a href="#">31</a>	
A24		<a href="#">30</a>		P3		<a href="#">27 (1UZ-FE)</a>					
C14	C	<a href="#">30</a>				<a href="#">29 (2JZ-GE)</a>					

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	<a href="#">20</a>	Instrument Panel Wire and J/B No. 1 (Left Kick Panel)
1I	<a href="#">20</a>	Cowl Wire and J/B No. 1 (Left Kick Panel)
3A	<a href="#">22</a>	Instrument Panel Wire and J/B No. 3 (Behind the Instrument Panel Center)
3D		


## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG2	<a href="#">40</a>	Instrument Panel Wire and Cowl Wire (R/B No. 5)
IJ2	<a href="#">40</a>	Engine Wire and Cowl Wire (Right Kick Panel)
IO1	<a href="#">42</a>	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
Ig1	<a href="#">42</a>	Instrument Panel Wire and Floor No. 3 Wire (Right Kick Panel)


## : GROUND POINTS

Code	See Page	Ground Points Location
IH	<a href="#">40</a>	Under the Ashtray LH
IJ	<a href="#">40</a>	Right Kick Panel


(w/ Traction Control) A22

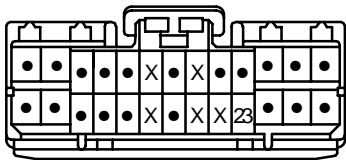


(w/o Traction Control) A24

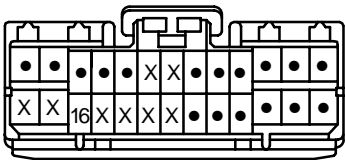


(1UZ-FE) C14 (C)

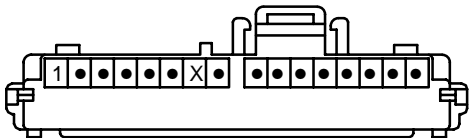

(2JZ-GE) C14 (C)

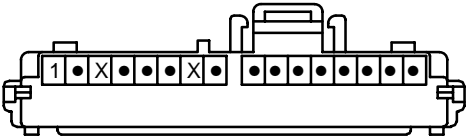

C25 (D) ORANGE

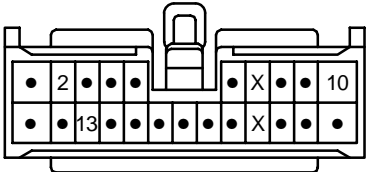

P3 GRAY



P5 BLUE



