

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	1. Starter 2. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit	DI-813 DI-318 DI-283
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-283
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-315 DI-283 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-315 DI-283
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-315 DI-283
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-836 DI-318
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-836 DI-283
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-283
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-318 DI-283
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-283 DI-410
Surging (Poor driveability)	1. Fuel pump control circuit	DI-283
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-813 DI-283
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. Engine control module (ECM)	DI-836 IN-19