


# ELECTRIC TENSION REDUCER

FROM POWER SOURCE SYSTEM (SEE PAGE 60)

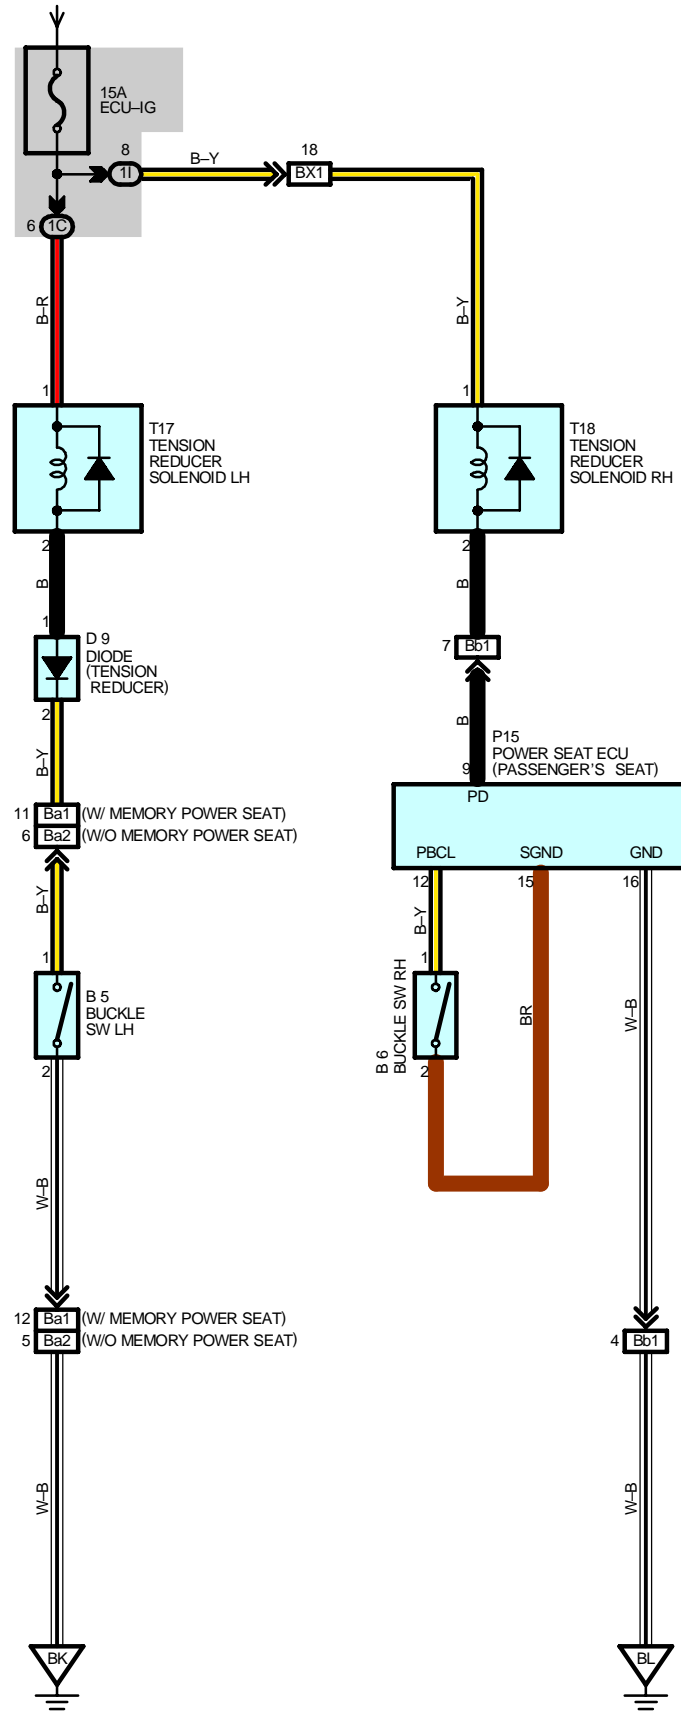

## SERVICE HINTS

### B5 BUCKLE SW LH

1-2 : Closed with driver's seat belt in use

### B6 BUCKLE SW RH

1-2 : Closed with passenger's seat belt in use

### T17, T18 TENSION REDUCER SOLENOID LH, RH

1-GROUND : Approx. 12 volts with ignition SW at **ON** position



### : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B5	34	D9	30	T17	33
B6	34	P15	34	T18	33



### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	20	Floor Main Wire and J/B No. 1 (Left Kick Panel)
1I	20	Cowl Wire and J/B No. 1 (Left Kick Panel)



### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BX1	44	Floor No. 3 Wire and Cowl Wire (Right Kick Panel)
Ba1	46	Floor Main Wire and Front Seat LH Wire (Under the Front LH Seat)
Ba2		
Bb1	46	Floor No. 3 Wire and Front Seat RH Wire (Under the Front RH Seat)



### : GROUND POINTS

Code	See Page	Ground Points Location
BK	44	Under the Center Pillar LH
BL	44	Under the Center Pillar RH

B5, B6 ORANGE

D9 BLACK

P15

T17, T18

