



## H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.


The next page and following pages show the parts to which each electrical source outputs current.

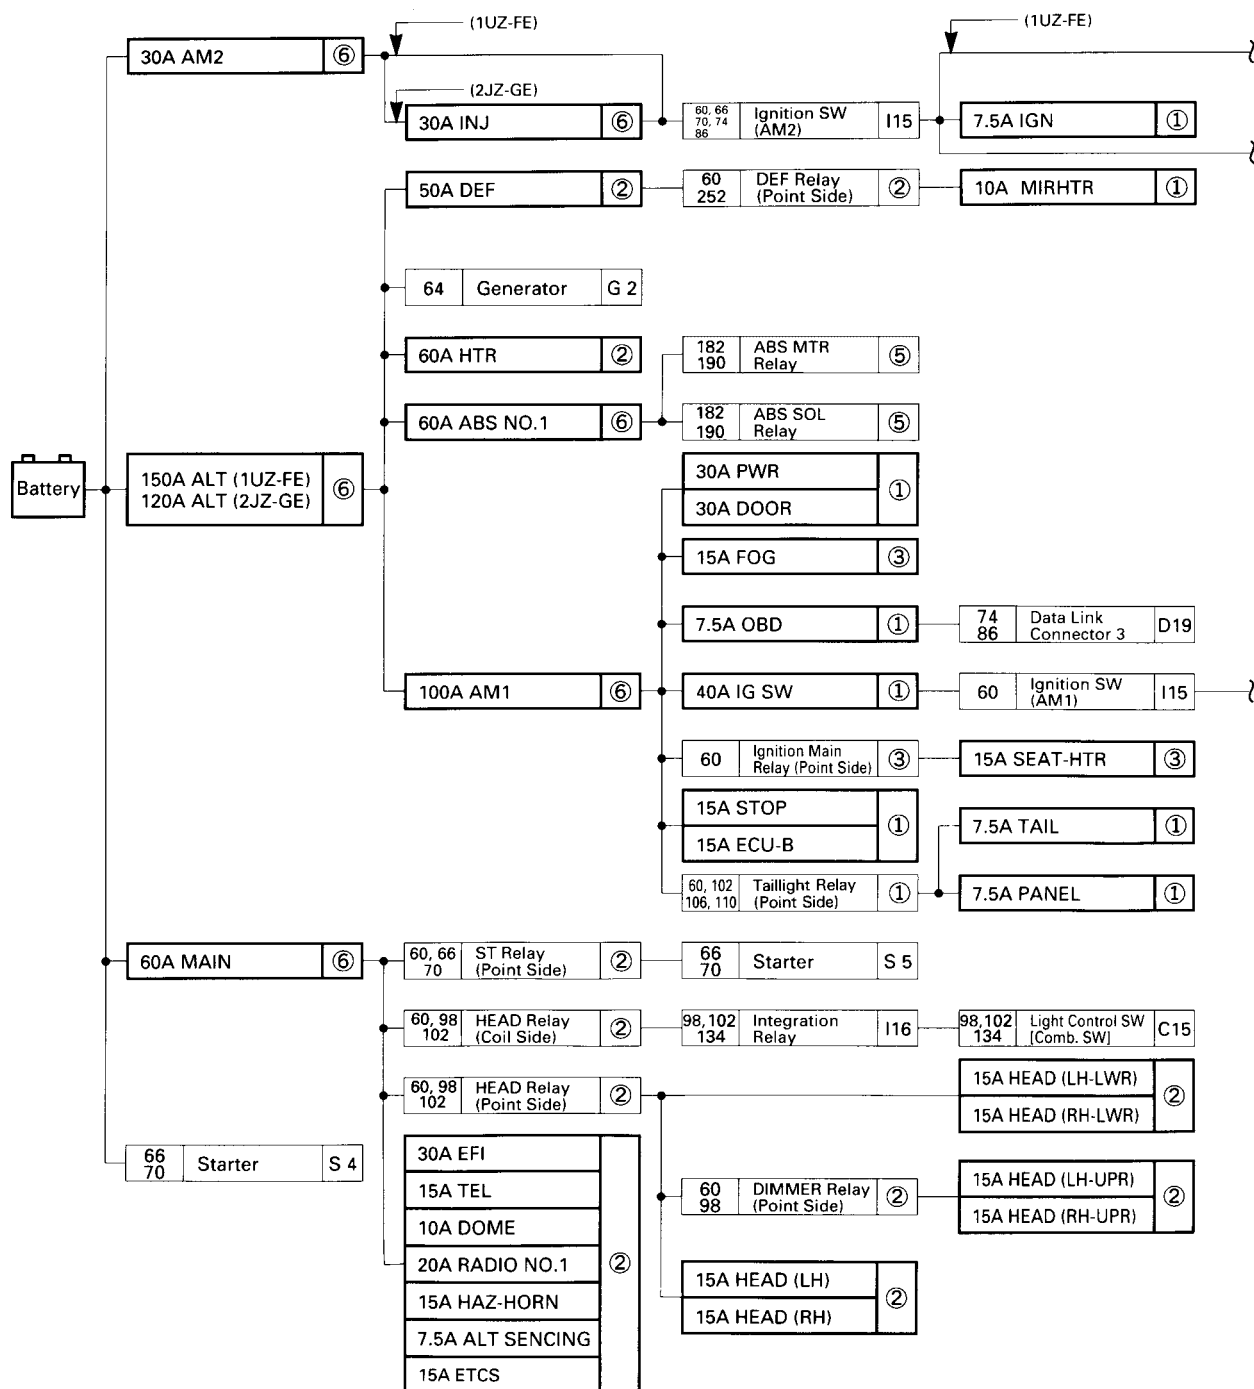

[LOCATION] ① : J/B No.1 (See page 20)      ② : R/B No.2 (See page19)      ③ : R/B No.4 (See page23)

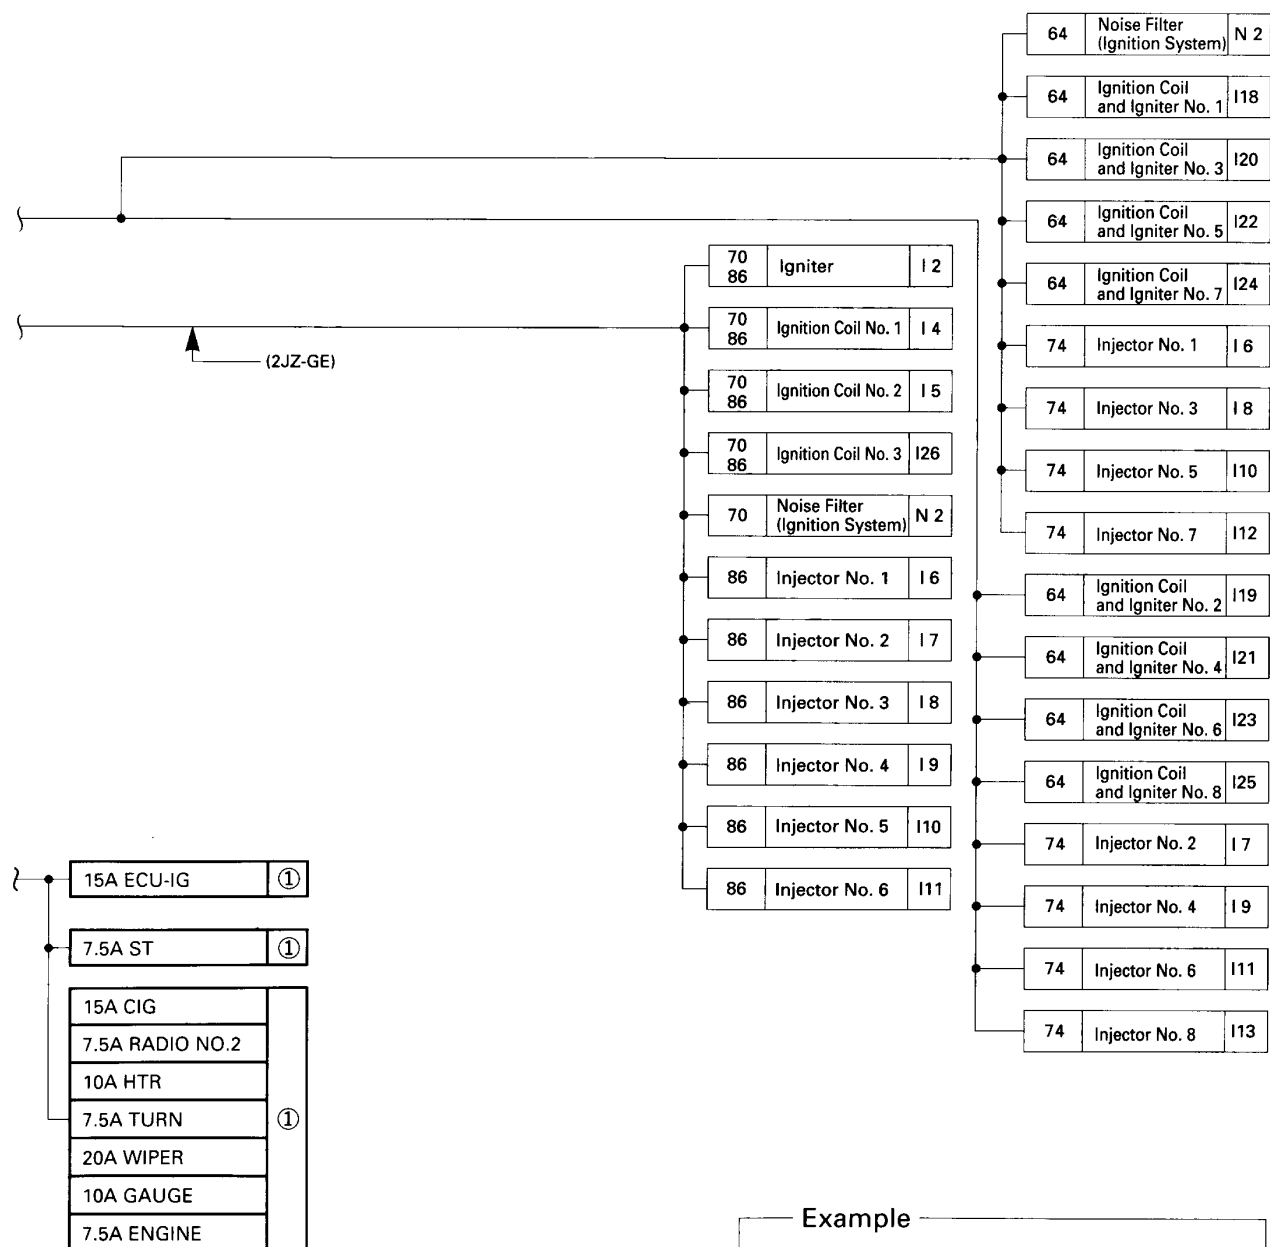

### Example

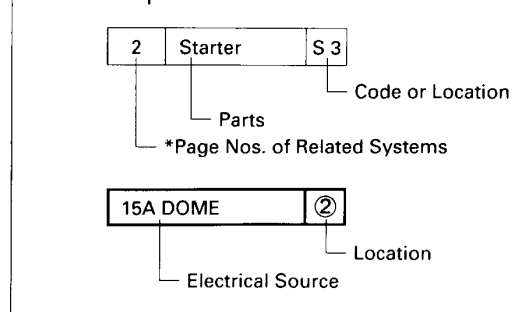

\* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

⑤ : R/B No.6 (See page 24)

⑥ : Fuse Block (F9 See page 19)

# H POWER SOURCE (Current Flow Chart)

\*1 : 1JZ-GE  
\*2 : 1UZ-FE

Location	Parts	Code or Location	*Page Nos. of Related Systems		298	182	190	298	110 252 298	298	110	182	182	182	164 174 190	272 280 286	233	138	290	256	298	110 132	110 290	98 102 164 172 290	98 102
			CB or Fuse		A 3	A 5	A 7	A10	A11	A12	A13	A20	A21	A22	A24	A33	A34	A36	B 2	B 5	B 7	C10	C12	C13	
①	50A DEF																								
	30A DOOR																								
	30A PWR																								
	15A STOP																								
	15A ECU-B																								
	10A MIRHTR																								
	10A HTR																								
	7.5A TURN																								
	20A WIPER																								
	10A GAUGE																								
	15A ECU-IG																								
	7.5A ENGINE																								
	7.5A IGN																								
	15A CIG																								
	7.5A RADIO NO.2																								
	7.5A TAIL																								
	7.5A PANEL																								
	7.5A ST																								
②	15A TEL																								
	10A DOME																								
	20A RADIO NO.1																								
	15A HAZ-HORN																								
	30A EFI																								
	7.5A ALT SENCING																								
	15A HEAD (LH) *1																								
	15A HEAD (RH) *1																								
	15A HEAD (LH-LWR) *2																								
	15A HEAD (RH-LWR) *2																								
	15A HEAD (LH-UPR) *2																								
	15A HEAD (RH-UPR) *2																								
③	60A HTR																								
	15A ETCS																								
	15A SEAT-HTR																								
	15A FOG																								

- There are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

【LOCATION】 ① : J/B No. 1 (See page 20) ② : R/B No. 2 (See page 19) ③ : R/B No. 4 (See page 23)

④ : R/B No. 5 (See page 23)    ⑤ : R/B No. 6 (See page 24)

# H POWER SOURCE (Current Flow Chart)

\*1 : 2JZ-GE  
\*2 : 1UZ-FE

Location	•Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		86	196 202	74, 86 164, 174 196, 202 298	74, 86 164, 174 196, 202	196 202	110 256	106	106	128	128	146	146	74 86	290	126	126	64 290	110	110
									Engine Control Module	Engine Control Module	Engine Control Module	Engine Control Module	Engine Control Module	Electronically Controlled Transmission Pattern Select SW and Seat Heater SW	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Fuel Lid Opener SW	Fuel Lid Opener Solenoid	Fuel Pump ECU	Fuel Sender	Front Fog Light LH	Front Fog Light RH	Generator	Glove Box Light	Glove Box Light SW
									E16	E17	E18	E19	E20	E21	F 5	F 6	F 7	F 8	F10	F13	F15	F16	F19	F20	G 1	G 3	G 4
①	50A	DEF																									
	30A	DOOR																									
	30A	PWR																									
	15A	STOP																									
	15A	ECU-B																									
	10A	MIRHTR																									
	10A	HTR																									
	7.5A	TURN																									
	20A	WIPER																									
	10A	GAUGE																									
	15A	ECU-IG																									
	7.5A	ENGINE																									
	7.5A	IGN																									
	15A	CIG																									
	7.5A	RADIO NO.2																									
	7.5A	TAIL																									
	7.5A	PANEL																									
	7.5A	ST																									
②	15A	TEL																									
	10A	DOME																									
	20A	RADIO NO.1																									
	15A	HAZ-HORN																									
	30A	EFI																									
	7.5A	ALT SENCING																									
	15A	HEAD (LH) *1																									
	15A	HEAD (RH) *1																									
	15A	HEAD (LH-LWR) *2																									
	15A	HEAD (RH-LWR) *2																									
	15A	HEAD (LH-UPR) *2																									
	15A	HEAD (RH-UPR) *2																									
③	60A	HTR																									
	15A	ETCS																									
	15A	SEAT-HTR																									
	15A	FOG																									

\* There are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

【LOCATION】 ① : J/B No. 1 (See page 20) ② : R/B No. 2 (See page 19) ③ : R/B No. 4 (See page 23)

④ : R/B No. 5 (See page 23)    ⑤ : R/B No. 6 (See page 24)

# H POWERSOURCE (Current Flow Chart)

\*1 : 2JZ-GE

\*2 : 1UZ-FE

Location		*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse																															
		242	114	158	158	158	158	208 216	208	208	208	208 256	216	208 216	216	216	216	208	208	208	208	106	106																
		PPS ECU	Personal Light	Power Window Control SW RH	Power Window Master SW LH and Door Lock Control SW LH	Power Window Motor LH	Power Window Motor RH	Power Seat Control SW (Driver's Seat)	Power Seat Control SW (Passenger's Seat)	Power Seat ECU (Driver's Seat)	Power Seat ECU (Passenger's Seat)	Power Seat Motor (Driver's Seat Front Vertical Control)	Power Seat Motor (Driver's Seat Lumbar Support Control)	Power Seat Motor (Driver's Seat Rear Vertical Control)	Power Seat Motor (Driver's Seat Reclining Motor Control)	Power Seat Motor (Driver's Seat Slide Control)	Power Seat Motor (Passenger's Seat Reclining Control)	Power Seat Motor (Passenger's Seat Front Control)	Power Seat Motor (Passenger's Seat Rear Vertical Control)	Power Seat Motor (Passenger's Seat Lumbar Support Control)	Parking Light LH	Parking Light RH																	
		P 5	P 6	P 7	P 8	P 9	P10	P11	P12	P13	P14	P15	P16	P17	P18	P19	P20	P21	P23	P24	P25	P27	P28																
①	50A	DEF																																					
	30A	DOOR							●	●	●		●	●	●	●	●	●	●	●																			
	30A	PWR			●	●	●	●																															
	15A	STOP									●																												
	15A	ECU-B																																					
	10A	MIRHTR																																					
	10A	HTR																																					
	7.5A	TURN																																					
	20A	WIPER																																					
	10A	GAUGE										●																											
	15A	ECU-IG	●									●		●																									
	7.5A	ENGINE																																					
	7.5A	IGN																																					
	15A	CIG																																					
	7.5A	RADIO NO.2																																					
	7.5A	TAIL																				●	●																
	7.5A	PANEL																																					
	7.5A	ST																																					
②	15A	TEL		●									●																										
	10A	DOME										●	●																										
	20A	RADIO NO.1																																					
	15A	HAZ-HORN																																					
	30A	EFI																																					
	7.5A	ALT SENCING																																					
	15A	HEAD (LH) *1																																					
	15A	HEAD (RH) *1																																					
	15A	HEAD (LH-LWR) *2																																					
	15A	HEAD (RH-LWR) *2																																					
	15A	HEAD (LH-UPR) *2																																					
	15A	HEAD (RH-UPR) *2																																					
	60A	HTR																																					
	15A	ETCS																																					
③	15A	SEAT-HTR																																					
	15A	FOG																																					

- There are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : J/B No. 1 (See page 20) ② : R/B No. 2 (See page 19) ③ : R/B No. 4 (See page 23)

④ : R/B No. 5 (See page 23)    ⑤ : R/B No. 6 (See page 24)



# H POWER SOURCE (Current Flow Chart)

\*1 : 2JZ-GE  
\*2 : 1UZ-FE

Location	•Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		146	154	158	258	218	218	110	290	276	256	208	74	110	74	298	114	114	74	74	272	264	290	264	154	280	114							
									Thft Deterrent and Door Lock Control ECU	Tilt and Power Telescopic ECU	Trip SW and Theft Deterrent Indicator Light	Telephone Transceiver and Speaker Relay	Tension Reducer Solenoid LH	Tension Reducer Solenoid RH	Transmission Control SW	Transponder key Amplifier	VSV(EVAP)	VSV(Water Valve)	Vanity Light LH	Vanity Light RH	VSV (Vapor Pressure Sensor)	VSV(ACIS)	Washer Level SW	Washer Motor	Water Temp. Sender	Wiper Motor	Wireless Door Lock Control ECU	Woofer Speaker Amplifier	Integration Relay												
									T 8	T 9	T10	T14	T15	T17	T18	T21	T22	V 5	V 8	V 9	V10	V12	V13	W 1	W 2	W 3	W 4	W 6	W 8	①											
①	50A	DEF																																							
	30A	DOOR																																							
	30A	PWR		●																																					
	15A	STOP																																							
	15A	ECU-B																																							
	10A	MIRHTR																																							
	10A	HTR																	●																						
	7.5A	TURN																																							
	20A	WIPER																							●																
	10A	GAUGE		●												●								●		●															
	15A	ECU-IG		●				●	●	●														●		●															
	7.5A	ENGINE																																							
	7.5A	IGN																																							
	15A	CIG																																							
	7.5A	RADIO NO.2																														●	●								
	7.5A	TAIL																																							
	7.5A	PANEL											●				●																								
	7.5A	ST		●																																					
②	15A	TEL						●																																	
	10A	DOME		●		●														●	●										●		●								
	20A	RADIO NO.1																																							
	15A	HAZ-HORN																																							
	30A	EFI															●	●				●	●																		
	7.5A	ALT SENCING																																							
	15A	HEAD (LH) *1																																							
	15A	HEAD (RH) *1																																							
	15A	HEAD (LH-LWR) *2																																							
	15A	HEAD (RH-LWR) *2																																							
	15A	HEAD (LH-UPR) *2																																							
	15A	HEAD (RH-UPR) *2																																							
	60A	HTR																																							
	15A	ETCS																																							
③	15A	SEAT-HTR																																							
	15A	FOG																																							

\* There are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : J/B No. 1 (See page 20) ② : R/B No. 2 (See page 19) ③ : R/B No. 4 (See page 23)

146 158 258	298	60 252 298	74, 86 164, 174 196, 202	298	60, 66 70, 146 290	114	144 146	60	128	126	182 190
Power Main Relay	MG CLT Relay	DEF Relay	EFI MAIN Relay	HTR Relay	ST Relay	Diode (Interior Light System)	Horn Relay	Ignition Main Relay	Turn Signal Flasher	Fog Light Relay	ABS SOL Relay
①	②					③			④	⑤	
●		●									
●											
	●	●							●		
●							●				●
					●						
●						●					
			●			●		●			
										●	
									●		
				●							
									●		
									●		

④ : R/B No. 5 (See page 23)    ⑤ : R/B No. 6 (See page 24)