


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[3UZ-FE]

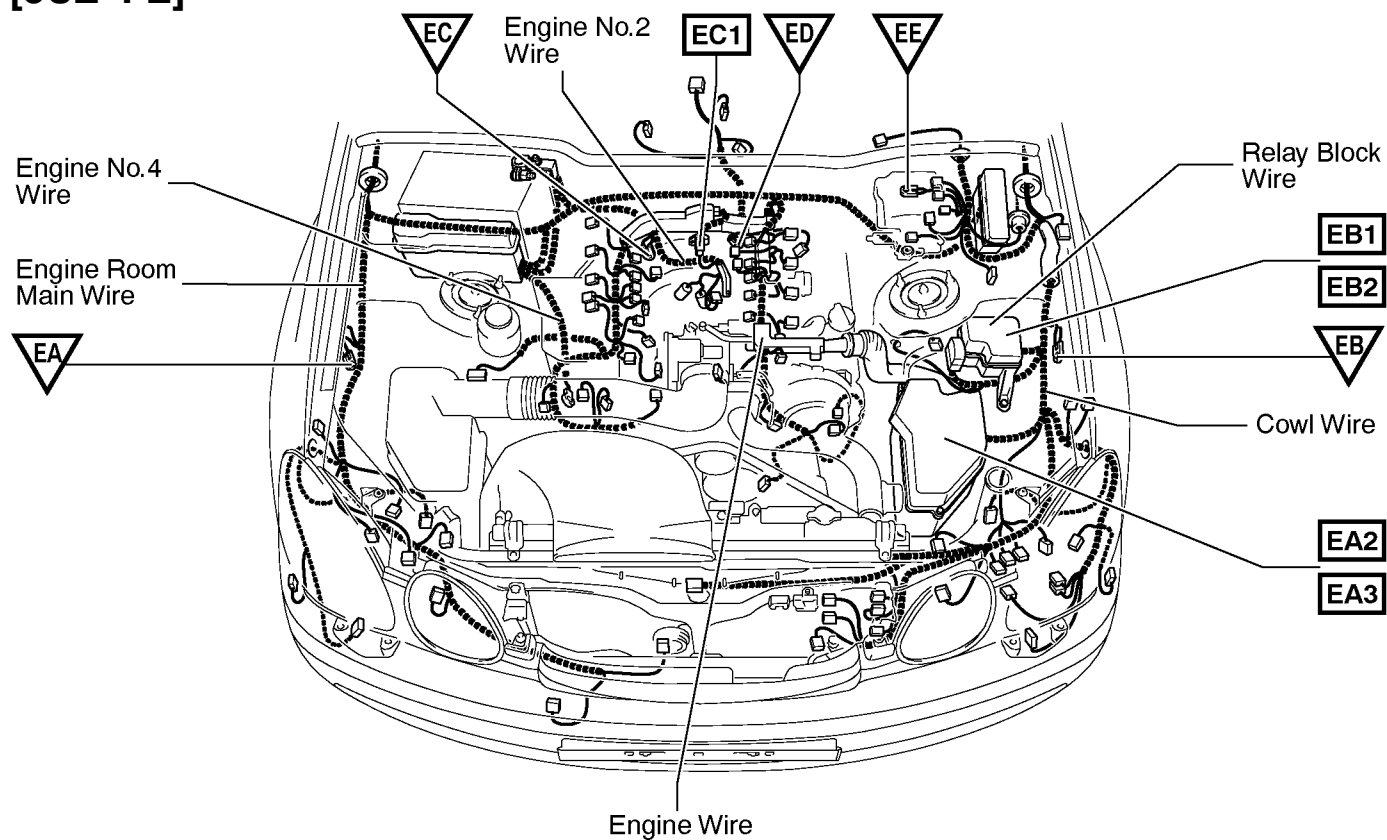

○ : Location of Splice Points

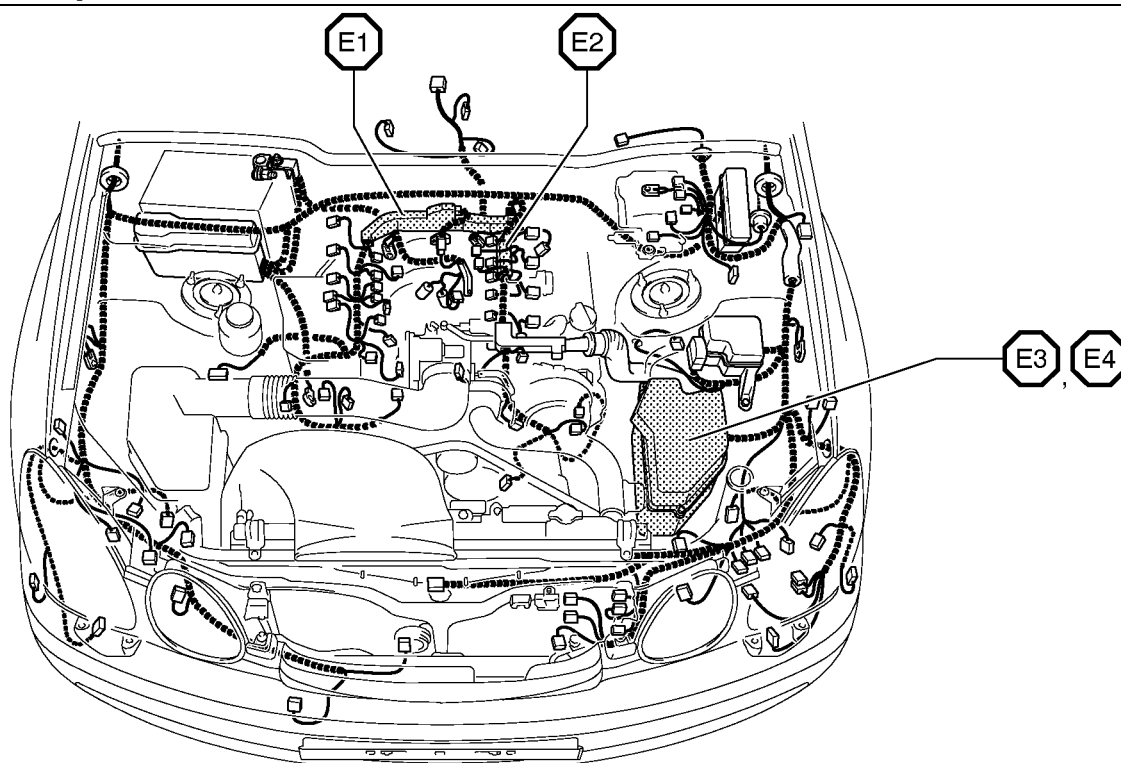

Connector Joining Wire Harness and Wire Harness

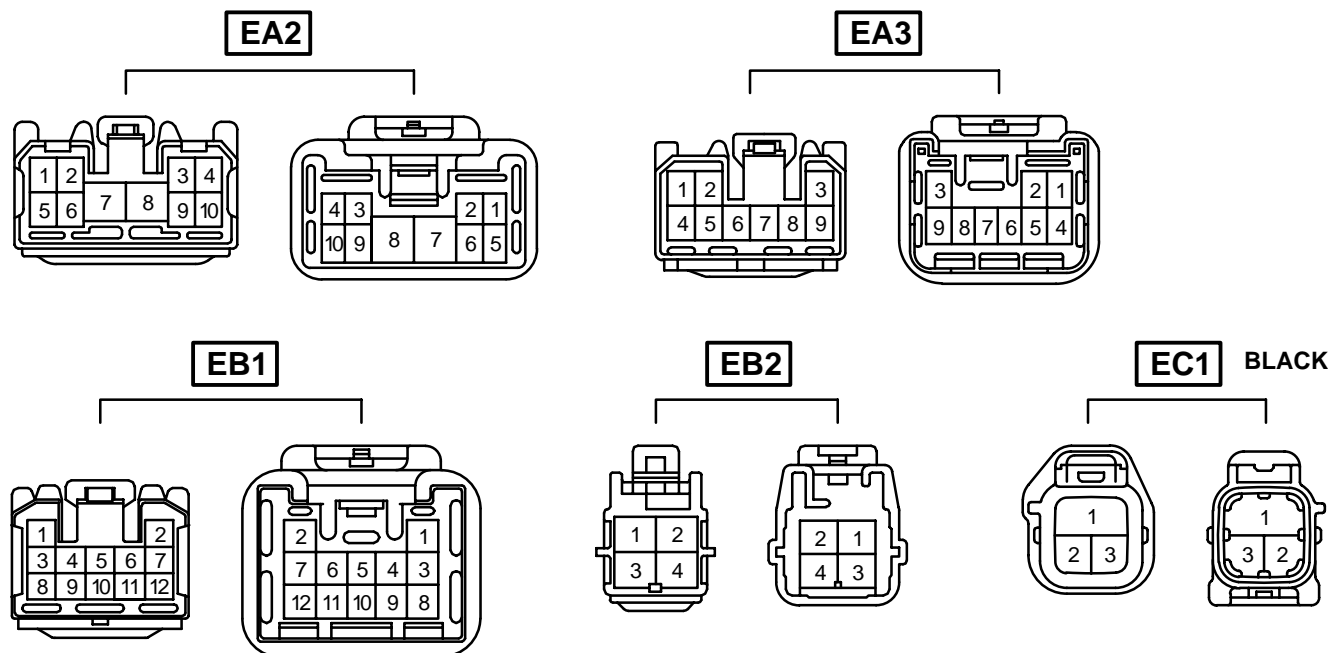


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA2	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	
EC1	Engine No.2 Wire and Engine Wire (Near the Starter)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[2JZ-GE]

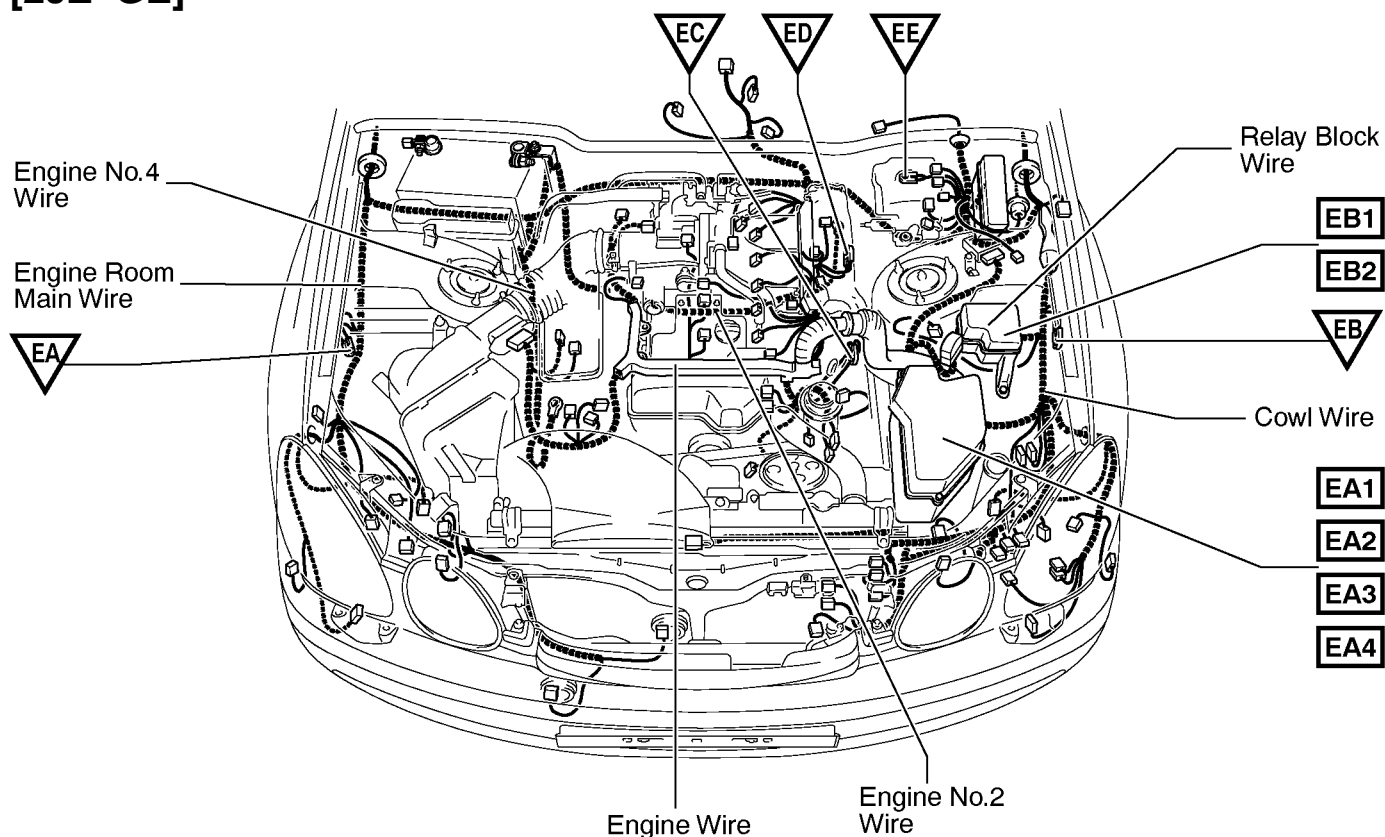

○ : Location of Splice Points

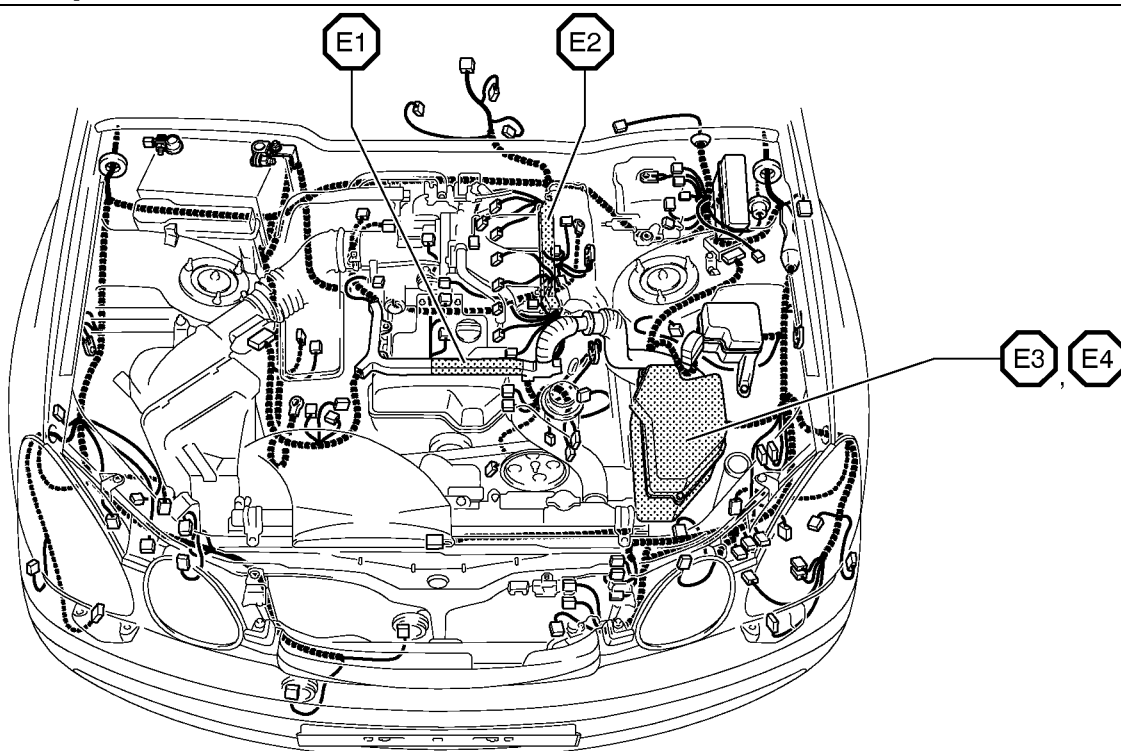


Connector Joining Wire Harness and Wire Harness

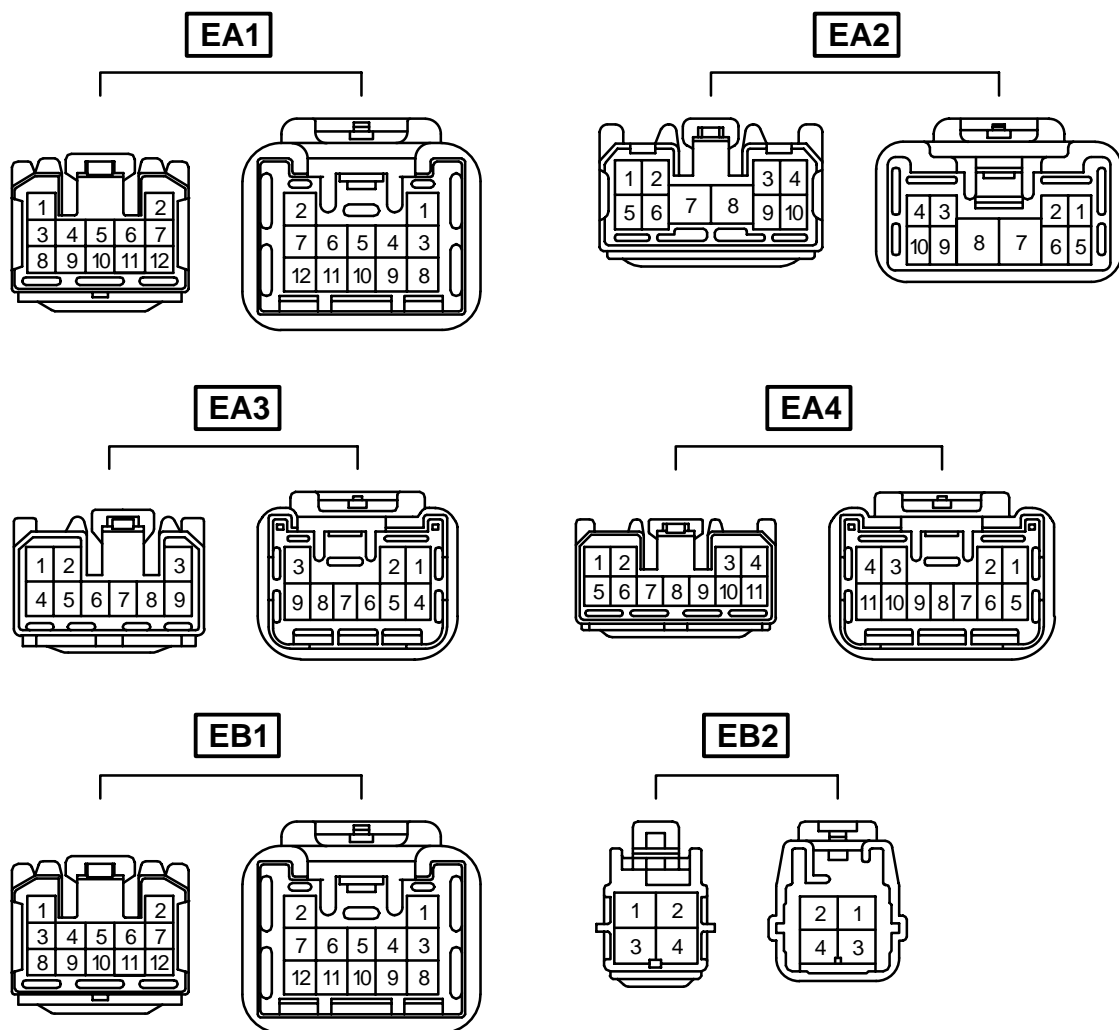


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA2	
EA3	
EA4	
EB1	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
EB2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

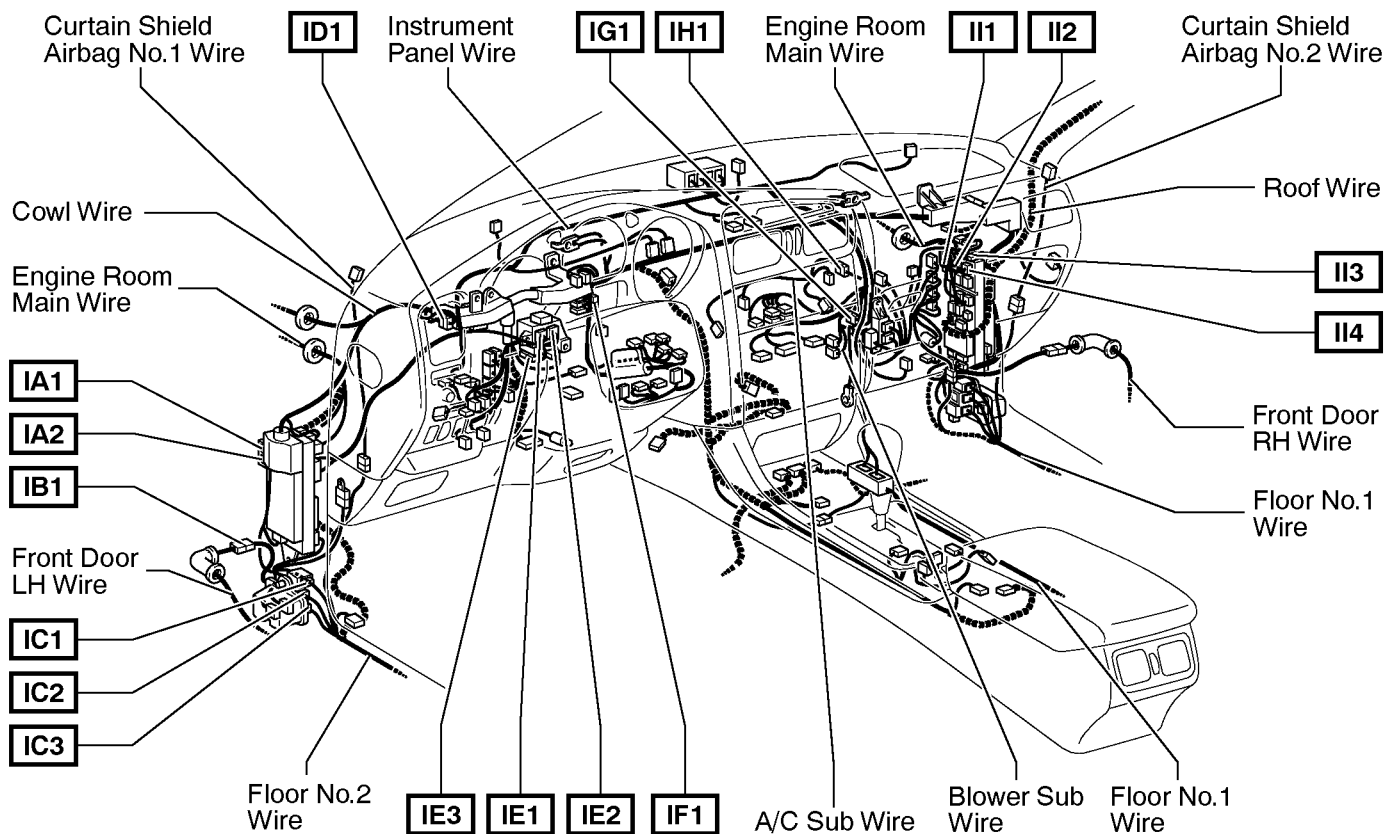

▽ : Location of Ground Points

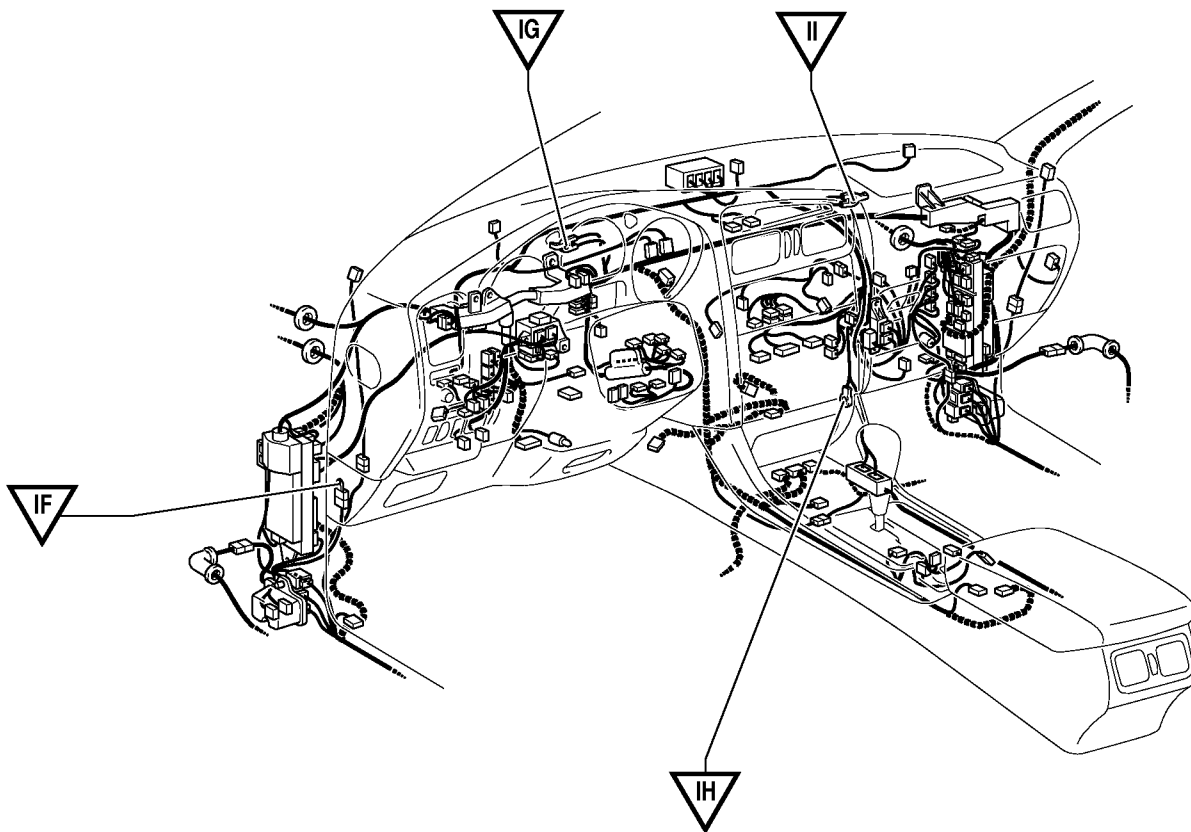


Connector Joining Wire Harness and Wire Harness

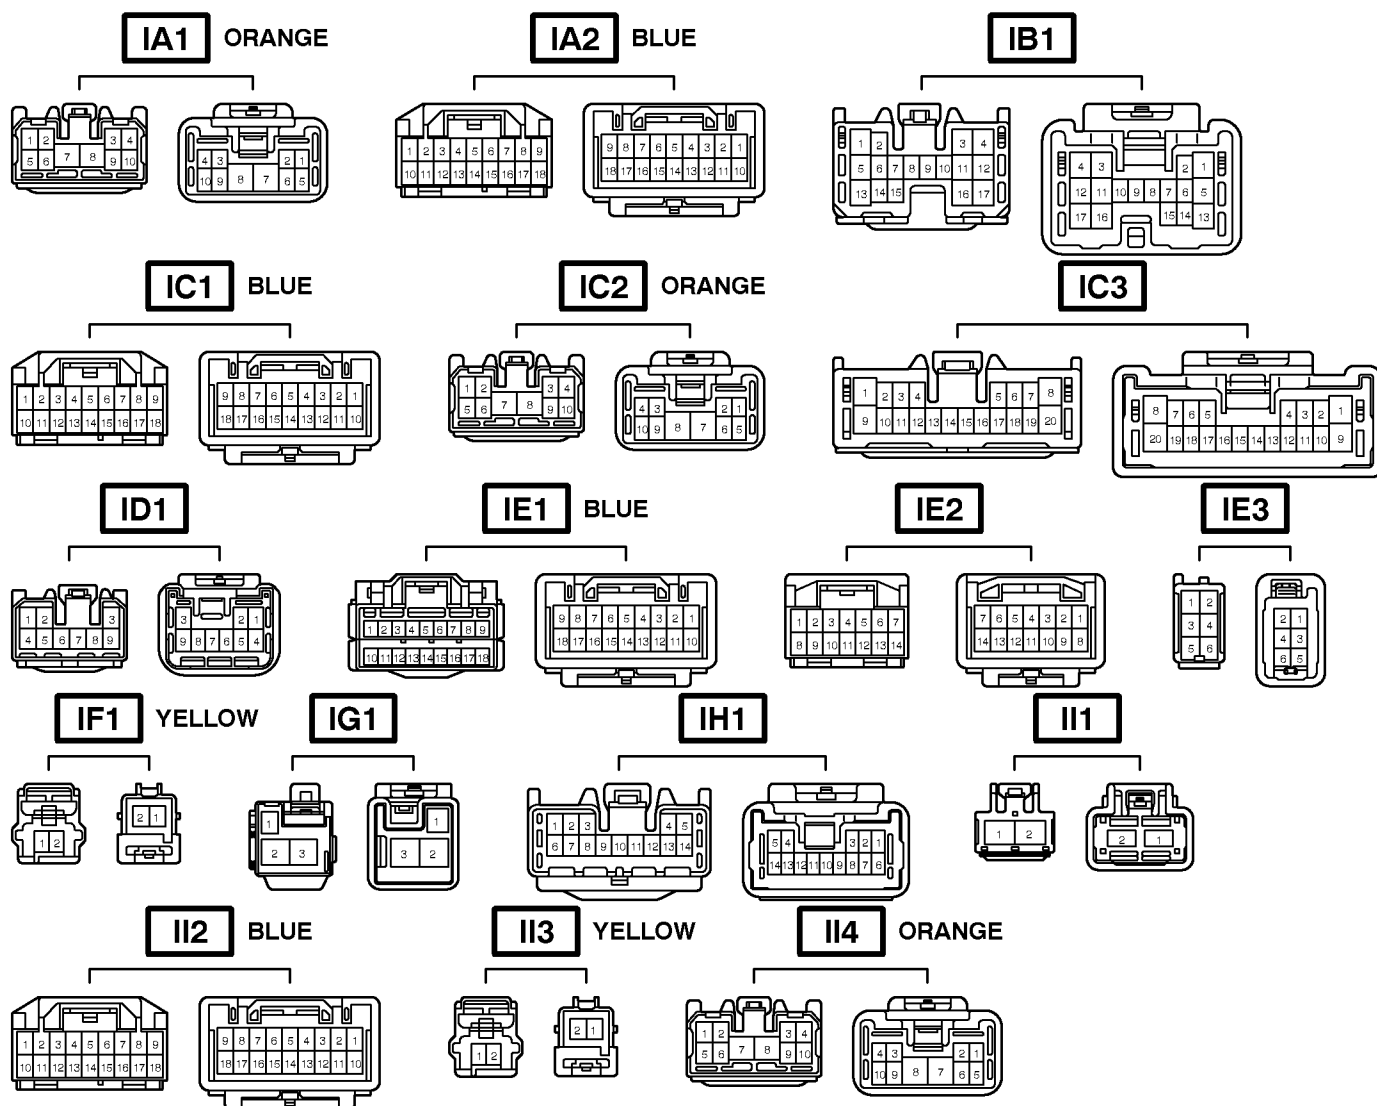


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IA2	
IB1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IC2	
IC3	
ID1	Cowl Wire and Cowl Wire (Left Side of the Instrument Panel Reinforcement)
IE1	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IE2	
IE3	
IF1	Cowl Wire and Cowl Wire (Right Side of the Steering Column)
IG1	Cowl Wire and Blower Sub Wire (Left Side of the Blower Unit)
IH1	Instrument Panel Wire and A/C Sub Wire (Left Side of the Blower Unit)
II1	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
II2	
II3	
II4	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

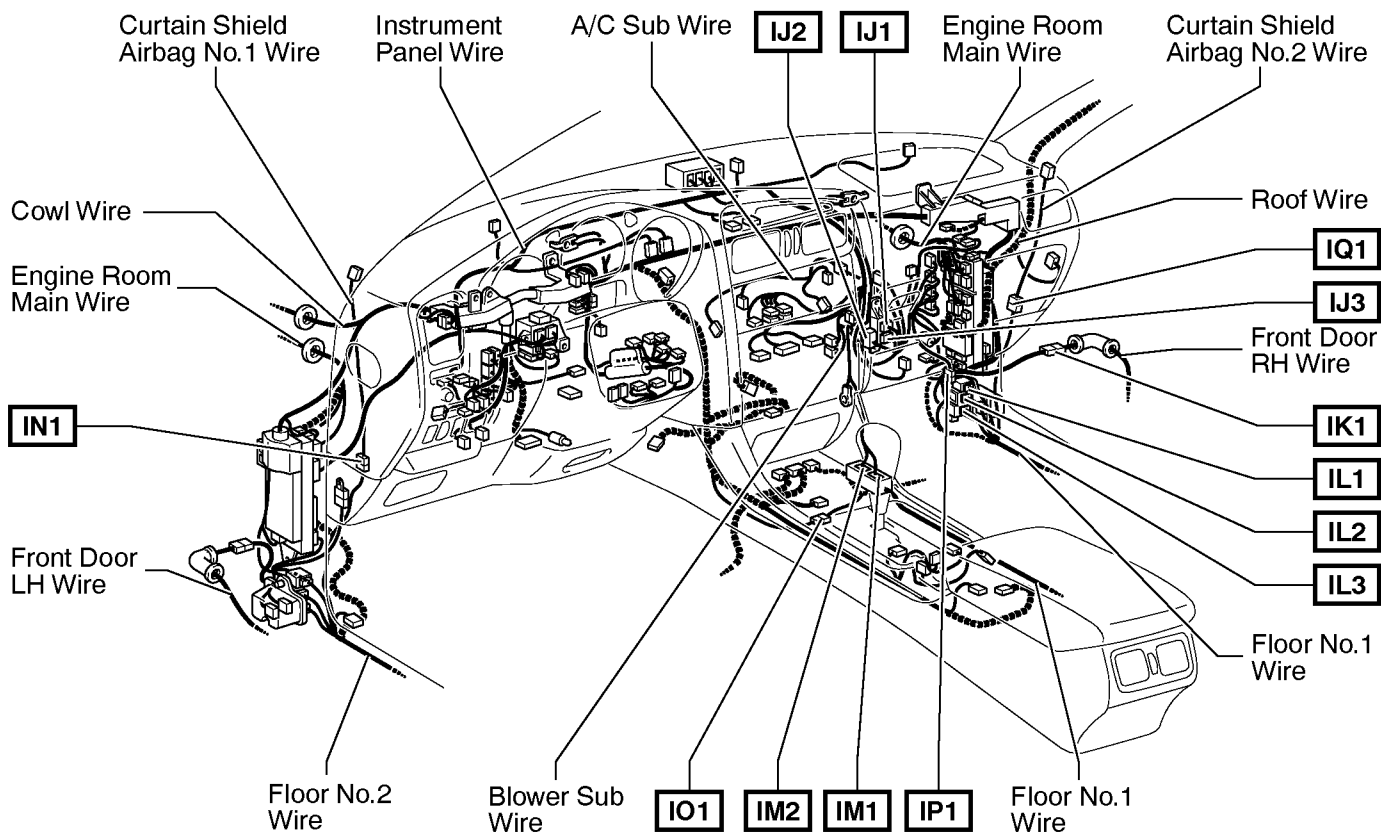

○ : Location of Splice Points

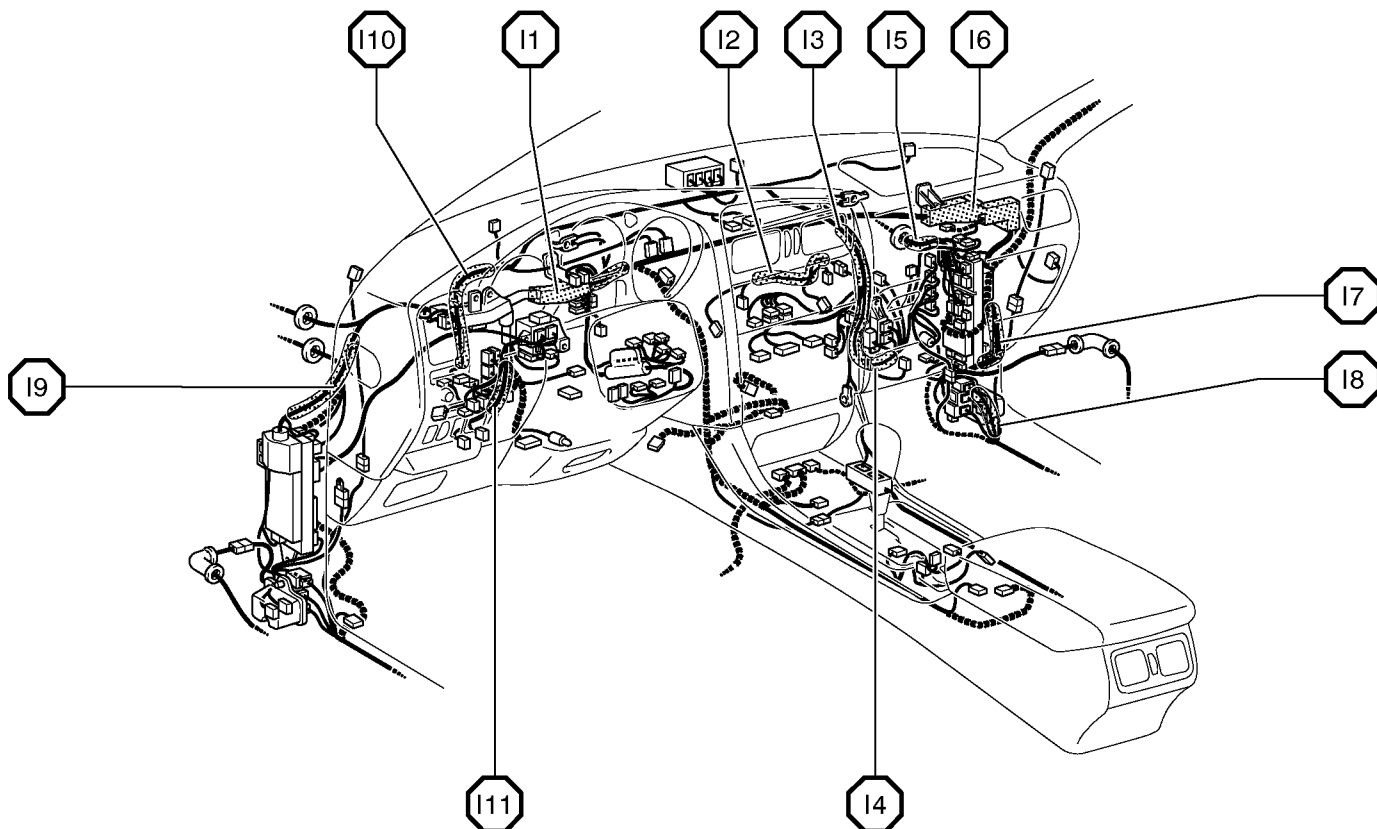

Connector Joining Wire Harness and Wire Harness

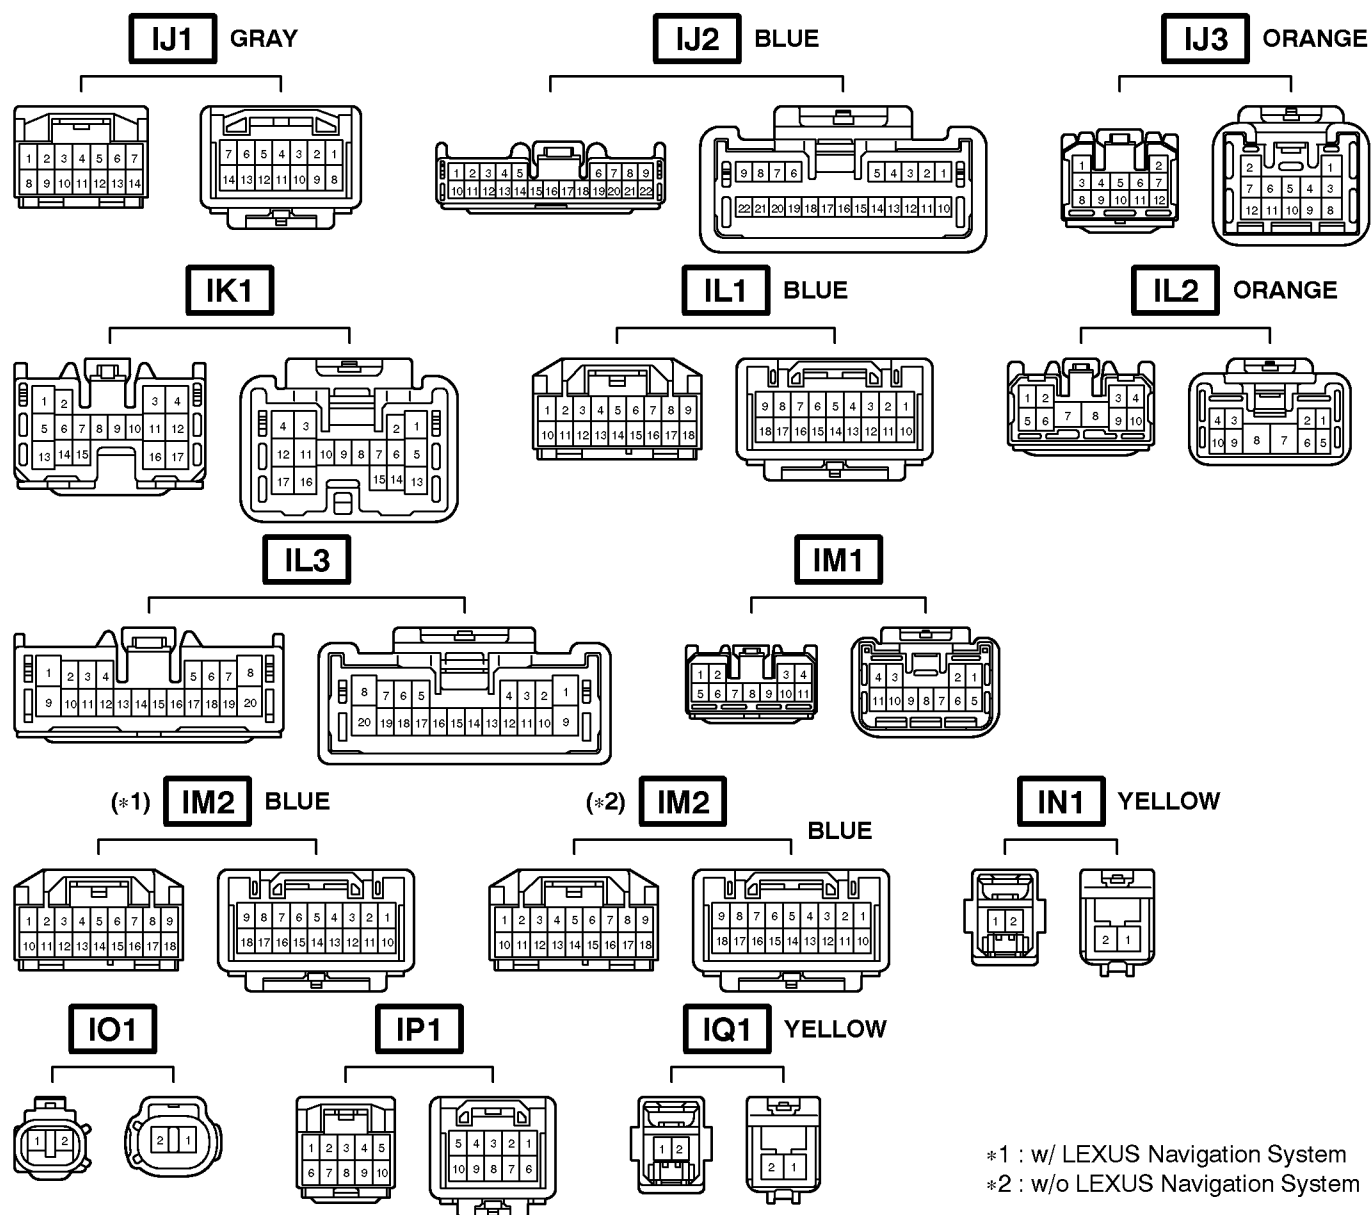


Code	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	
IJ2	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IJ3	
IK1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	
IL2	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL3	
IM1	
IM2	Instrument Panel Wire and Floor No.1 Wire (Front RH Side of the Shift Lever)
IN1	Floor No.2 Wire and Curtain Shield Airbag No.1 Wire (Near the Driver Side J/B)
IO1	Cowl Wire and Floor No.1 Wire (Front LH Side of the Shift Lever)
IP1	Instrument Panel Wire and Floor No.1 Wire (Near the Passenger Side R/B)
IQ1	Floor No.1 Wire and Curtain Shield Airbag No.2 Wire (Near the Passenger Side R/B)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

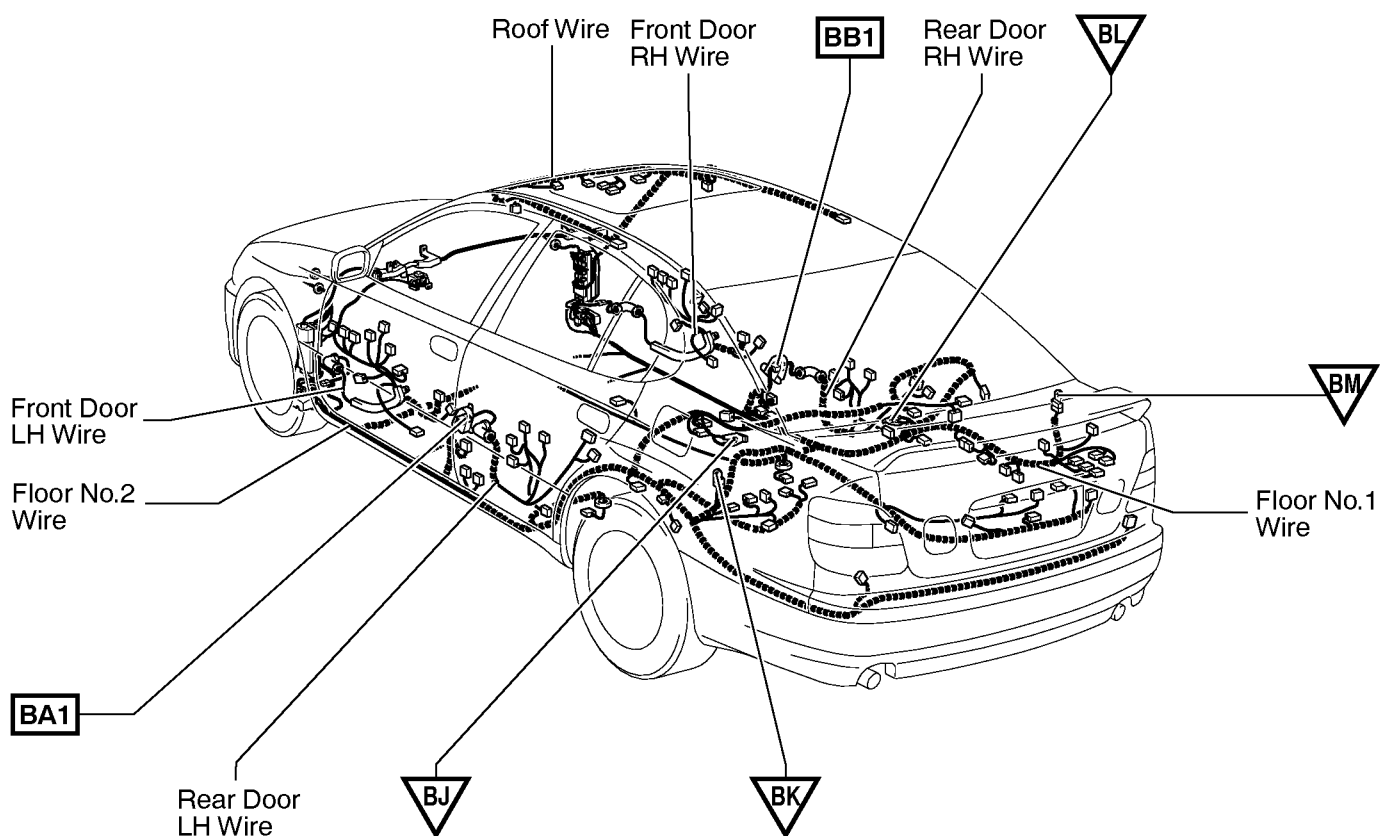

○ : Location of Splice Points

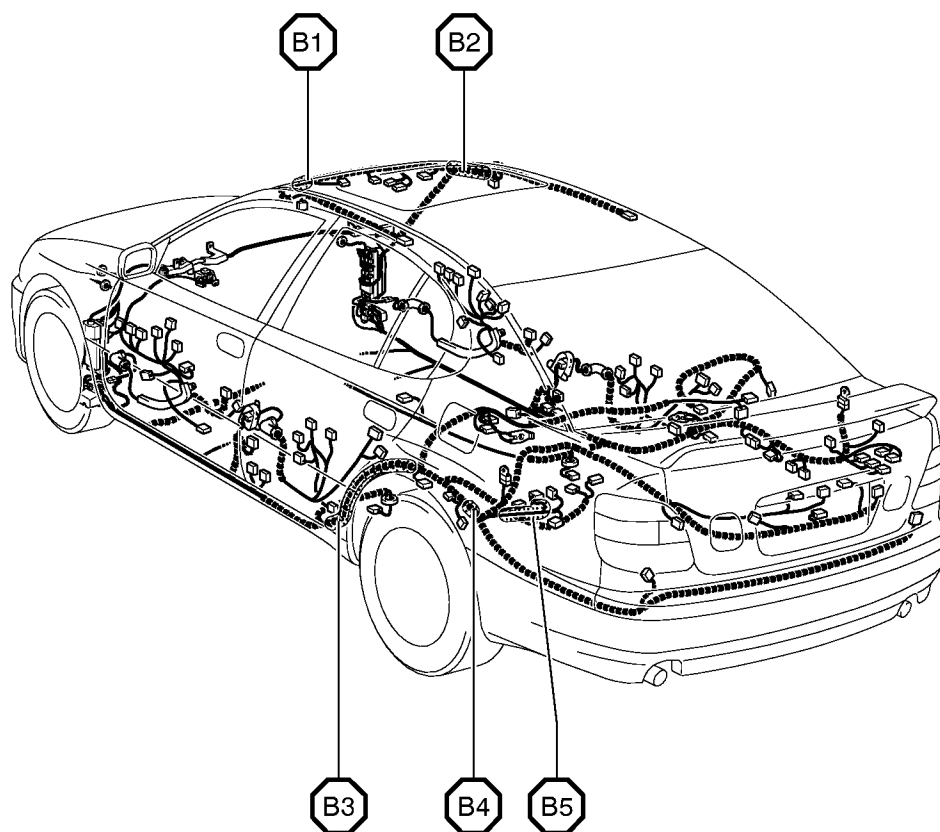


Connector Joining Wire Harness and Wire Harness

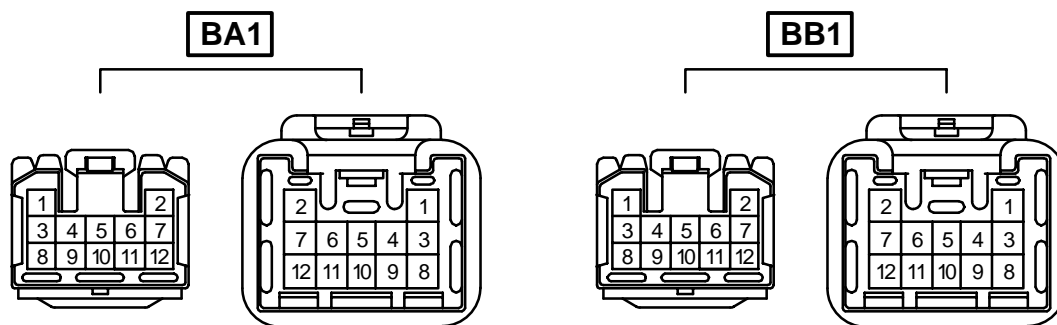


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)
BB1	Rear Door RH Wire and Floor No.1 Wire (Under the Center Pillar RH)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

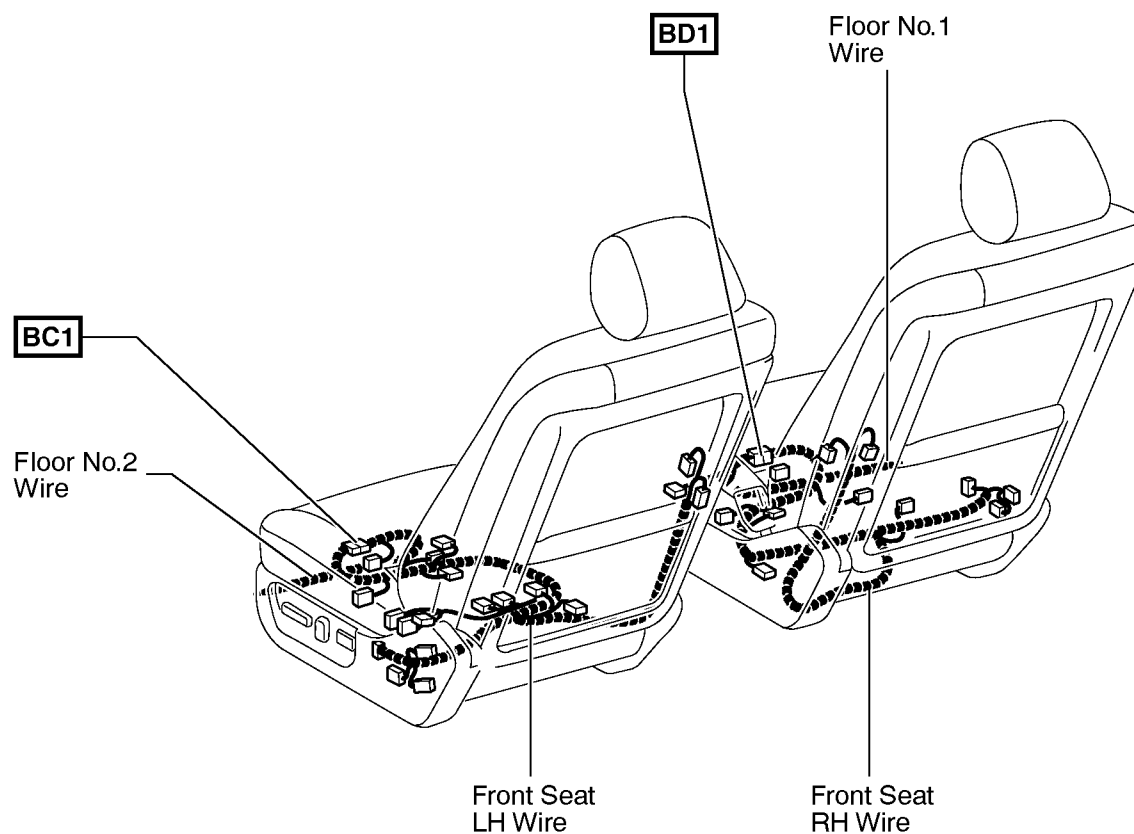

○ : Location of Splice Points

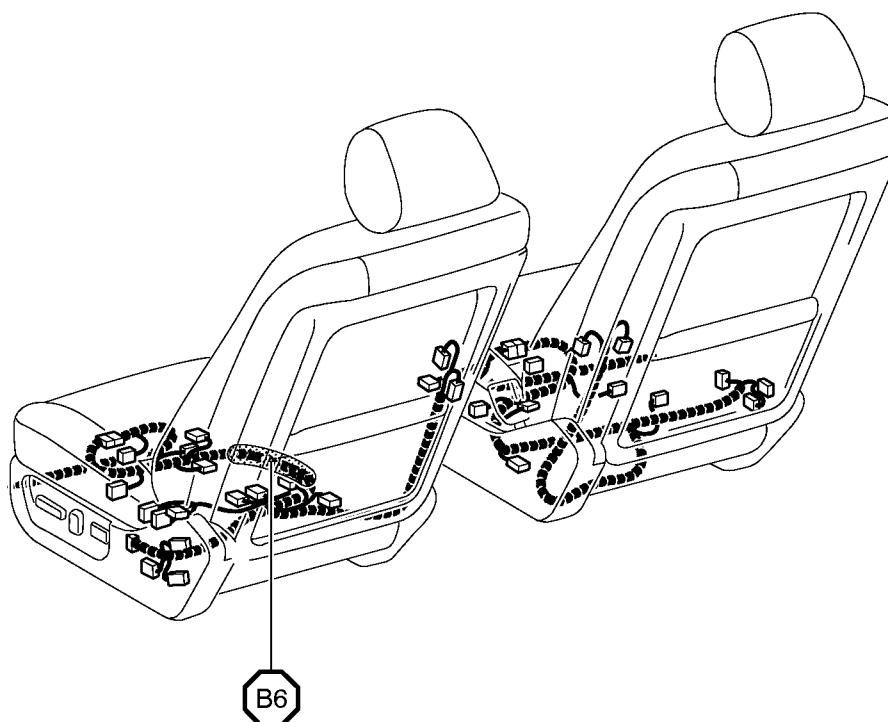

Connector Joining Wire Harness and Wire Harness

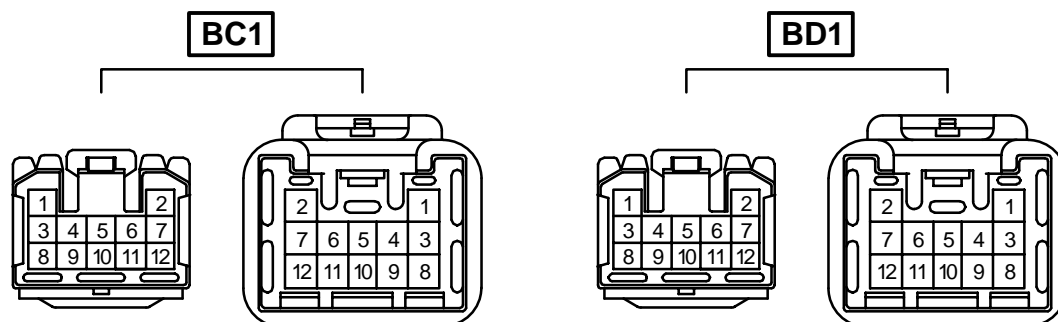

Code	Joining Wire Harness and Wire Harness (Connector Location)
BC1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BD1	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)