

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 8	Buckle SW RH and Seat Belt Warning Occupant Detection Sensor	90980-11559
A 2	A/C Condenser Fan Motor	90980-10928	C 1	Camshaft Position Sensor	90980-10947
A 3	A/C Magnetic Clutch and Lock Sensor	90980-11016	C 2	Camshaft Timing Oil Control Valve	90980-11162
A 4	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	C 3	Camshaft Timing Oil Control Valve LH	
A 5	ABS & TRAC & VSC Actuator	90980-11151	C 4	Camshaft Timing Oil Control Valve RH	
A 6	ABS & TRAC & VSC Actuator	90980-10895	C 5	Crankshaft Position Sensor (3UZ-FE)	
A 7	ABS & TRAC & VSC Actuator	90980-11413		Crankshaft Position Sensor (2JZ-GE)	90980-10947
A 8	ABS Speed Sensor Front LH	90980-11074	C 6	CD Automatic Changer	90980-11923
A 9	ABS Speed Sensor Front RH		C 7	Center Airbag Sensor Assembly	90980-11869
A10	Accelerator Pedal Position Sensor (3UZ-FE)	90980-11144	C 8	Center Airbag Sensor Assembly	90980-11872
	Accelerator Pedal Position Sensor (2JZ-GE)	90980-11150	C 9	Center Airbag Sensor Assembly	90980-11871
A11	Airbag Sensor Front LH	90980-11856	C10	Cigarette Lighter	90980-11606
A12	Airbag Sensor Front RH		C11	Clock	90980-10799
A13	A/C Control Assembly	90980-11392	C12	Combination Meter	90980-11915
A14	A/C Control Assembly	90980-11391	C13	Combination Meter	90980-11914
A15	A/C Room Temp. Sensor	90980-10825	C14	Combination SW	90980-11595
A16	A/C Solar Sensor	90980-11053	C15	Combination SW	90980-11614
A17	A/C Thermistor	90980-10825	C16	Combination SW	90980-11616
A18	A/T Shift Position Illumination	90980-11212	C17	Combination SW	90980-11594
A19	ABS & TRAC & VSC ECU	90980-11935	C18	Cellular Phone (Hand Set)	90980-11912
A20	ABS & TRAC & VSC ECU	90980-11476	C20	Center Speaker	90980-10825
A21	ABS & TRAC & VSC ECU	90980-11637	C21	Curtain Shield Airbag Squib LH	90980-12109
A22	ABS & TRAC & VSC ECU	90980-11638	C22	Curtain Shield Airbag Squib RH	
A23	ABS Deceleration Sensor	90980-11182	D 1	Data Link Connector 1	90980-11195
A24	Air Inlet Control Servo Motor	90980-11165	D 2	Daytime Running Light Relay No.3	90980-10939
A25	Air Mix Control Servo Motor (Driver Side)		D 3	Daytime Running Light Relay No.4	90980-10940
A26	Air Mix Control Servo Motor (Front Passenger Side)		D 4	Data Link Connector 3	90980-11665
A27	Air Vent Mode Control Servo Motor		D 5	Daytime Running Light Relay (Main)	90980-11450
A28	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	D 7	Diode (Daytime Running Light)	90980-11251
A29	Airbag Squib (Steering Wheel Pad)	90980-10850	D 8	Diode (Luggage Compartment Door Open Detection)	90980-11071
A30	Automatic Light Control Sensor	90980-11107	D 9	Door Courtesy Light Front LH	90980-11148
A31	ABS Speed Sensor Rear LH	90980-11060	D10	Door Courtesy Light Front RH	
A32	ABS Speed Sensor Rear RH	90980-11300	D11	Door Courtesy Light Rear LH	
A33	Ashtray Illumination Rear LH	-	D12	Door Courtesy Light Rear RH	90980-11156
A34	Ashtray Illumination Rear RH		D13	Door Courtesy SW Front LH	
A35	Auto Antenna Control Relay and Motor	90980-10799	D14	Door Courtesy SW Front RH	
B 1	Brake Fluid Level Warning SW	90980-11009	D15	Door Courtesy SW Rear LH	
B 2	Blower Motor	90980-10385	D16	Door Courtesy SW Rear RH	90980-11013
B 3	Blower Motor Controller	90980-11579	D17	Door Lock Control SW RH	
B 4	Blower Motor Controller	90980-11667	D18	Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH	
B 5	Body ECU No.1	90980-11877	D19	Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH	90980-11858
B 6	Body ECU No.2				
B 7	Buckle SW LH	90980-11399			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
D20	Door Lock Motor and Door Lock Detection SW Rear LH	90980-11150	F16	Fuel Pump Control ECU	90980-10862
D21	Door Lock Motor and Door Lock Detection SW Rear RH		F17	Fuel Sender (Sub)	90980-11140
D22	Driver Door ECU	90980-11595	G 1	Generator	—
D23	Driver Door ECU	90980-11648	G 2	Generator	90980-11349
D24	Driver Door ECU	90980-11594	G 3	Glove Box Light	90980-11148
D25	Driving Position Memory SW	90980-11165	G 4	Glove Box Light SW	90980-11098
D26	Daytime Running Light Resistor or Short Connector	90980-10928	G 5	Garage Door Opener	90980-11212
E1	Electronically Controlled Transmission Solenoid	90980-11151	G 6	Gateway ECU	90980-11911
E2	Engine Control Module(3UZ-FE)	90980-12144	H 1	Headlight Beam Level Control ECU	90980-10897
	Engine Control Module(2JZ-GE)	90980-11421	H 2	Headlight Beam Level Control ECU	90980-10891
E3	Engine Control Module(3UZ-FE)	90980-12145	H 3	Headlight Beam Level Control Motor	90980-11144
	Engine Control Module(2JZ-GE)	90980-11476	H 4	Headlight Cleaner Control Relay	90980-10939
E4	Engine Control Module(3UZ-FE)	90980-12143	H 5	Headlight Cleaner Motor	90980-11410
	Engine Control Module(2JZ-GE)	90980-11586	H 6	Headlight Control ECU LH	90980-11255
E5	Engine Control Module(3UZ-FE)	90980-12146	H 7	Headlight Control ECU RH	
	Engine Control Module(2JZ-GE)	90980-11637	H 8	Headlight LH (High)	90980-11095
E6	Engine Control Module(3UZ-FE)	90980-12142	H 9	Headlight LH (Low)	90980-11096
	Engine Control Module(2JZ-GE)	90980-11638	H10	Headlight RH (High)	90980-11095
E7	Engine Control Module	90980-11423	H11	Headlight RH (Low)	90980-11096
E8	Engine Coolant Temp. Sensor	90980-10736	H12	Heated Oxygen Sensor (Bank 1 Sensor 1) (3UZ-FE)	90980-10869
E9	Engine Hood Courtesy SW	90980-11189		Heated Oxygen Sensor (Bank 1 Sensor 1) (2JZ-GE)	90980-11028
E10	Engine Oil Level Sensor	90980-11235	H13	Heated Oxygen Sensor (Bank 1 Sensor 2)	
E11	Exhaust Gas Sensor	90980-10831	H14	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
E12	Electronically Controlled Transmission Pattern Select SW	90980-11165	H15	Height Control Sensor (Front)	90980-11929
F 1	Front Fog Light LH	90980-11096	H16	Horn LH	90980-10619
F 2	Front Fog Light RH		H17	Horn RH	
F 3	Front Side Marker Light LH	90980-11162	H18	Hazard SW	90980-10801
F 4	Front Side Marker Light RH		H19	Headlight Cleaner SW	90980-10797
F 5	Front Turn Signal and Parking Light LH	90980-10942	H20	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
F 6	Front Turn Signal and Parking Light RH		H21	Heated Oxygen Sensor (Bank 2 Sensor 2)	
F 7	Front Wiper Motor	90980-11599	H22	Height Control Sensor (Rear)	90980-11298
F 8	Fuel Lid Opener SW	90980-10825	H23	High Mounted Stop Light (Bulb)	90980-10908
F 9	Front Door Speaker LH (MARK LEVINSON)	90980-10795	H24	High Mounted Stop Light (LED)	90980-11368
	Front Door Speaker LH (Except MARK LEVINSON)	90980-10935	I 1	Igniter	90980-11653
F10	Front Door Speaker RH (MARK LEVINSON)	90980-10795	I 2	Ignition Coil and Igniter No.1	90980-11885
	Front Door Speaker RH (Except MARK LEVINSON)	90980-10935	I 3	Ignition Coil and Igniter No.2	
F11	Front Passenger Door ECU	90980-11594	I 4	Ignition Coil and Igniter No.3	
F12	Front Passenger Door ECU	90980-11648	I 5	Ignition Coil and Igniter No.4	
F13	Front Passenger Door ECU	90980-11595	I 6	Ignition Coil and Igniter No.5	
F14	Fuel Lid Opener Motor	90980-11150	I 7	Ignition Coil and Igniter No.6	
F15	Fuel Pump and Sender	90980-11077	I 8	Ignition Coil and Igniter No.7	
			I 9	Ignition Coil and Igniter No.8	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
I10	Ignition Coil No.1	90980-11246	L 1	Luggage Compartment Door Opener SW	90980-10860
I11	Ignition Coil No.2		L 2	License Plate Light LH	90980-11148
I12	Ignition Coil No.3		L 3	License Plate Light RH	
I13	Injector No.1	90980-11153	L 4	Light Failure Sensor	90980-10803
I14	Injector No.2		L 5	Luggage Compartment Door Courtesy SW and Opener Motor	90980-10825
I15	Injector No.3		L 6	Luggage Compartment Door Key Unlock SW	90980-11212
I16	Injector No.4		L 7	Luggage Compartment Light	90980-11148
I17	Injector No.5		L 8	Lumbar Support Control SW (Driver's Seat)	90980-10601
I18	Injector No.6		L 9	Lumbar Support Control SW (Front Passenger's Seat)	
I19	Injector No.7		M 1	Mass Air Flow Meter	90980-11317
I20	Injector No.8		M 2	Master Cylinder Pressure Sensor	90980-11451
I21	Ignition Key Cylinder Light	90980-10906	M 3	Multi-Display	90980-10799
I22	Ignition SW	90980-11615	M 4	Multi-Display	90980-11911
I23	Inner Mirror and Compass	90980-11186	M 5	Moon Roof Control ECU	90980-10997
I24	Interior Light Rear LH	90980-11187	M 6	Moon Roof Control SW	90980-11488
I25	Interior Light Rear RH		M 7	Mirror Retractor SW	90980-11090
J 1	Junction Connector	90980-10803	M 8	Multi-Display	90980-11923
J 2	Junction Connector	90980-11542	N 1	Noise Filter (Ignition)	90980-10843
J 3	Junction Connector	90980-11661	N 2	Navigation ECU	90980-11973
J 4	Junction Connector		N 3	Navigation ECU	90980-11923
J 5	Junction Connector	90980-10803	N 4	Noise Filter (High Mounted Stop Light)	90980-11094
J 6	Junction Connector	90980-10976	N 5	Noise Filter (Rear Window Defogger)	90980-11259
J 7	Junction Connector	90980-11542	N 6	Noise Filter (Stop Light)	90980-10916
J 8	Junction Connector	90980-11398	N 7	Noise Filter (Ignition No.1)	90980-10843
J 9	Junction Connector	90980-11915	N 8	Noise Filter (Ignition No.2)	
J10	Junction Connector	90980-11542	O 1	O/D Direct Clutch Speed Sensor	90980-11156
J11	Junction Connector		O 2	Oil Pressure SW	90980-11363
J12	Junction Connector	90980-10803	P 1	Park/Neutral Position SW	90980-11784
J13	Junction Connector	90980-11915	P 3	PPS Solenoid	90980-11003
J14	Junction Connector		P 4	Parking Brake SW	90980-10871
J15	Junction Connector	90980-11542	P 5	Power Outlet	90980-10760
J16	Junction Connector	90980-11539	P 6	PPS ECU	90980-10797
J17	Junction Connector	90980-10803	P 7	Personal Light	90980-11187
J18	Junction Connector	90980-11542	P 8	Power Window Control SW Front RH	90980-10797
J19	Junction Connector		P 9	Power Window Control SW Rear LH	
J20	Junction Connector	90980-10976	P10	Power Window Control SW Rear RH	
J21	Junction Connector	90980-11398	P11	Power Window Master SW	90980-11469
J22	Junction Connector	90980-10976	P12	Power Window Motor Front LH	90980-11011
J23	Junction Connector	90980-10803	P13	Power Window Motor Front RH	
J24	Junction Connector		P14	Pretensioner LH	90980-11862
J25	Junction Connector		P15	Pretensioner RH	
J26	Junction Connector	90980-11542	P16	Power Seat Control SW (Driver's Seat)	90980-10997
J27	Junction Connector		P17	Power Seat Control SW (Front Passenger's Seat)	
J28	Junction Connector				
K1	Knock Sensor 1	90980-11166			
K2	Knock Sensor 2				

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
P18	Power Seat ECU	90980-11527	S 3	Seat Heater SW	90980-10797
P19	Power Seat ECU	90980-11502	S 4	Shift Lock Control ECU	90980-11450
P20	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825	S 5	Step Light LH (3UZ-FE)	90980-12110
P21	Power Seat Motor (Driver's Seat Lumbar Support Control)			Step Light LH (2JZ-GE)	—
P22	Power Seat Motor (Driver's Seat Rear Vertical Control)		S 6	Step Light RH	90980-12110
P23	Power Seat Motor (Driver's Seat Reclining Control)		S 7	Stereo Component Amplifier	90980-10803
P24	Power Seat Motor (Driver's Seat Slide Control)		S 8	Stereo Component Amplifier	90980-10799
P25	Power Seat Motor (Front Passenger's Seat Front Vertical Control)		S 9	Stereo Component Amplifier	90980-10997
P26	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)		S10	Stereo Component Amplifier	90980-10996
P27	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)		S11	Stop Light SW	90980-11118
P28	Power Seat Motor (Front Passenger's Seat Reclining Control)		S12	Side Airbag Sensor LH	90980-11857
P29	Power Seat Motor (Front Passenger's Seat Slide Control)		S13	Side Airbag Sensor RH	
P30	Power Seat Position Sensor (Driver's Seat Front Vertical Control)	90980-10296	S14	Stereo Component Amplifier	90980-10848
P31	Power Seat Position Sensor (Driver's Seat Rear Vertical Control)	90980-10908	S15	Stereo Component Amplifier	90980-11877
P32	Power Seat Position Sensor (Driver's Seat Reclining Control)		S16	Stereo Component Amplifier	90980-10803
P33	Power Seat Position Sensor (Driver's Seat Slide Control)		S19	Seat Heater (Driver's Seat Back)	90980-10825
P34	Power Steering Oil Pressure Sensor		S20	Seat Heater (Driver's Seat Cushion)	
R 1	Radiator Fan Motor	90980-10928	S21	Seat Heater (Front Passenger's Seat Back)	
R 2	Radio and Player (Except Taiwan)	90980-10803	S22	Seat Heater (Front Passenger's Seat Cushion)	
	Radio and Player (Taiwan)	90980-10996	S23	Side Airbag Squib LH	90980-11864
R 3	Radio and Player (Except Taiwan)	90980-12038	S24	Side Airbag Squib RH	
	Radio and Player (Taiwan)	90980-10997	T 1	Theft Deterrent Horn	90980-10619
R 4	Radio and Player	90980-11165	T 2	Throttle Control Motor (3UZ-FE)	90980-11156
R 6	Remote Control Mirror SW	90980-11657		Throttle Control Motor (2JZ-GE)	90980-10942
R 7	Rheostat	90980-11165	T 3	Throttle Position Sensor	90980-10711
R 8	Rear Combination Light LH	90980-11587	T 4	Telephone Microphone	90980-11920
R 9	Rear Combination Light LH	90980-11399	T 5	Tilt and Telescopic ECU	90980-10801
R10	Rear Combination Light RH	90980-11587	T 6	Transponder Key Amplifier	90980-10789
R11	Rear Combination Light RH	90980-11399	T 7	Turn Signal Flasher	90980-10799
R12	Rear Door LH ECU	90980-11877	T 8	Telephone Transceiver and Speaker Relay	90980-11001
R13	Rear Door RH ECU		T 9	Telephone Transceiver and Speaker Relay	90980-10998
R14	Rear Door Speaker LH	90980-10935	T10	Tension Reducer Solenoid LH	90980-11369
R15	Rear Door Speaker RH		T11	Tension Reducer Solenoid RH	
R16	Remote Control Mirror LH	90980-11590	T12	Telephone Transceiver and Speaker Relay	90980-11912
R17	Remote Control Mirror RH		T13	Telephone Transceiver and Speaker Relay	90980-11910
S 1	Starter	90980-11400	U 1	Unlock Warning SW and Key Interlock Solenoid	90980-10795
S 2	Starter	—	V 1	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
			V 2	VSV (ACIS) (3UZ-FE)	90980-11156
				VSV (ACIS) (2JZ-GE)	90980-11149
			V 3	VSV (EVAP)	90980-11156
			V 4	VVT Sensor LH	90980-10947
			V 5	VVT Sensor RH	
			V 6	VSC Off SW	90980-11494
			V 7	VSC Warning Buzzer	90980-10906

Note: Not all of the above part numbers of the connector are established for the supply.

L PART NUMBER OF CONNECTORS

[illegible]

Note: Not all of the above part numbers of the connector are established for the supply.