


J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

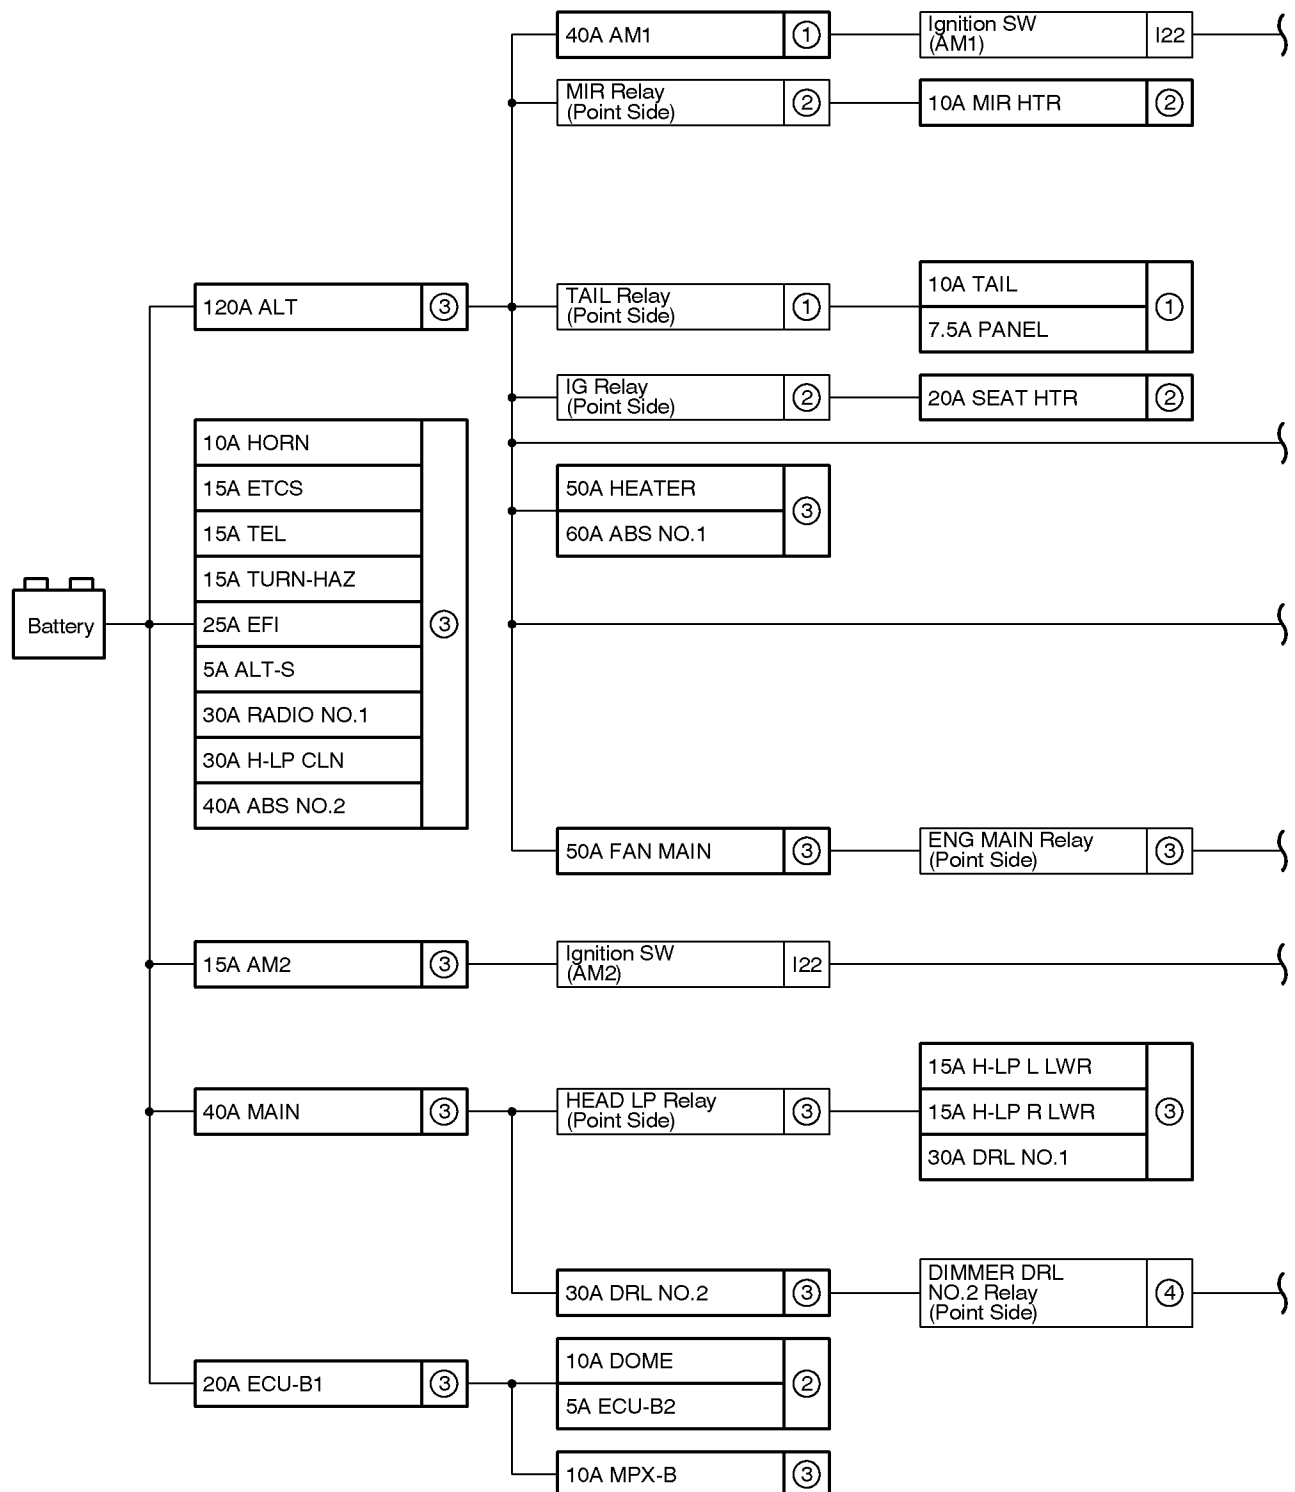

[LOCATION]

① : Driver Side J/B (See page 28)

② : Passenger Side J/B (See page 30)

③ : Engine Room No.1 R/B (See page 24)

④ : Engine Room No.3 R/B (See page 26)

{	15A CIG	①
	15A SRS-ACC	
	15A RADIO NO.2	
	10A HEATER	
	25A WIPER	
	10A GAUGE	
	20A WASHER	
	15A ECU-IG	

{	20A D FR DOOR	①
	20A D RR DOOR	
	30A D P/SEAT	
	15A STOP	
	10A FUEL OPN	
	7.5A OBD	
	5A SRS-B	
	15A FR FOG	

{	30A DEFOG	②
	20A P FR DOOR	
	20A P RR DOOR	
	30A P P/SEAT	
	25A S/ROOF	
	15A TV	

{	30A CDS FAN	③
	30A RDI FAN	

{	5A IGN	①
	5A STARTER	

{	15A H-LP L UPR	④
	15A H-LP R UPR	

Example

Starter	S1
└─ Parts	└─ Code or Location

7.5A DRL	④
└─ Electrical Source	└─ Location

J POWER SOURCE (Current Flow Chart)

Engine Room No.1 R/B (See Page 24)

Fuse		System	Page
5A	ALT-S	Charging	74
10A	HORN	Horn	286
		Multiplex Communication System	138
		Theft Deterrent and Door Lock Control	178
10A	MPX-B	Automatic Light Control	166
		Combination Meter	348
		Interior Light	158
		Key Reminder and Seat Belt Warning	216
		Light Auto Turn Off	170
		Luggage Compartment Door Opener	222
		Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
		Power Tilt and Power Telescopic	312
		Power Window	198
		Remote Control Mirror	210
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
10A	TURN-HAZ	Turn Signal and Hazard Warning Light	124
15A	AM2	Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Starting and Ignition (3UZ-FE)	66
		Starting and Ignition (2JZ-GE)	70
15A	ETCS	Cruise Control (3UZ-FE)	254
		Cruise Control (2JZ-GE)	260
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
15A	H-LP L LWR	Headlight	106
15A	H-LP R LWR	Fog Light	112
		Headlight	106
		Multiplex Communication System	138
15A	TEL	Cellular Mobile Telephone	332
25A	EFI	Cruise Control (3UZ-FE)	254
		Cruise Control (2JZ-GE)	260
		Electronically Controlled Transmission and A/T Indicator (3UZ-FE)	238
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	246
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Engine Immobiliser System (3UZ-FE)	102
		Engine Immobiliser System (2JZ-GE)	104
30A	CDS FAN	Radiator Fan and Condenser Fan	354
30A	DRL NO.1	Headlight	106
30A	DRL NO.2	Headlight	106

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
30A	H-LP CLN	Headlight Cleaner	288
30A	RDI FAN	Radiator Fan and Condenser Fan	354
30A	RADIO NO.1	Radio and Player (Except MARK LEVINSON)	344
		Radio and Player (MARK LEVINSON)	338
40A	ABS NO.2	VSC	266
40A	MAIN	Automatic Light Control	166
		Headlight	106
		Headlight Beam Level Control	292
		Headlight Cleaner	288
		Light Auto Turn Off	170
		Multiplex Communication System	138
		Starting and Ignition (3UZ-FE)	66
		Starting and Ignition (2JZ-GE)	70
		Theft Deterrent and Door Lock Control	178
50A	FAN MAIN	Radiator Fan and Condenser Fan	354
50A	HEATER	Automatic Air Conditioning	358
60A	ABS NO.1	VSC	266
120A	ALT	Automatic Light Control	166
		Charging	74
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Illumination	118
		Light Auto Turn Off	170
		Multiplex Communication System	138
		Radiator Fan and Condenser Fan	354
		Rear Window Defogger and Mirror Heater	324
		Seat Heater	302
		Taillight	114
		Theft Deterrent and Door Lock Control	178

Engine Room No.3 R/B (See Page 26)

Fuse		System	Page
15A	H-LP L UPR	Headlight	106
15A	H-LP R UPR	Headlight	106

Driver Side J/B (See Page 28)

Fuse		System	Page
5A	IGN	Cruise Control (3UZ-FE)	254
		Cruise Control (2JZ-GE)	260
		Electronically Controlled Transmission and A/T Indicator (3UZ-FE)	238
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	246
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Radiator Fan and Condenser Fan	354

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
5A	IGN	SRS	275
		VSC	266
5A	SRS-B	Combination Meter	348
		Headlight	106
		SRS	275
		Taillight	114
5A	STARTER	Electronically Controlled Transmission and A/T Indicator (3UZ-FE)	238
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	246
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Starting and Ignition (3UZ-FE)	66
		Starting and Ignition (2JZ-GE)	70
7.5A	OBD	Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
7.5A	PANEL	Illumination	118
10A	FUEL OPN	Fuel Lid Opener	298
10A	GAUGE	Back-Up Light	128
		Charging	74
		Combination Meter	348
		Cruise Control (3UZ-FE)	254
		Cruise Control (2JZ-GE)	260
		Electronically Controlled Transmission and A/T Indicator (3UZ-FE)	238
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	246
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Headlight	106
		Headlight Beam Level Control	292
		Key Reminder and Seat Belt Warning	216
		LEXUS Navigation System	328
		PPS	318
		Radio and Player (MARK LEVINSON)	338
		Shift Lock	310
		SRS	275
		Stop Light	130
		Taillight	114
		Turn Signal and Hazard Warning Light	124
10A	HEATER	VSC	266
		Wiper and Washer	306
		Automatic Air Conditioning	358
10A	TAIL	Multiplex Communication System	138
		Rear Window Defogger and Mirror Heater	324
10A	TAIL	Taillight	114
15A	CIG	Cigarette Lighter and Power Outlet	282

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	ECU-IG	Auto Antenna	336
		Automatic Glare-Resistant EC Mirror	296
		Automatic Light Control	166
		Cellular Mobile Telephone	332
		Electric Tension Reducer	304
		Headlight Beam Level Control	292
		Interior Light	158
		Key Reminder and Seat Belt Warning	216
		Light Auto Turn Off	170
		Luggage Compartment Door Opener	222
		Moon Roof	320
		Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
		Power Tilt and Power Telescopic	312
		Power Window	198
		PPS	318
		Remote Control Mirror	210
		Seat Heater	302
		Theft Deterrent and Door Lock Control	178
		VSC	266
		Wireless Door Lock Control	188
15A	FR FOG	Fog Light	112
		Multiplex Communication System	138
15A	RADIO NO.2	Auto Antenna	336
		Automatic Air Conditioning	358
		Cellular Mobile Telephone	332
		Clock	284
		Interior Light	158
		Key Reminder and Seat Belt Warning	216
		LEXUS Navigation System	328
		Light Auto Turn Off	170
		Luggage Compartment Door Opener	222
		Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
		Power Tilt and Power Telescopic	312
		Power Window	198
		Radio and Player (Except MARK LEVINSON)	344
		Radio and Player (MARK LEVINSON)	338
		Remote Control Mirror	210
		Shift Lock	310
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
15A	STOP	Cruise Control (3UZ-FE)	254
		Cruise Control (2JZ-GE)	260

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	STOP	Electronically Controlled Transmission and A/T Indicator (3UZ-FE)	238
		Electronically Controlled Transmission and A/T Indicator (2JZ-GE)	246
		Engine Control (3UZ-FE)	76
		Engine Control (2JZ-GE)	90
		Multiplex Communication System	138
		Stop Light	130
		VSC	266
20A	D FR DOOR	Automatic Light Control	166
		Interior Light	158
		Key Reminder and Seat Belt Warning	216
		Light Auto Turn Off	170
		Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
		Power Tilt and Power Telescopic	312
		Power Window	198
		Remote Control Mirror	210
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
20A	D RR DOOR	Interior Light	158
		Light Auto Turn Off	170
		Multiplex Communication System	138
		Power Window	198
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
20A	WASHER	Headlight Cleaner	288
		Wiper and Washer	306
25A	WIPER	Wiper and Washer	306
30A	D P/SEAT	Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
		Power Seat (Driver's Seat w/o Driving Position Memory)	234

Passenger Side J/B (See Page 30)

Fuse		System	Page
5A	ECU-B2	Automatic Air Conditioning	358
		Headlight	106
		Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
10A	DOME	Auto Antenna	336
		Clock	284
		Garage Door Opener	300
		Interior Light	158
		Light Auto Turn Off	170
		Multiplex Communication System	138
		Power Window	198

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
10A	DOME	Radio and Player (Except MARK LEVINSON)	344
		Radio and Player (MARK LEVINSON)	338
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
10A	MIR HTR	Rear Window Defogger and Mirror Heater	324
15A	TV	LEXUS Navigation System	328
20A	P FR DOOR	Interior Light	158
		Key Reminder and Seat Belt Warning	216
		Light Auto Turn Off	170
		Luggage Compartment Door Opener	222
		Multiplex Communication System	138
		Power Seat (Driver's Seat w/ Driving Position Memory)	224
		Power Tilt and Power Telescopic	312
		Power Window	198
		Remote Control Mirror	210
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
20A	P RR DOOR	Interior Light	158
		Light Auto Turn Off	170
		Multiplex Communication System	138
		Power Window	198
		Theft Deterrent and Door Lock Control	178
		Wireless Door Lock Control	188
20A	SEAT HTR	Seat Heater	302
25A	S/ROOF	Moon Roof	320
30A	DEFOG	Rear Window Defogger and Mirror Heater	324
30A	P P/SEAT	Power Seat (Front Passenger's Seat)	236
		Power Tilt and Power Telescopic	312

* These are the page numbers of the first page on which the related system is shown.