



## F RELAY LOCATIONS

### [Engine Compartment]

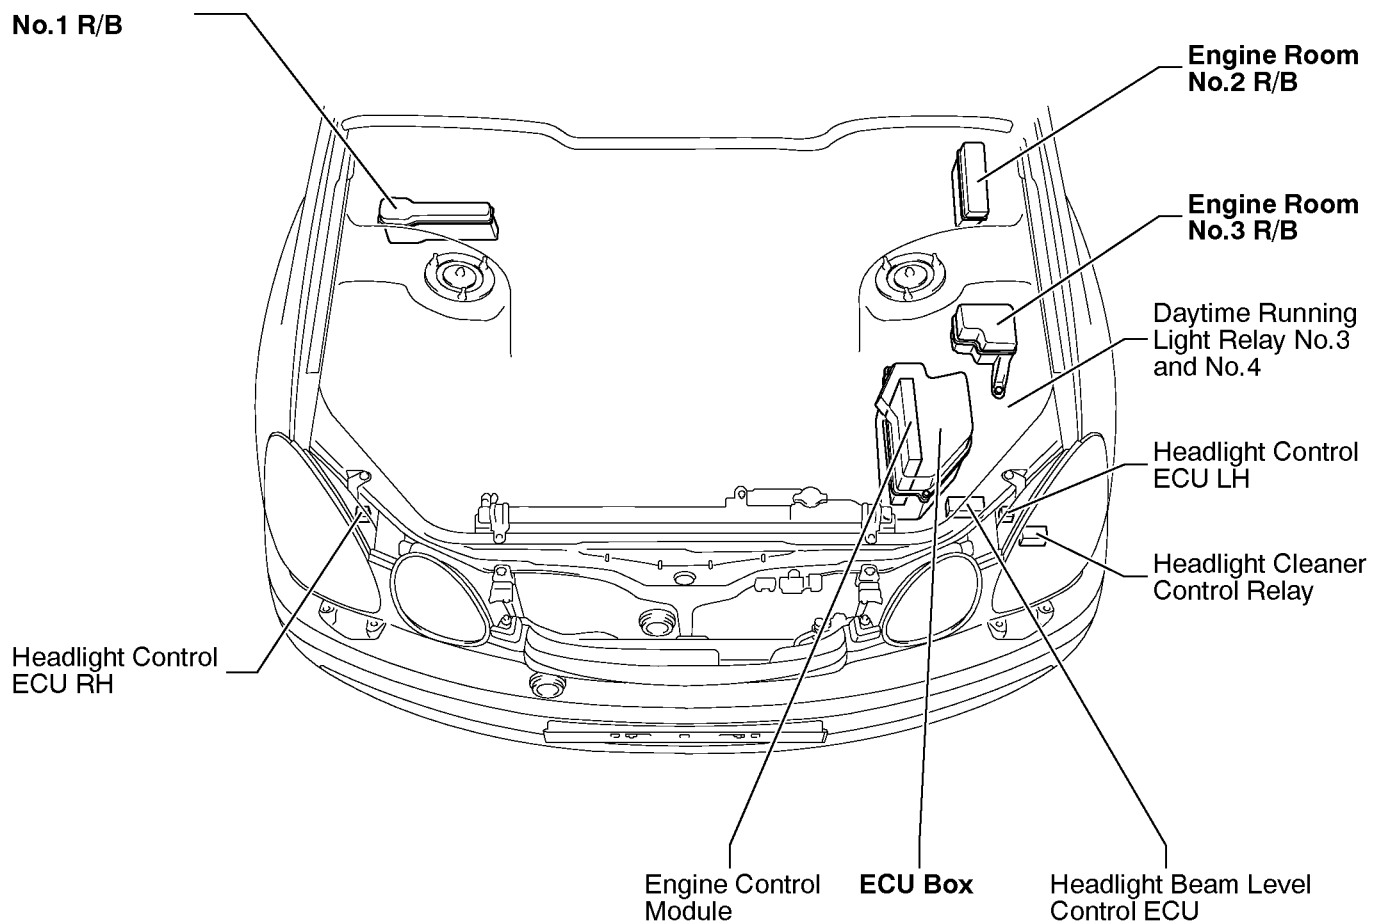



## [Instrument Panel]

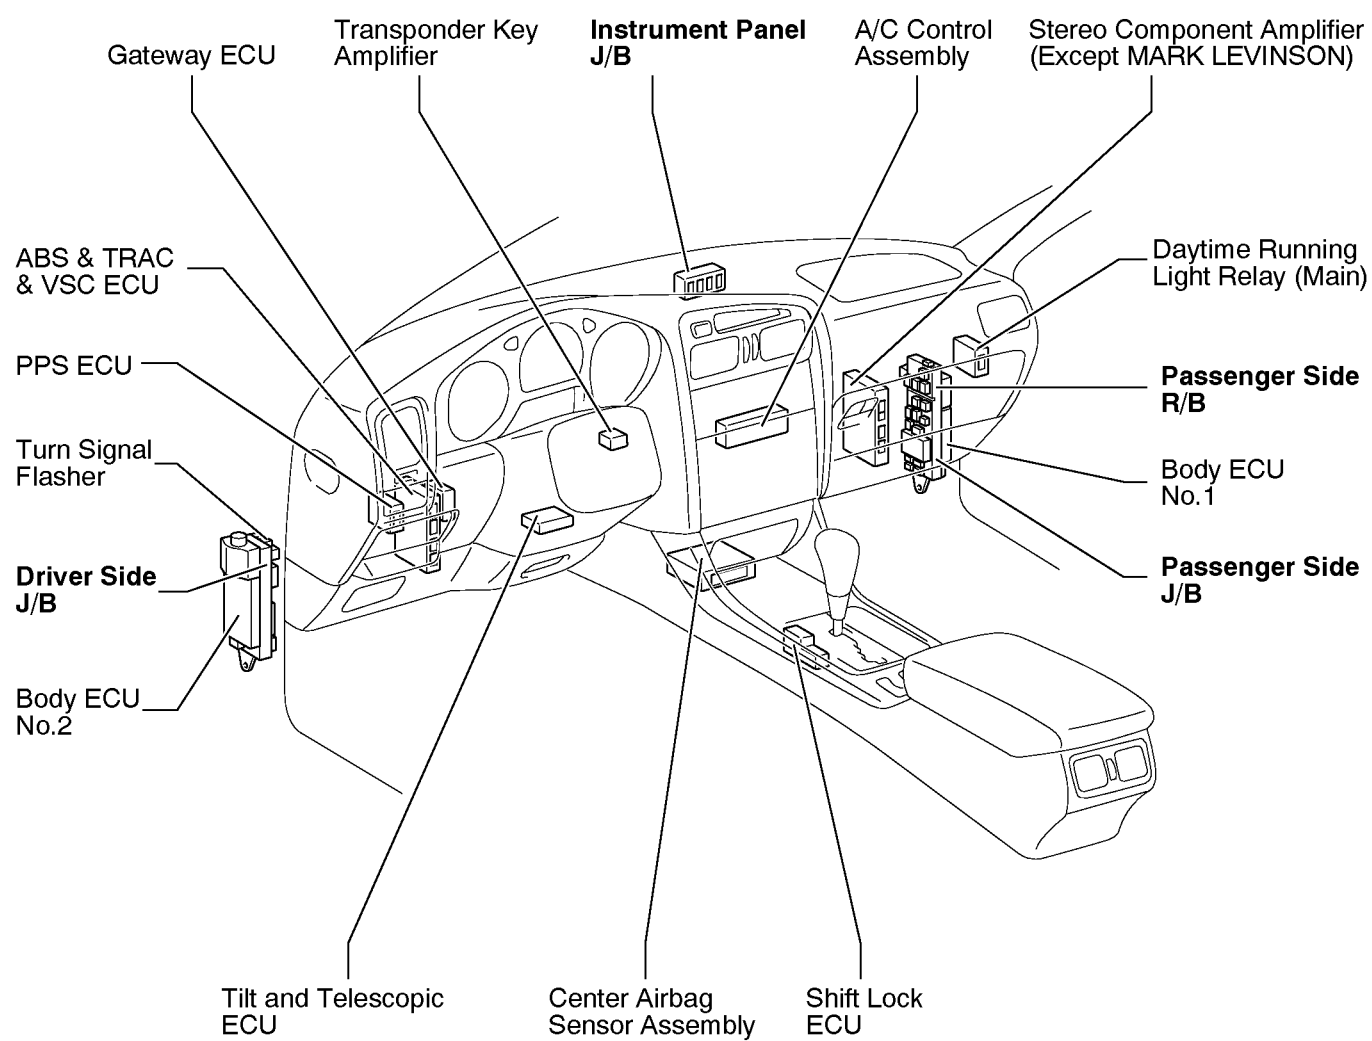

## F RELAY LOCATIONS


### [Body]

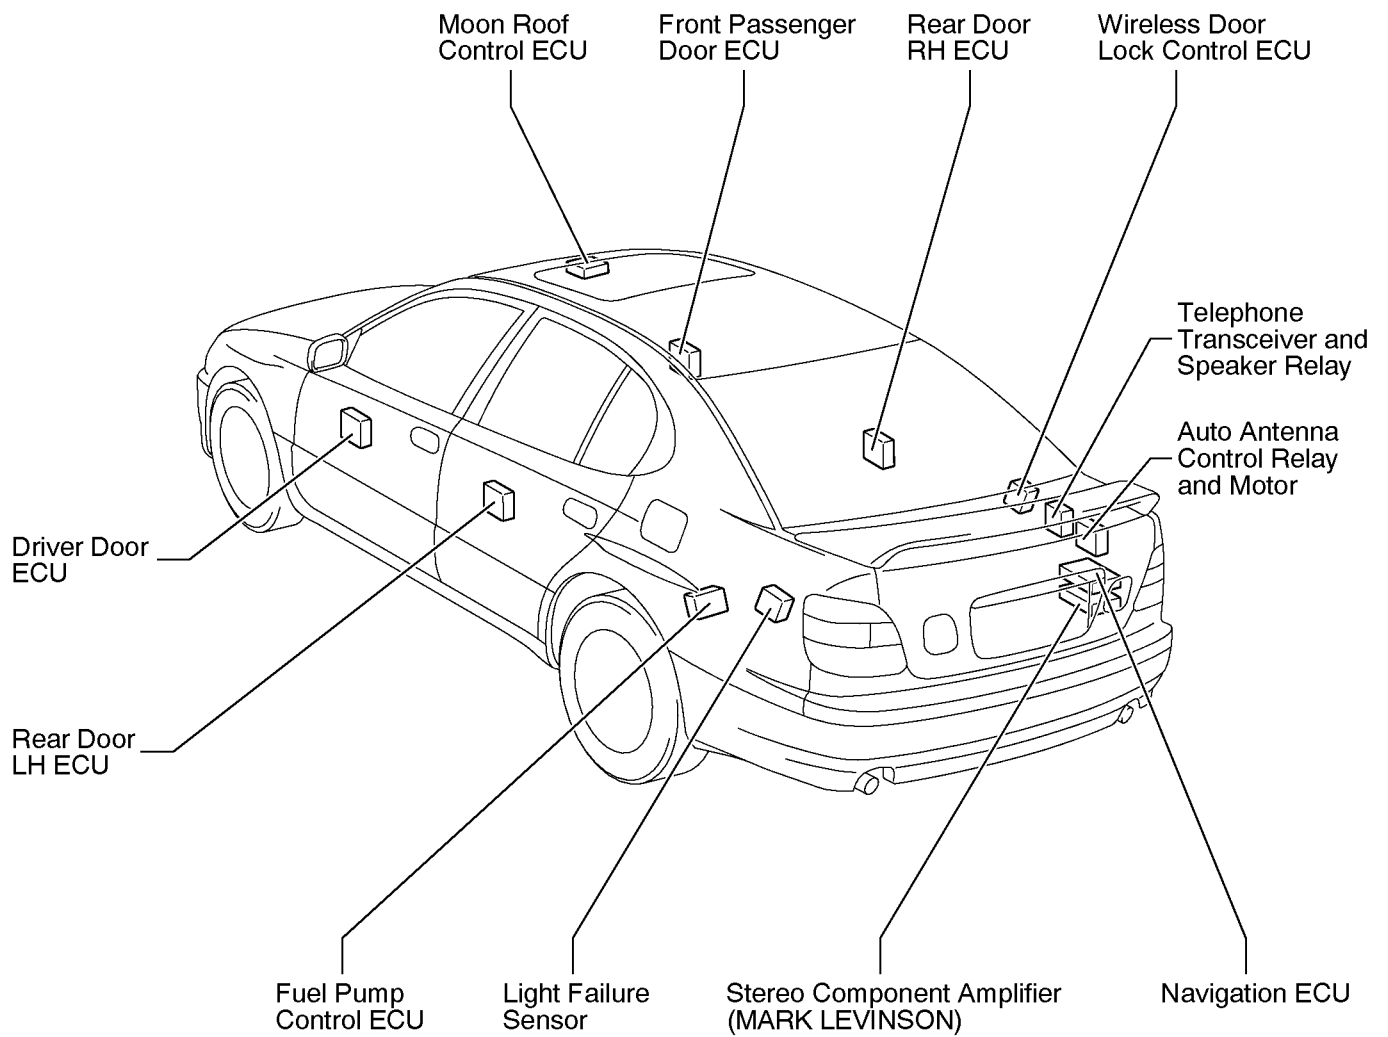


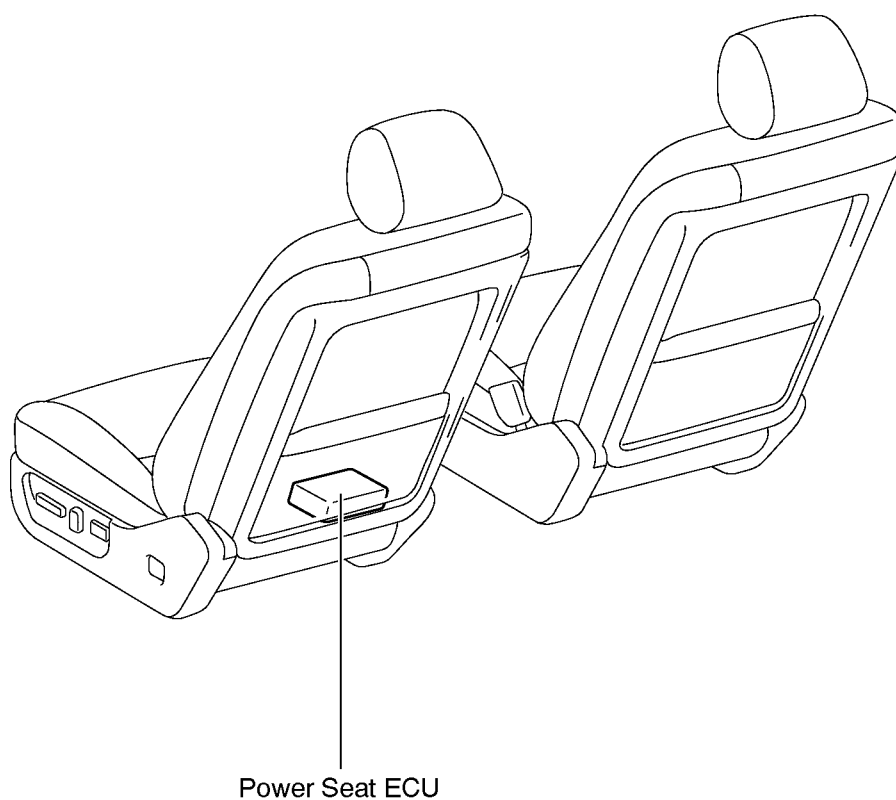**[Seat]**

# F RELAY LOCATIONS


① : Engine Room No.1 R/B Engine Compartment Right (See Page 20)

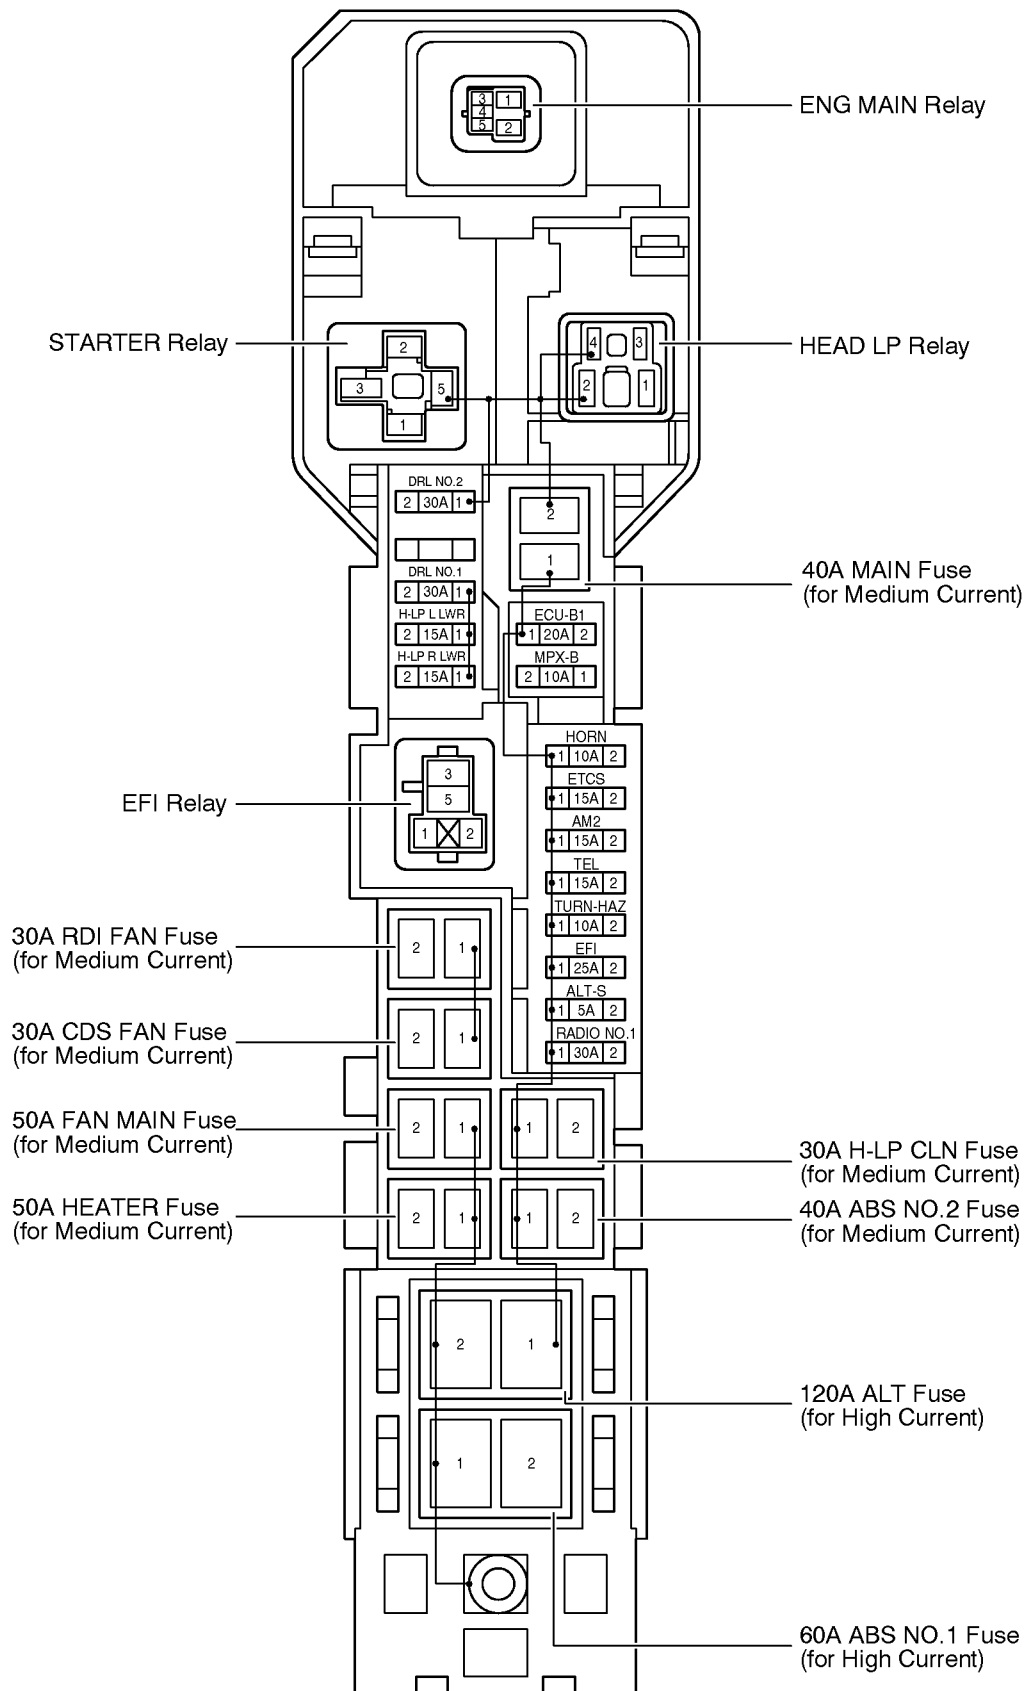

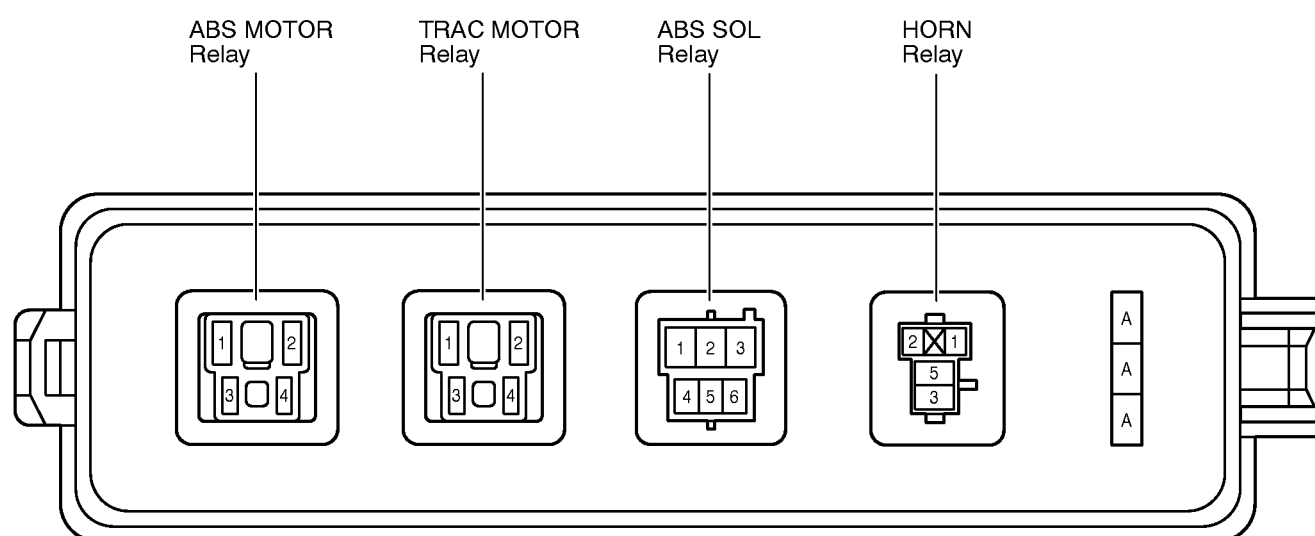**② : Engine Room No.2 R/B Engine Compartment Left (See Page 20)**


## F RELAY LOCATIONS

③ : Engine Room No.3 R/B Engine Compartment Left (See Page 20)

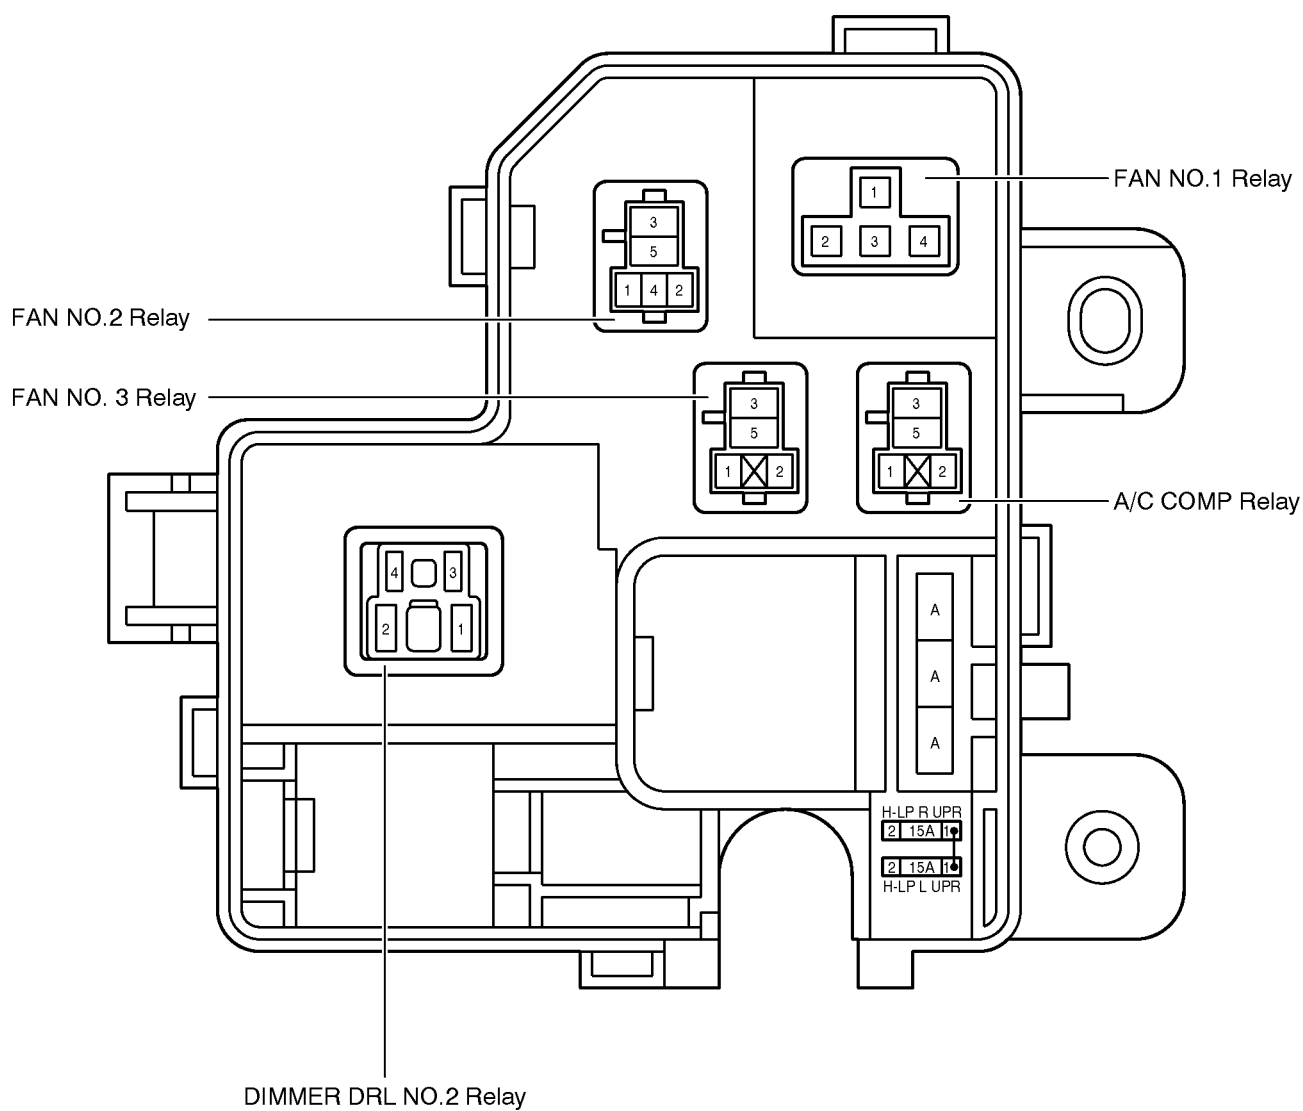

④ : Passenger Side R/B

Right Kick Panel (See Page 21)

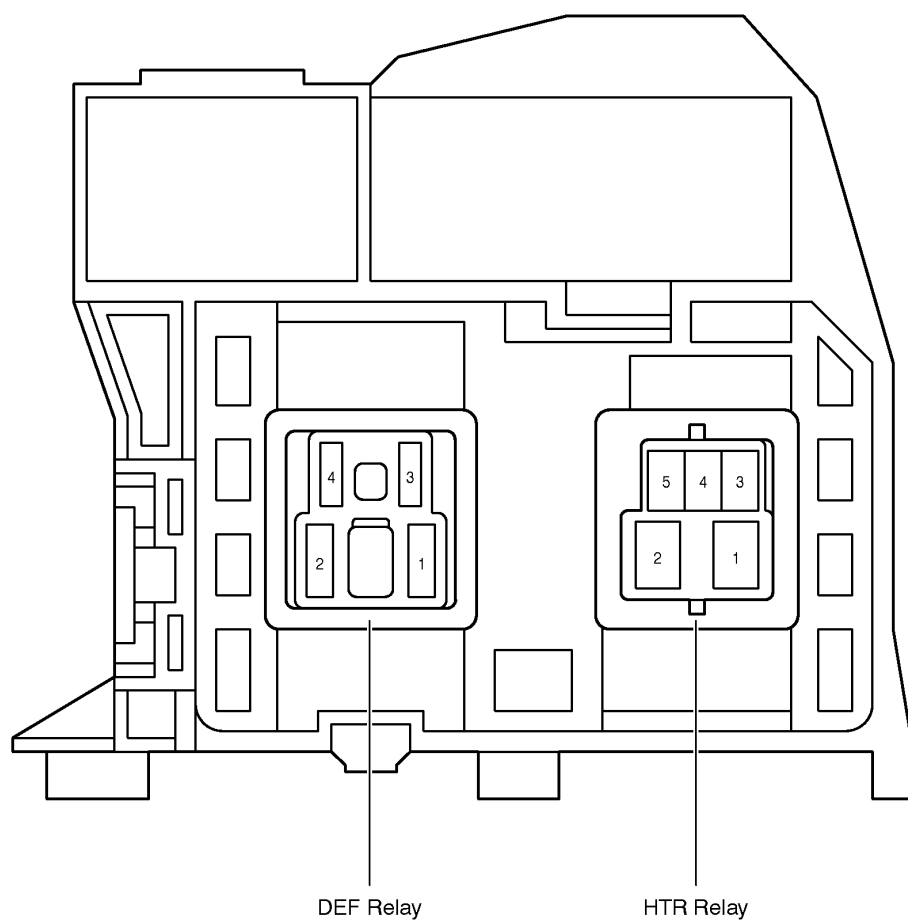





# F RELAY LOCATIONS

○ : Driver Side J/B

Left Kick Panel (See Page 21)

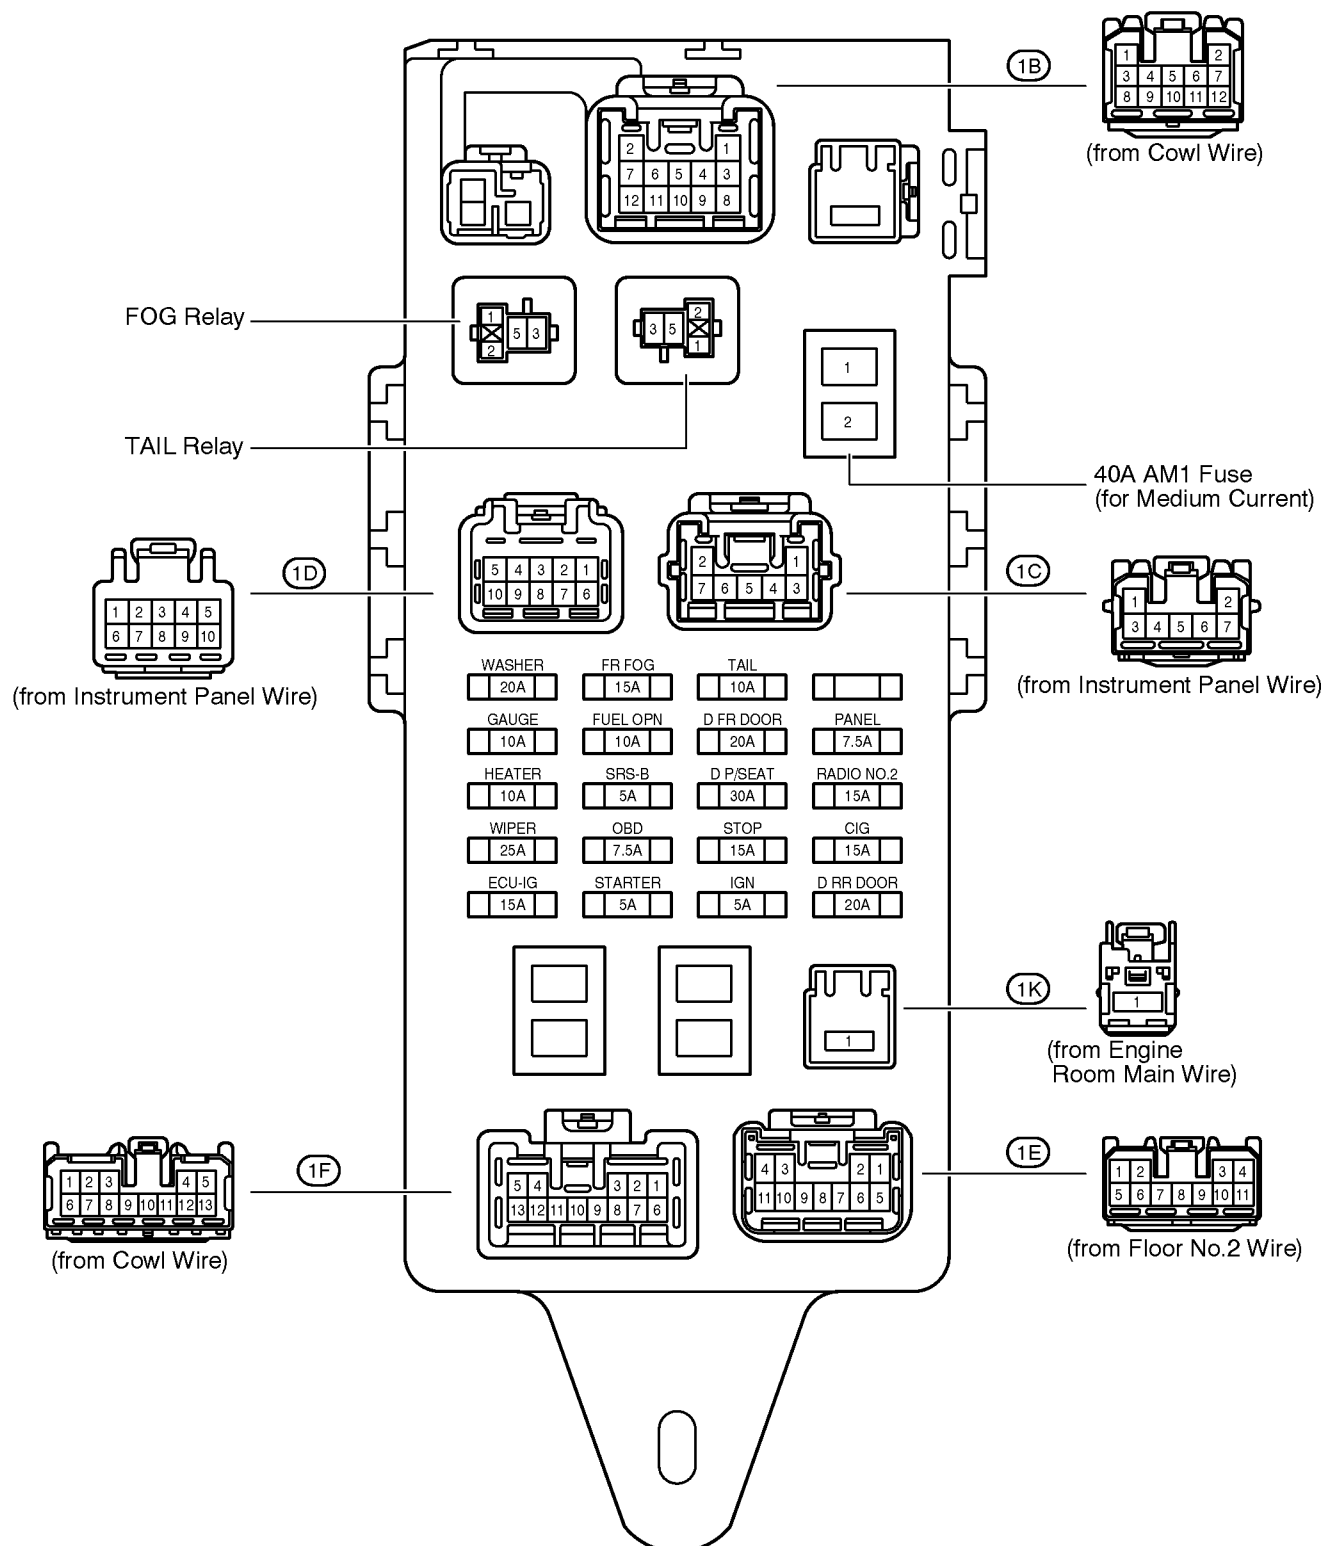


(Inner Circuit : See Page 34)

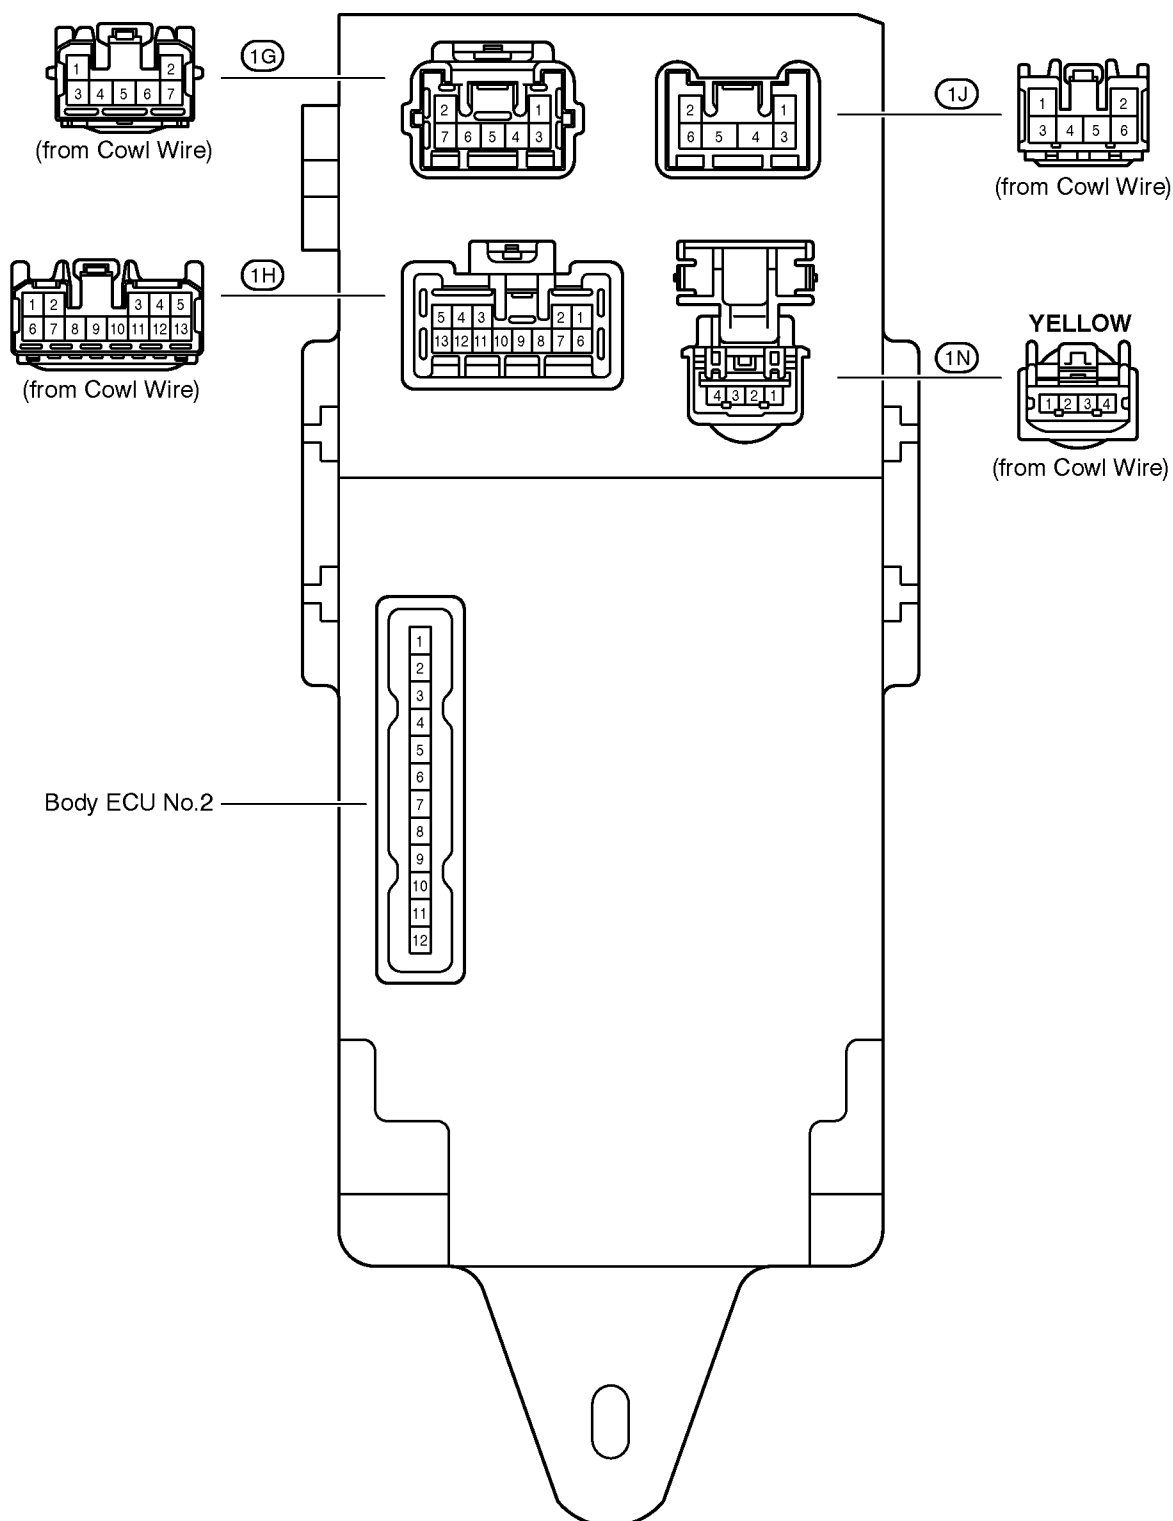


# F RELAY LOCATIONS

 : Passenger Side J/B	Right Kick Panel (See Page 21)
--------------------------------------------------------------------------------------------------------	--------------------------------

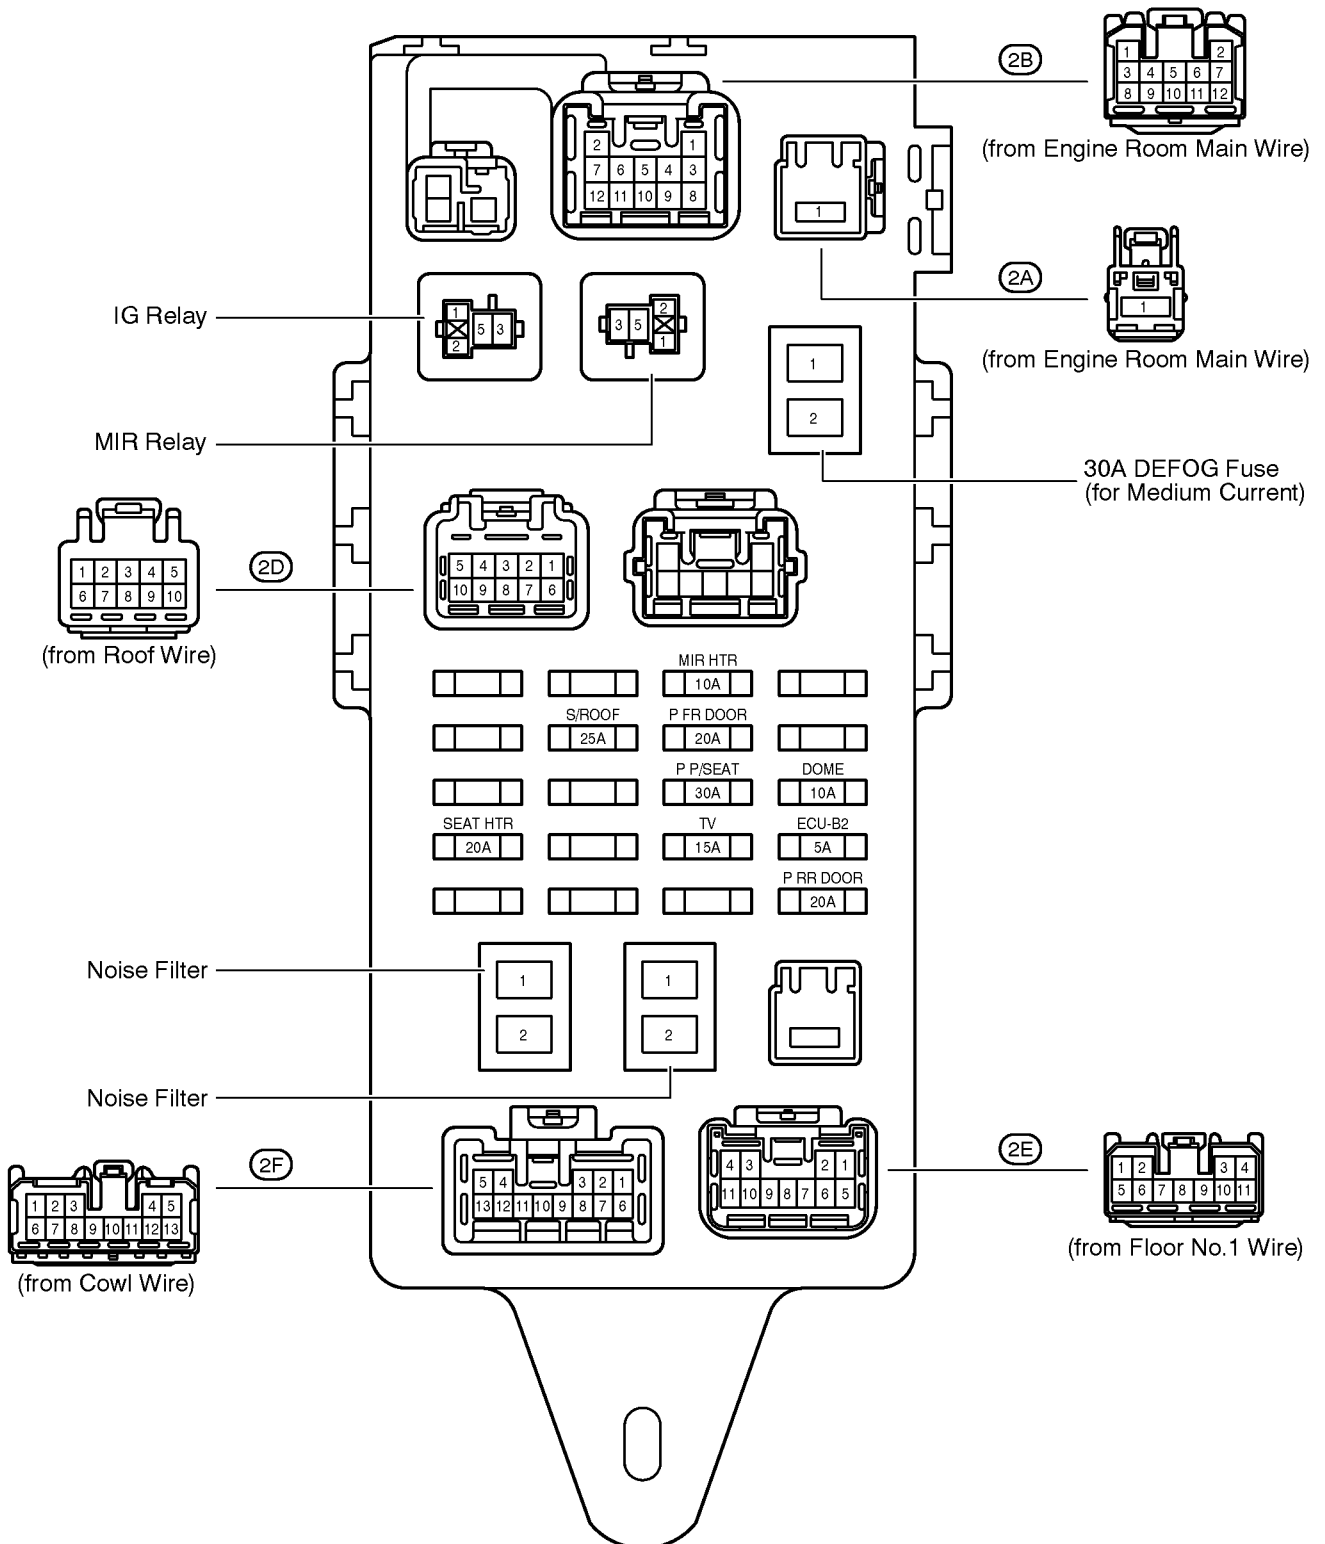


(Inner Circuit : See Page 35)

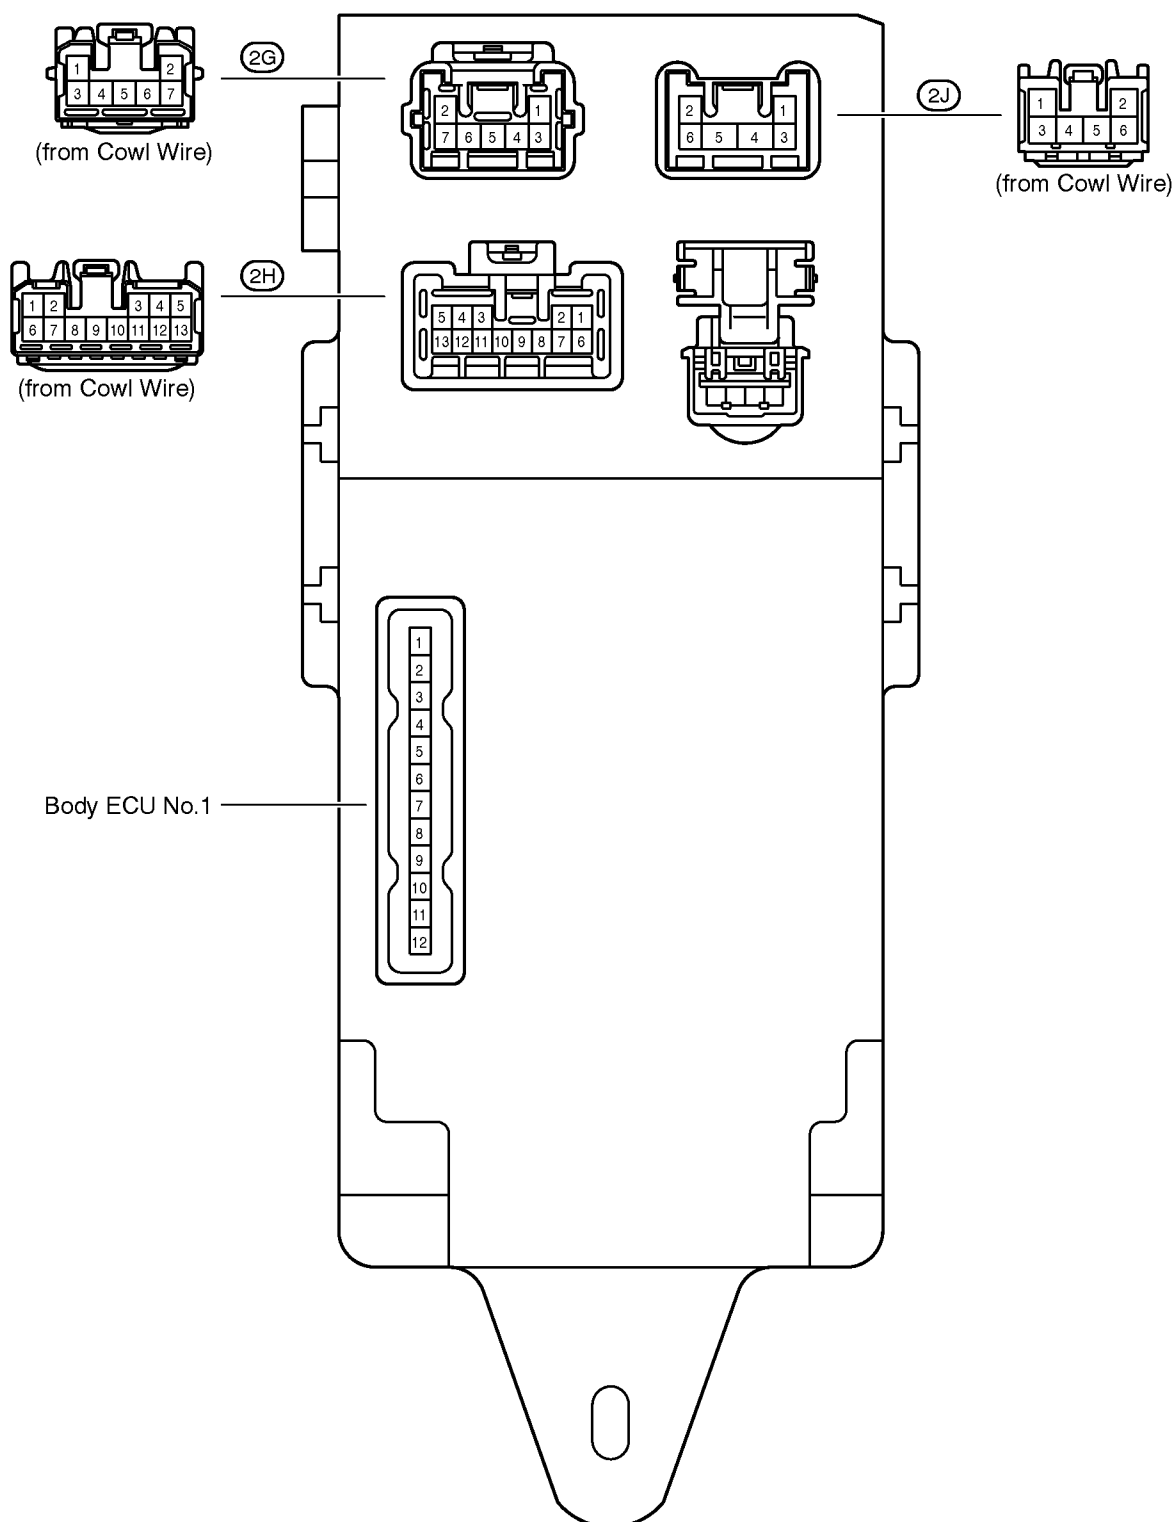


## F RELAY LOCATIONS

○ : Instrument Panel J/B

Instrument Panel Reinforcement Center  
(See Page 21)

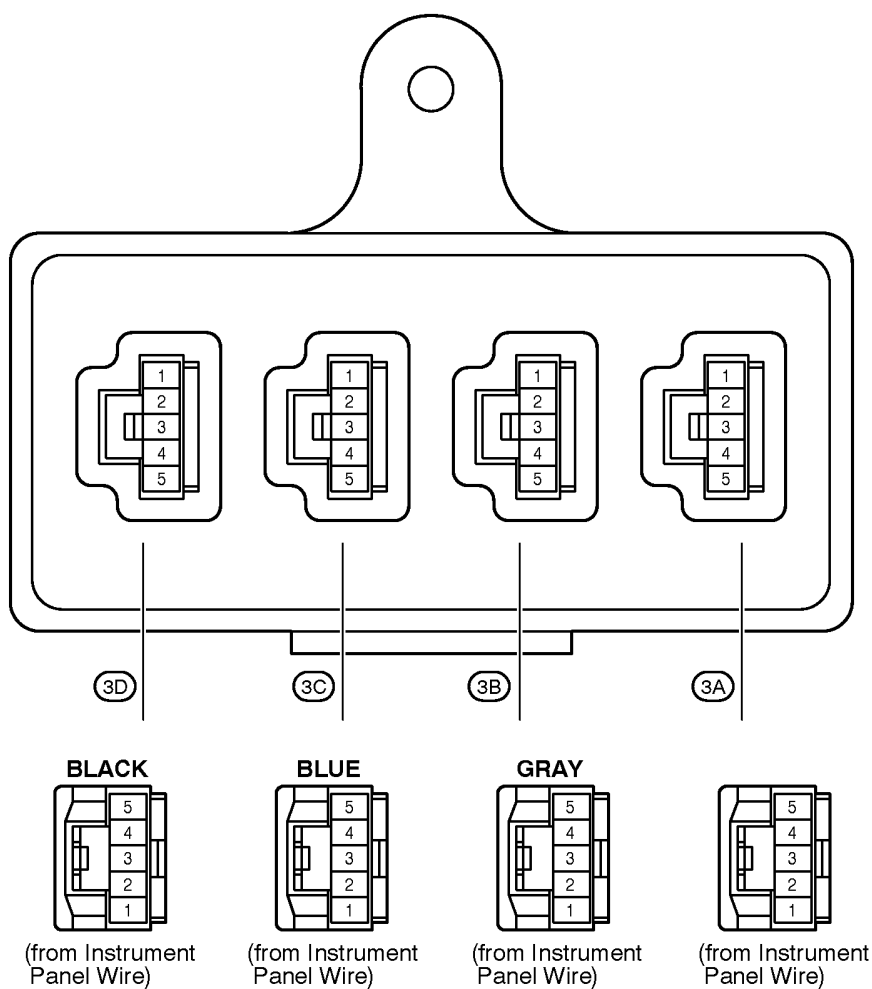



(Inner Circuit : See Page 36)

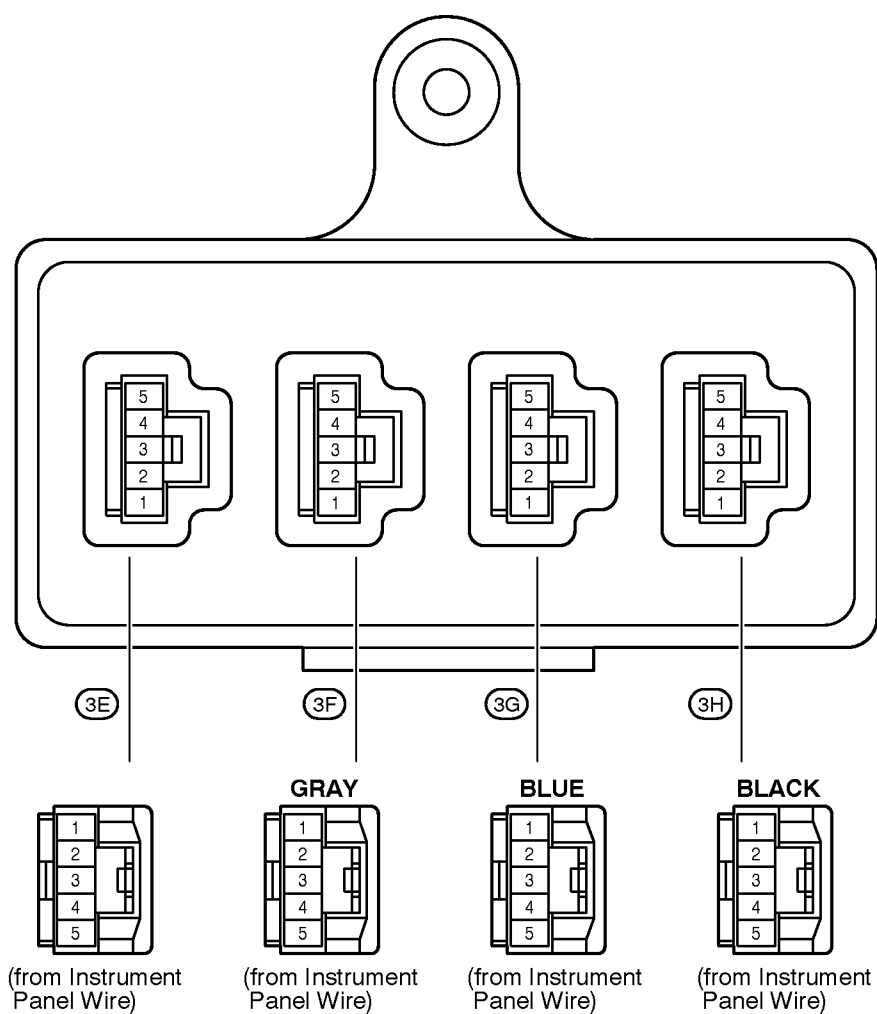

# F RELAY LOCATIONS
 
## [Driver Side J/B Inner Circuit]

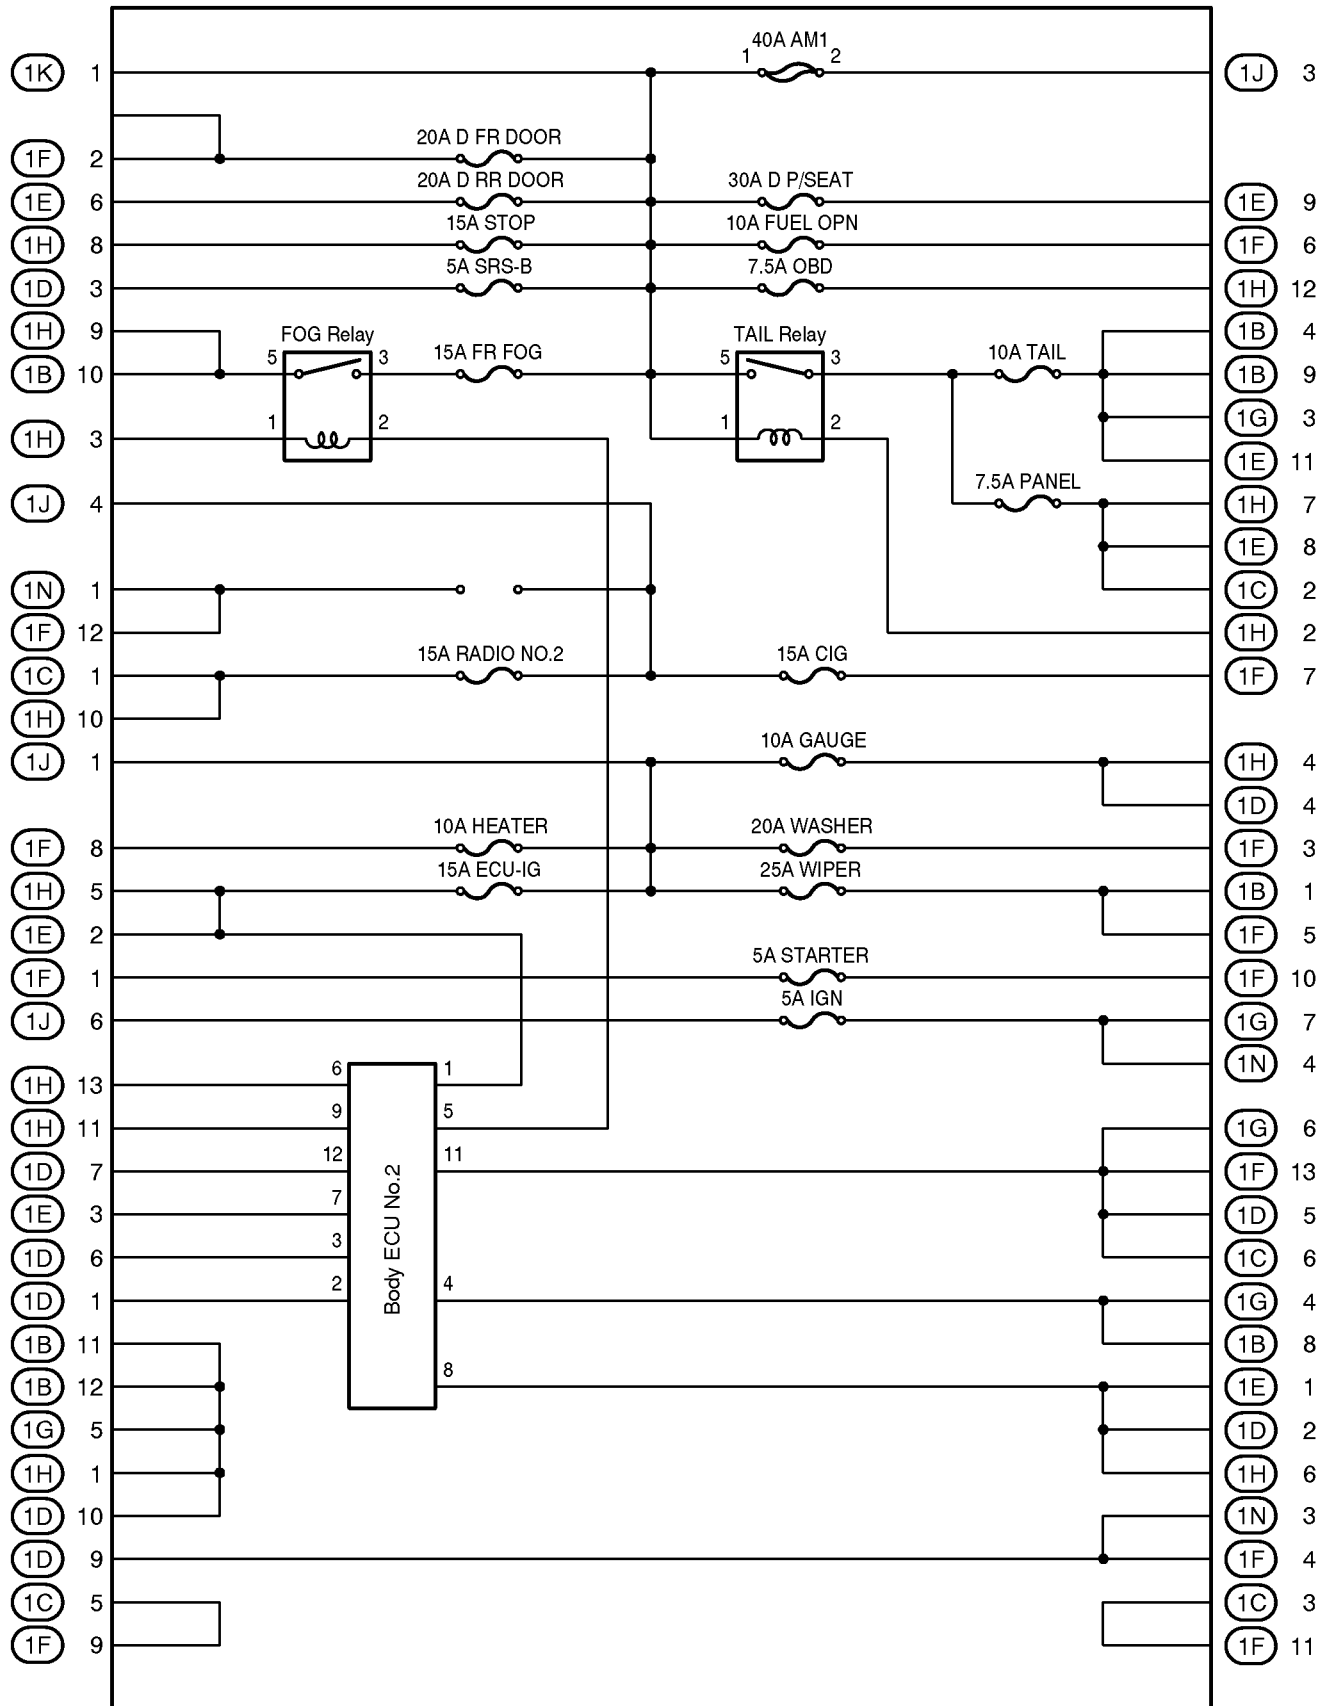





## **F RELAY LOCATIONS**

---

**[Instrument Panel J/B Inner Circuit]**

