



POWER SOURCE

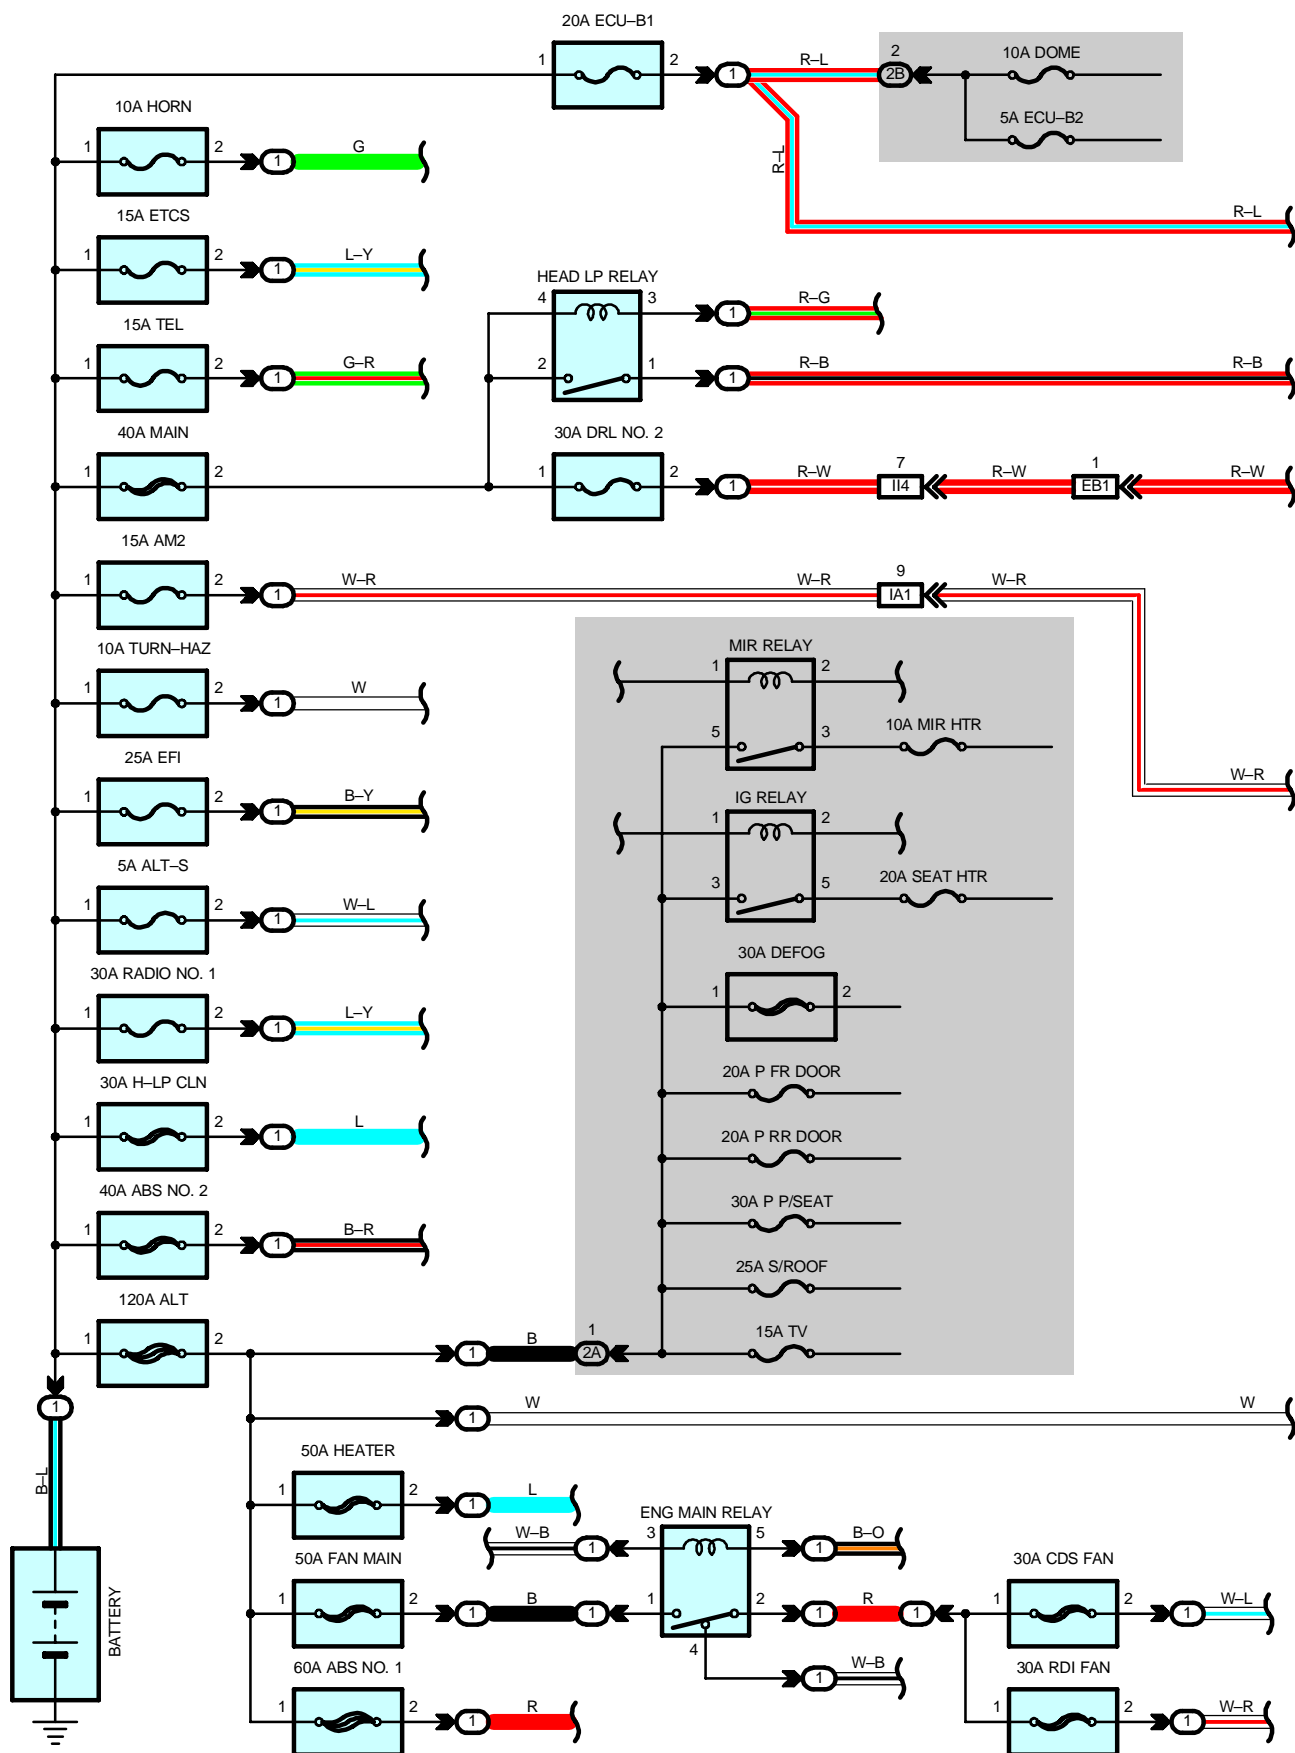

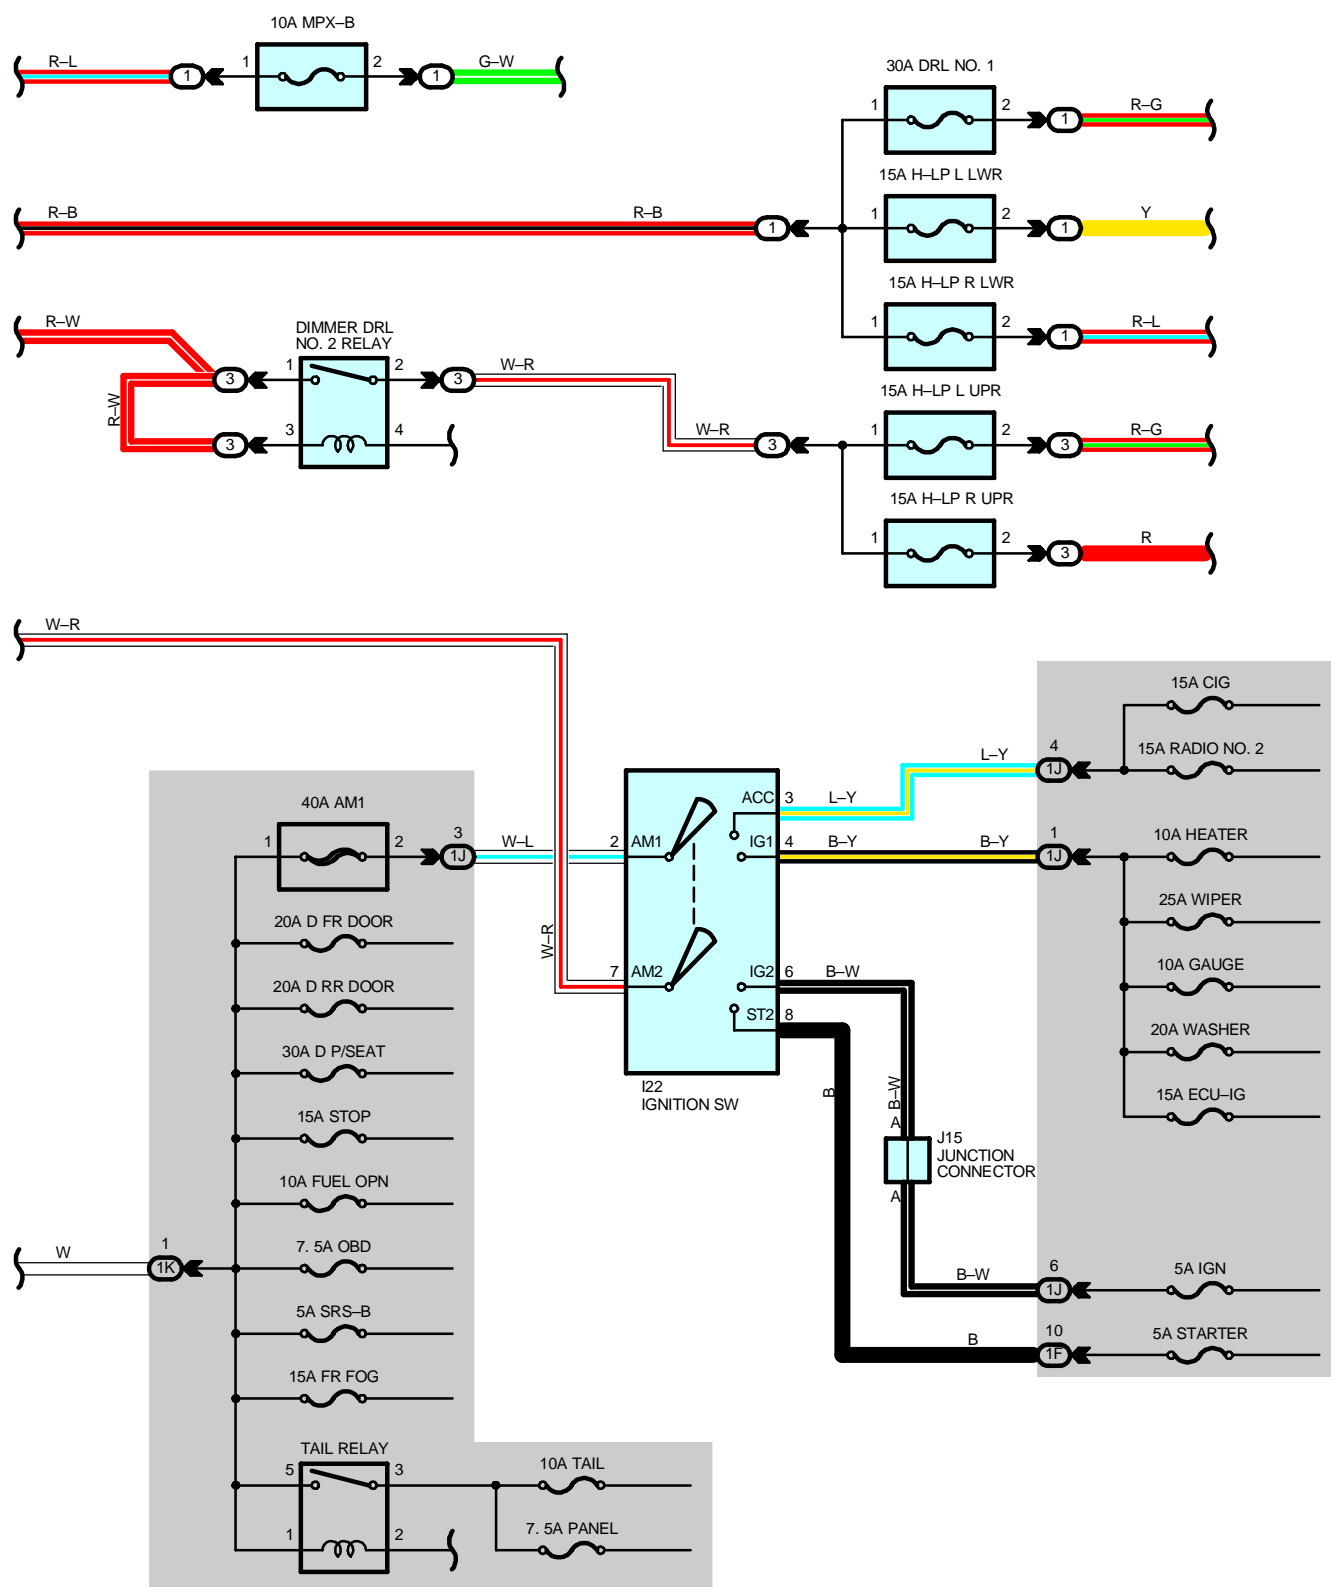

POWER SOURCE

SERVICE HINTS

HEAD LP RELAY

- 2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position
Closed with engine running and parking brake released (Parking brake SW off)

TAIL RELAY

- 5-3 : Closed with light control SW at **TAIL** or **HEAD** position

ENG MAIN RELAY

- 1-2 : Closed with ignition SW at **ON** or **ST** position

I22 IGNITION SW

- 2-3 : Closed with ignition key at **ACC** or **ON** position
2-4 : Closed with ignition key at **ON** or **ST** position
7-6 : Closed with ignition key at **ON** or **ST** position
7-8 : Closed with ignition key at **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I22	43	J15	43		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)
3	26	Engine Room No.3 R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
1J	29	
1K	28	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
2A	30	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
2B		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	48 (3UZ-FE)	Cowl Wire and Relay Block Wire (Inside of the Engine Room No.3 R/B)
	50 (2JZ-GE)	
IA1	52	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

