



# STARTING AND IGNITION (3UZ-FE)

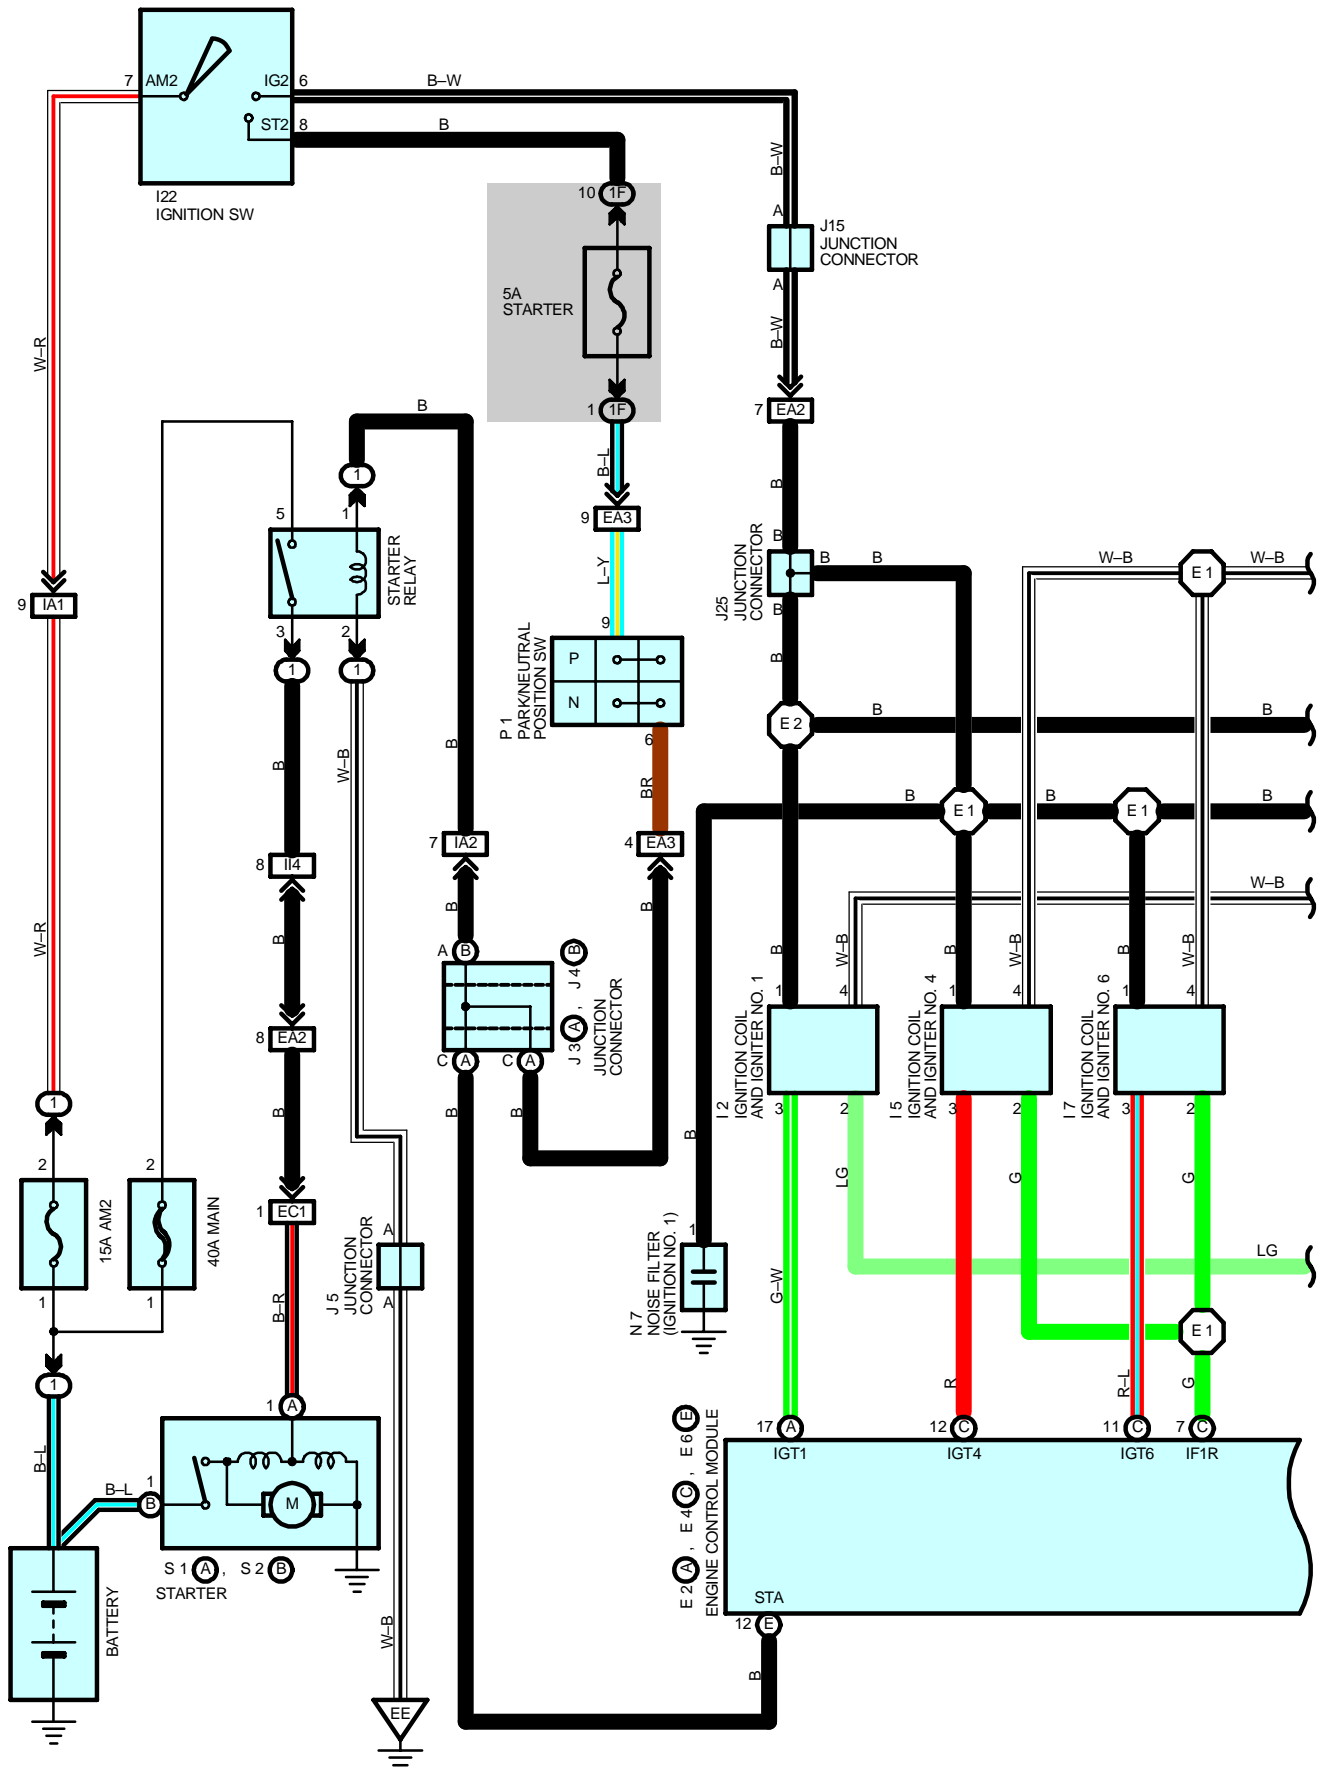

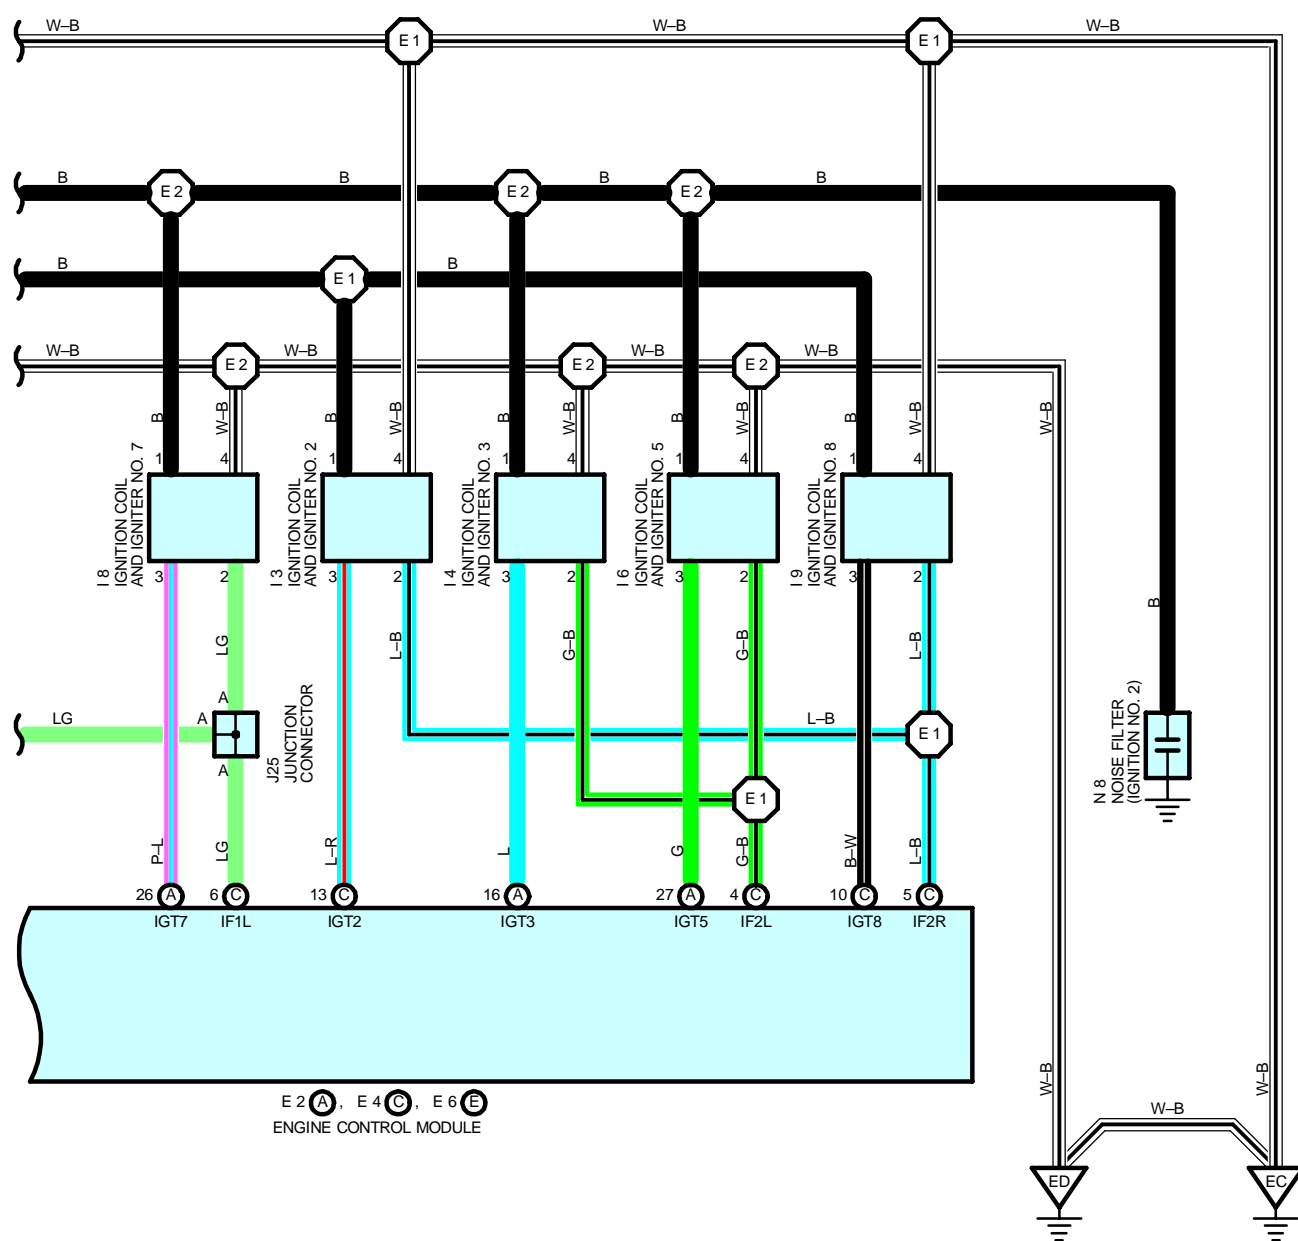

# STARTING AND IGNITION (3UZ-FE)

## SERVICE HINTS

### I22 IGNITION SW

7-6 : Closed with ignition SW at **ON** or **ST** position

7-8 : Closed with ignition SW at **ST** position

### P1 PARK/NEUTRAL POSITION SW

9-6 : Closed with A/T shift lever in **P** or **N** position

### S1 (A), S2 (B) STARTER

Points closed with Park/Neutral position SW at **P** or **N** position and ignition SW at **ST** position

## : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
E2	A	<a href="#">38 (3UZ-FE)</a>	I7		<a href="#">39 (3UZ-FE)</a>	J25		<a href="#">39 (3UZ-FE)</a>
E4	C	<a href="#">38 (3UZ-FE)</a>	I8		<a href="#">39 (3UZ-FE)</a>	N7		<a href="#">39 (3UZ-FE)</a>
E6	E	<a href="#">38 (3UZ-FE)</a>	I9		<a href="#">39 (3UZ-FE)</a>	N8		<a href="#">39 (3UZ-FE)</a>
I2		<a href="#">39 (3UZ-FE)</a>	I22		<a href="#">43</a>	P1		<a href="#">39 (3UZ-FE)</a>
I3		<a href="#">39 (3UZ-FE)</a>	J3	A	<a href="#">39 (3UZ-FE)</a>	S1	A	<a href="#">39 (3UZ-FE)</a>
I4		<a href="#">39 (3UZ-FE)</a>	J4	B	<a href="#">39 (3UZ-FE)</a>	S2	B	<a href="#">39 (3UZ-FE)</a>
I5		<a href="#">39 (3UZ-FE)</a>	J5		<a href="#">39 (3UZ-FE)</a>			
I6		<a href="#">39 (3UZ-FE)</a>	J15		<a href="#">43</a>			

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	48 (3UZ-FE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3		
EC1	48 (3UZ-FE)	Engine No.2 Wire and Engine Wire (Near the Starter)
IA1	52	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IA2		
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

## : GROUND POINTS

Code	See Page	Ground Points Location
EC	48 (3UZ-FE)	RH Bank of the Cylinder Head
ED	48 (3UZ-FE)	LH Bank of the Cylinder Head
EE	48 (3UZ-FE)	Under the ABS & TRAC & VSC Actuator

## : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	48 (3UZ-FE)	Engine Wire	E2	48 (3UZ-FE)	Engine Wire

