



STARTING AND IGNITION (2JZ-GE)

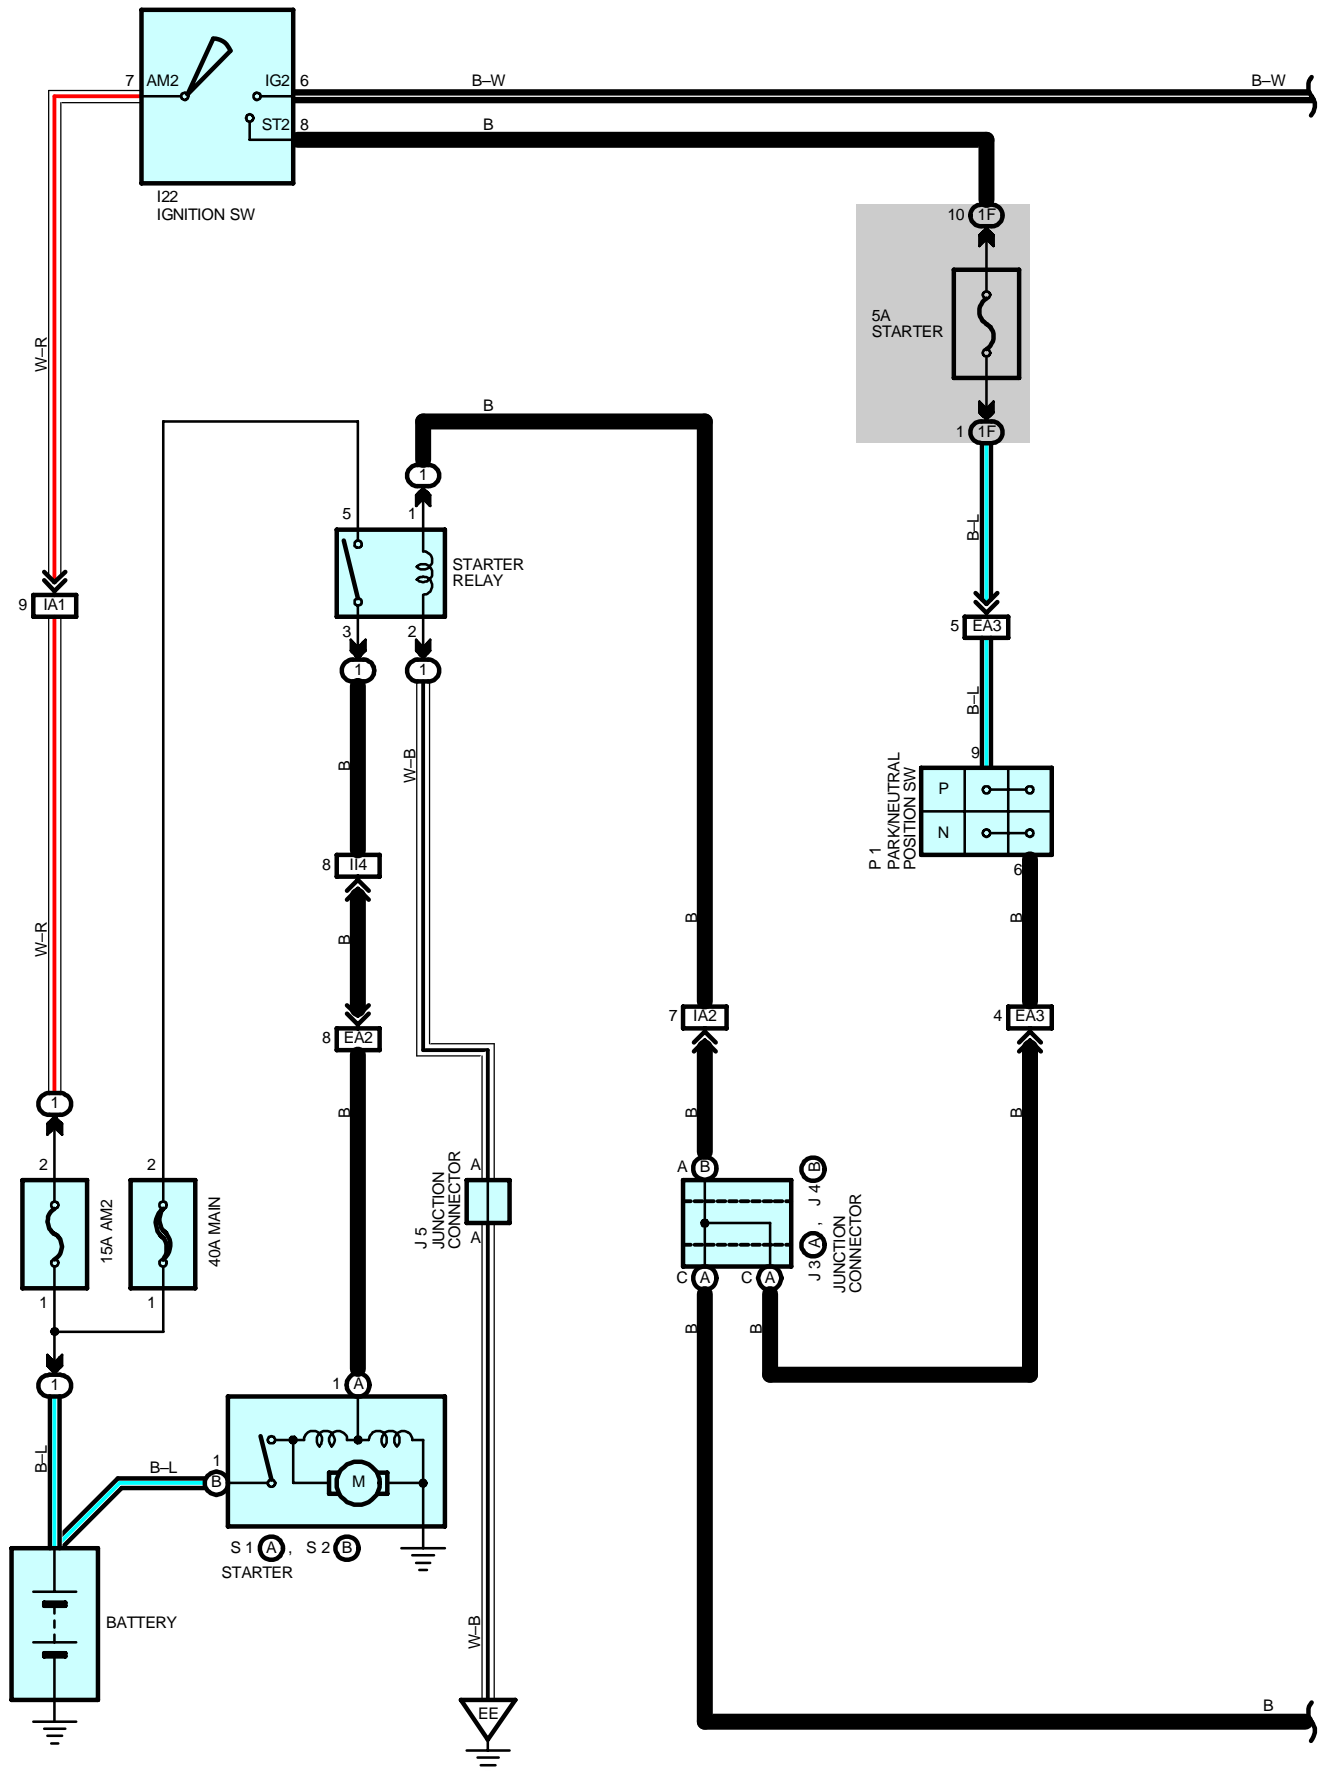

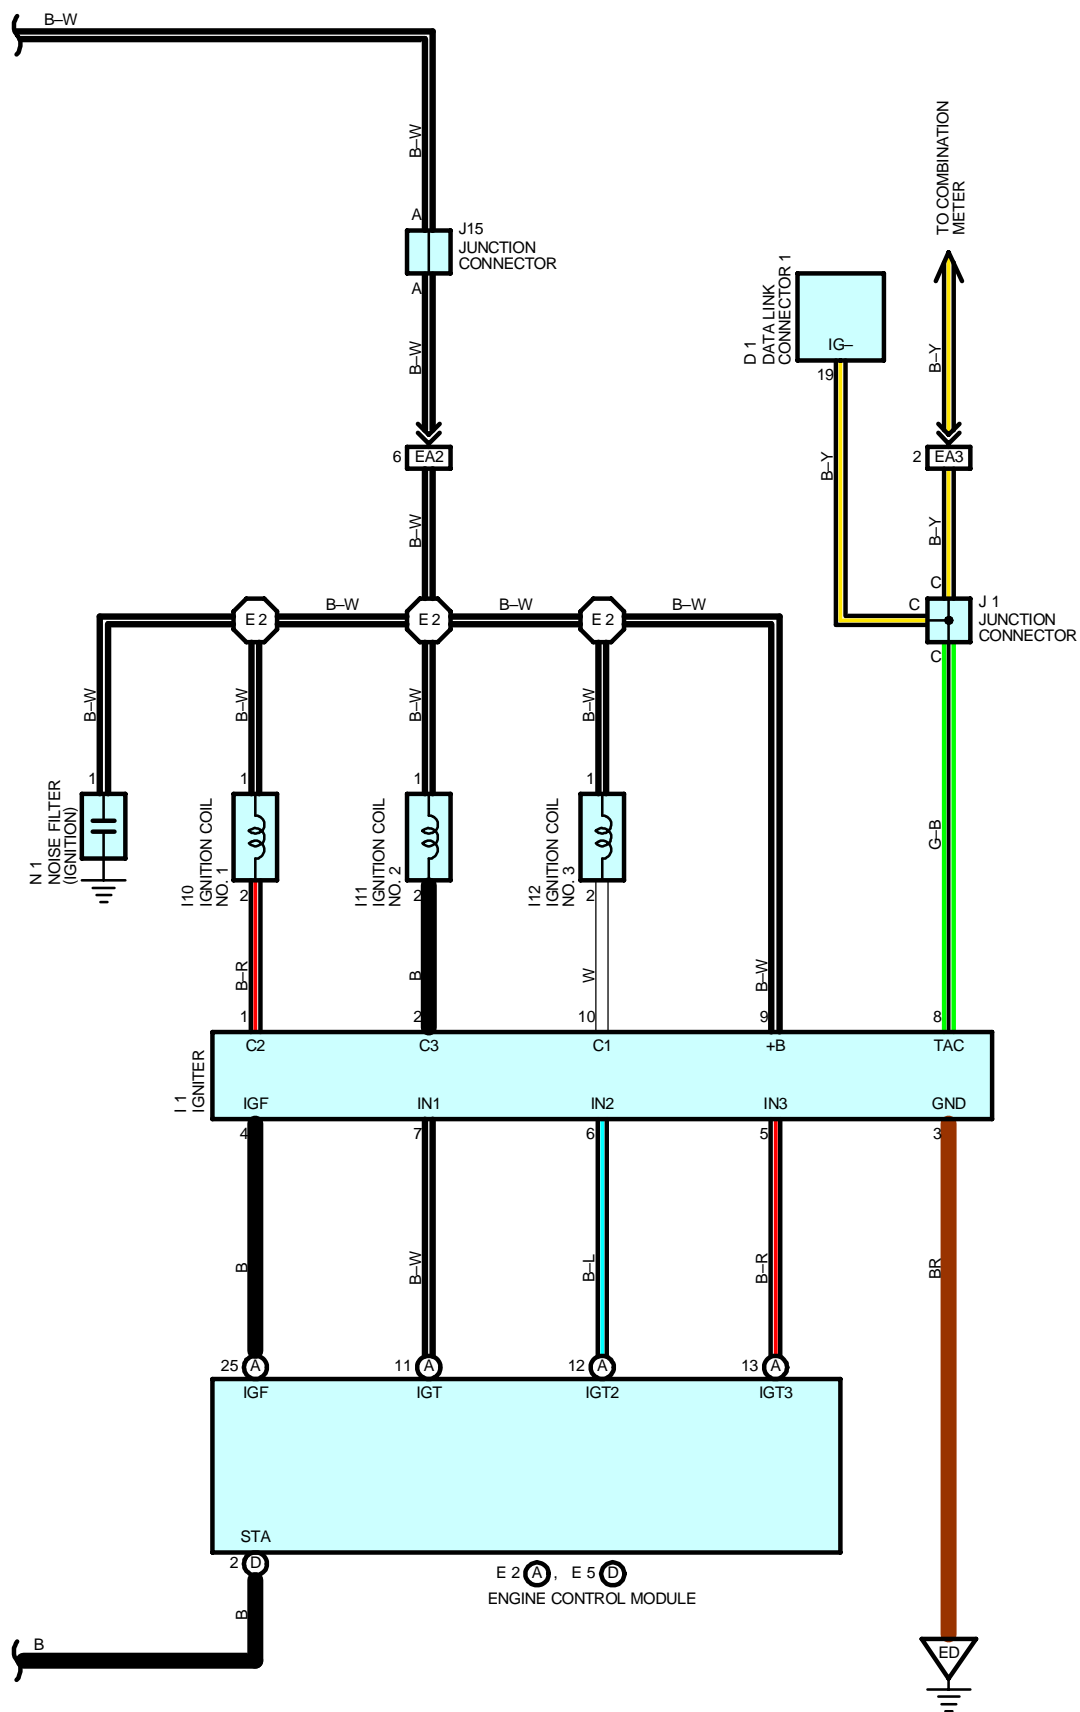

STARTING AND IGNITION (2JZ-GE)

SERVICE HINTS

I22 IGNITION SW

7-6 : Closed with ignition SW at **ON** or **ST** position

7-8 : Closed with ignition SW at **ST** position

P1 PARK/NEUTRAL POSITION SW

9-6 : Closed with A/T shift lever in **P** or **N** position

S1 (A), S2 (B) STARTER

Points closed with Park/Neutral position SW at **P** or **N** position and ignition SW at **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D1	40 (2JZ-GE)	I12	41 (2JZ-GE)	J15	43
E2	A 40 (2JZ-GE)	I22	43	N1	41 (2JZ-GE)
E5	D 40 (2JZ-GE)	J1	41 (2JZ-GE)	P1	41 (2JZ-GE)
I1	41 (2JZ-GE)	J3	A 41 (2JZ-GE)	S1	A 41 (2JZ-GE)
I10	41 (2JZ-GE)	J4	B 41 (2JZ-GE)	S2	B 41 (2JZ-GE)
I11	41 (2JZ-GE)	J5	41 (2JZ-GE)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	50 (2JZ-GE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3		
IA1	52	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IA2		
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	50 (2JZ-GE)	Rear Side of the Intake Manifold
EE	50 (2JZ-GE)	Under the ABS & TRAC & VSC Actuator

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	50 (2JZ-GE)	Engine Wire			

