



SERVICE HINTS

G1 (A), G2 (B) GENERATOR

- (A) 1-GROUND : **13.9–15.1** volts with engine running at **2000** rpm and **25°C (77°F)**
13.5–14.3 volts with engine running at **5000** rpm and **115°C (239°F)**
 (B) 3-GROUND : **0–4** volts with ignition SW at **ON** position and engine not running

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A13	42	E3	B	G2	B
C8	42				
C12	A	E5	D	J1	41 (2JZ-GE)
C13	B				
E2	A	G1	A	J17	43
				T5	43

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	28	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
1G	29	
1H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	50 (2JZ-GE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3	48 (3UZ-FE)	
IA2	52	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IE1	52	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
IJ1	54	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel