


SERVICE HINTS

FOG RELAY

3-5 : Closed with dimmer SW at **LOW** position and fog light SW on

: PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
B6	A	42	F1	40 (2JZ-GE)	J6	43
C14		42	F2	38 (3UZ-FE)	J10	43
F1		38 (3UZ-FE)		40 (2JZ-GE)	J17	43

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
1F		
1G		
1H	29	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2F	30	
2G	31	

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II2	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
II4		

: GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3UZ-FE)	Right Fender
	50 (2JZ-GE)	
EB	48 (3UZ-FE)	Left Fender
	50 (2JZ-GE)	
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel