


# TURN SIGNAL AND HAZARD WARNING LIGHT

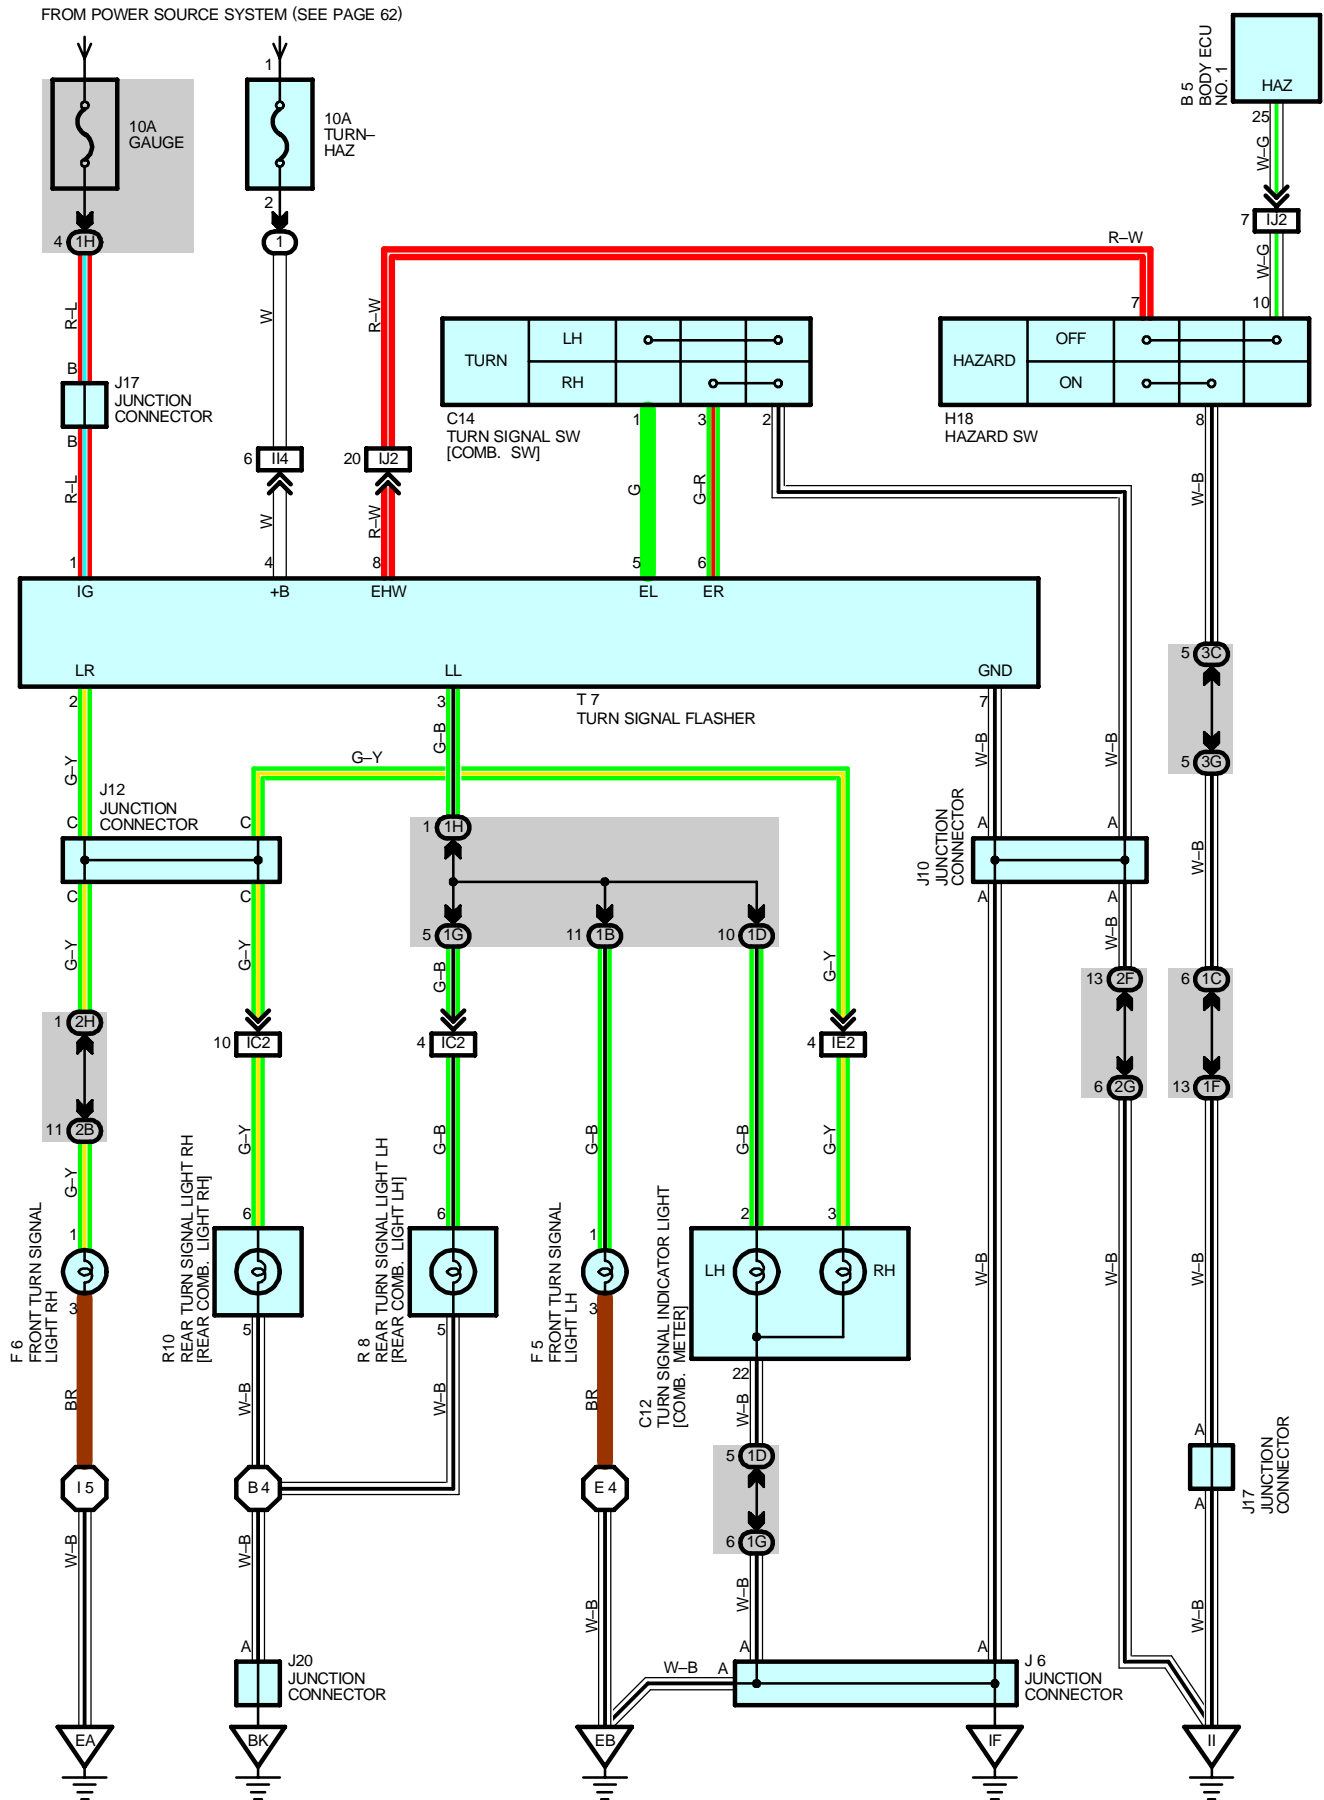

## SERVICE HINTS

### T7 TURN SIGNAL FLASHER

4-GROUND : Always approx. 12 volts

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

7-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B5	42	F6	40 (2JZ-GE)	J20	44
C12	42	H18	42	R8	45
C14	42	J6	43	R10	45
F5	38 (3UZ-FE)	J10	43	T7	43
	40 (2JZ-GE)	J12	43		
F6	38 (3UZ-FE)	J17	43		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
1C	28	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1D		
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
1G	29	
1H		
2B	30	
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	31	
2H		
3C	32	
3G	33	

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	52	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IE2	52	Instrument Panel Wire and Cowl Wire (Left Side of the Steering Column)
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IJ2	54	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (3UZ-FE)	Right Fender
	50 (2JZ-GE)	
EB	48 (3UZ-FE)	Left Fender
	50 (2JZ-GE)	
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel
BK	56	Quarter Panel LH

# TURN SIGNAL AND HAZARD WARNING LIGHT

---



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	<a href="#">48 (3UZ-FE)</a>	Cowl Wire	I5	<a href="#">54</a>	Engine Room Main Wire
	<a href="#">50 (2JZ-GE)</a>		B4	<a href="#">56</a>	Floor No.2 Wire

