


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

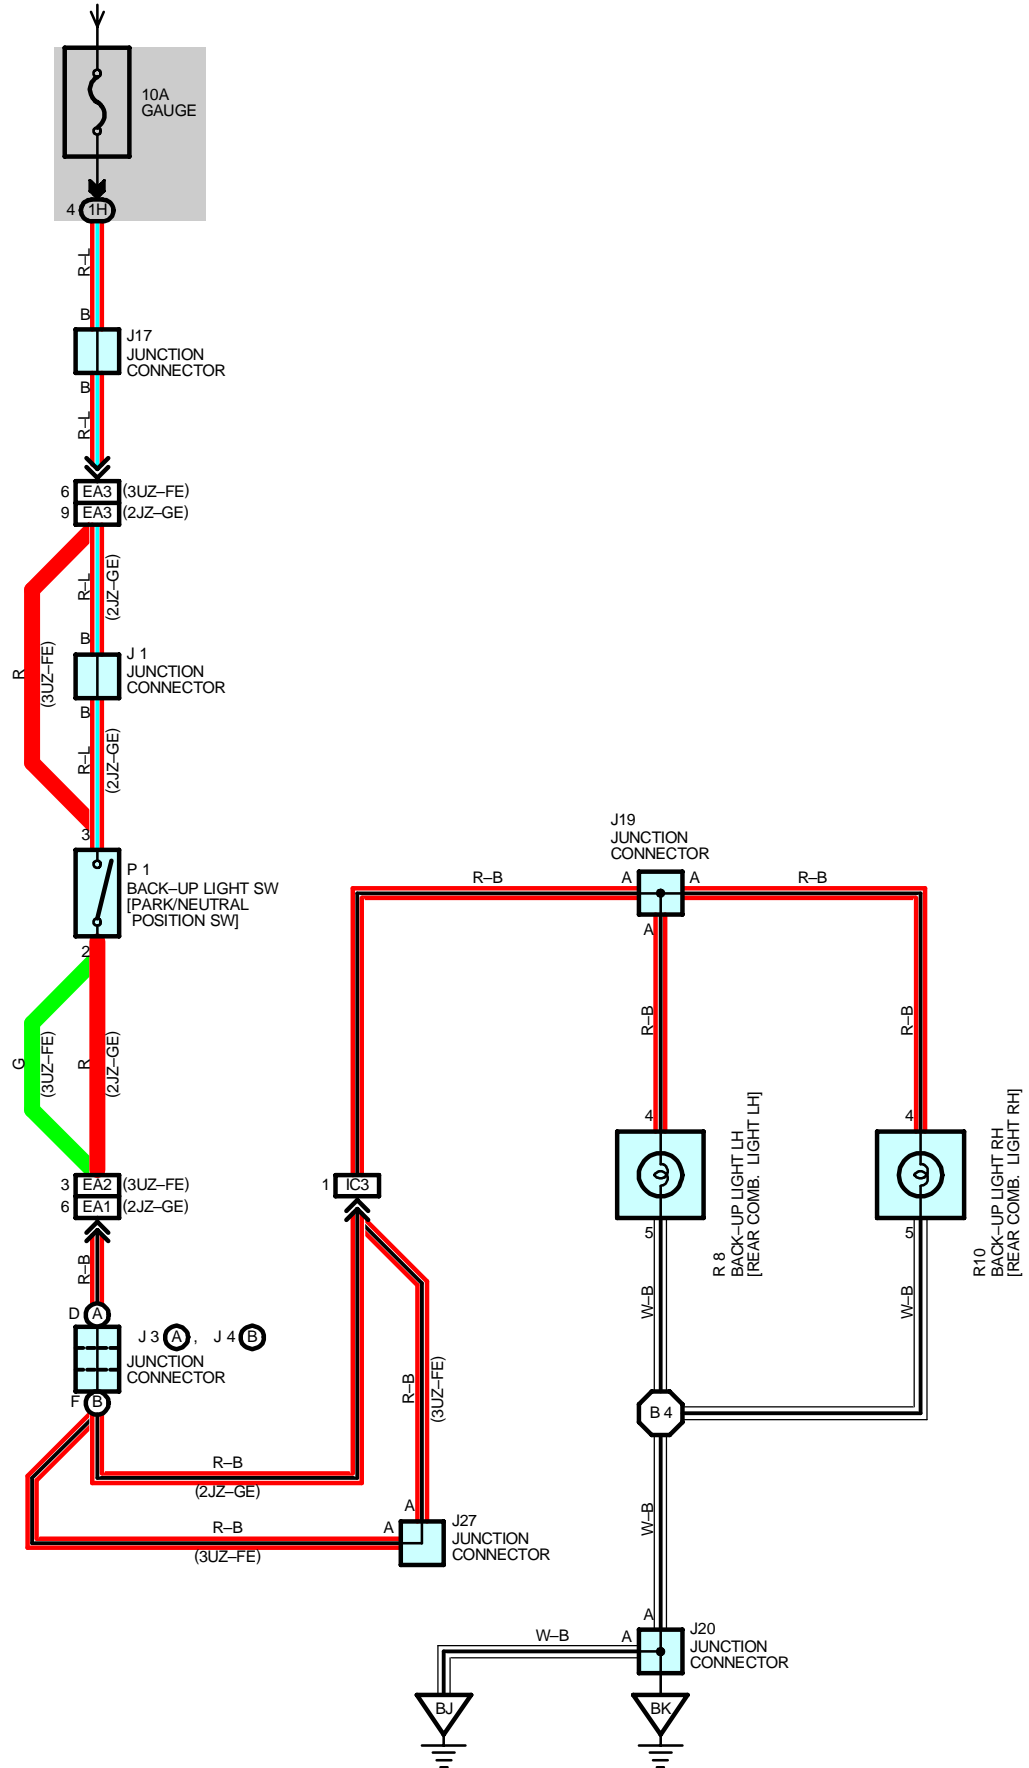

SERVICE HINTS

P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

3-2 : Closed with shift lever in R position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	41 (2JZ-GE)	J17	43	P1	41 (2JZ-GE)
J3	A	J19	44	R8	45
		J20	44	R10	45
J4	B	J27	43		
		P1	39 (3UZ-FE)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	50 (2JZ-GE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA2	48 (3UZ-FE)	
	50 (2JZ-GE)	
EA3	48 (3UZ-FE)	
	50 (2JZ-GE)	
IC3	52	Floor No.2 Wire and Cowl Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BJ	56	Rear Floor Partition Panel LH
BK	56	Quarter Panel LH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	56	Floor No.2 Wire			