



## SERVICE HINTS

### L1 LUGGAGE COMPARTMENT DOOR OPENER SW

1-2 : Closed with the luggage compartment door open

### B5 (A) BODY ECU NO.1

1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

4, 8-GROUND : Always approx. **12** volts

(A)15-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

(A)17-GROUND : Continuity with luggage compartment door open

## : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
B5	A	42	J10	43	L1	43
J6		43	J13	43	L5	45
J7		43	J15	43		

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)
2B	30	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	31	

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	52	Floor No.2 Wire and Cowl Wire (Left Kick Panel)

## : GROUND POINTS

Code	See Page	Ground Points Location
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel