


POWER SEAT (DRIVER'S SEAT w/o DRIVING POSITION MEMORY)

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

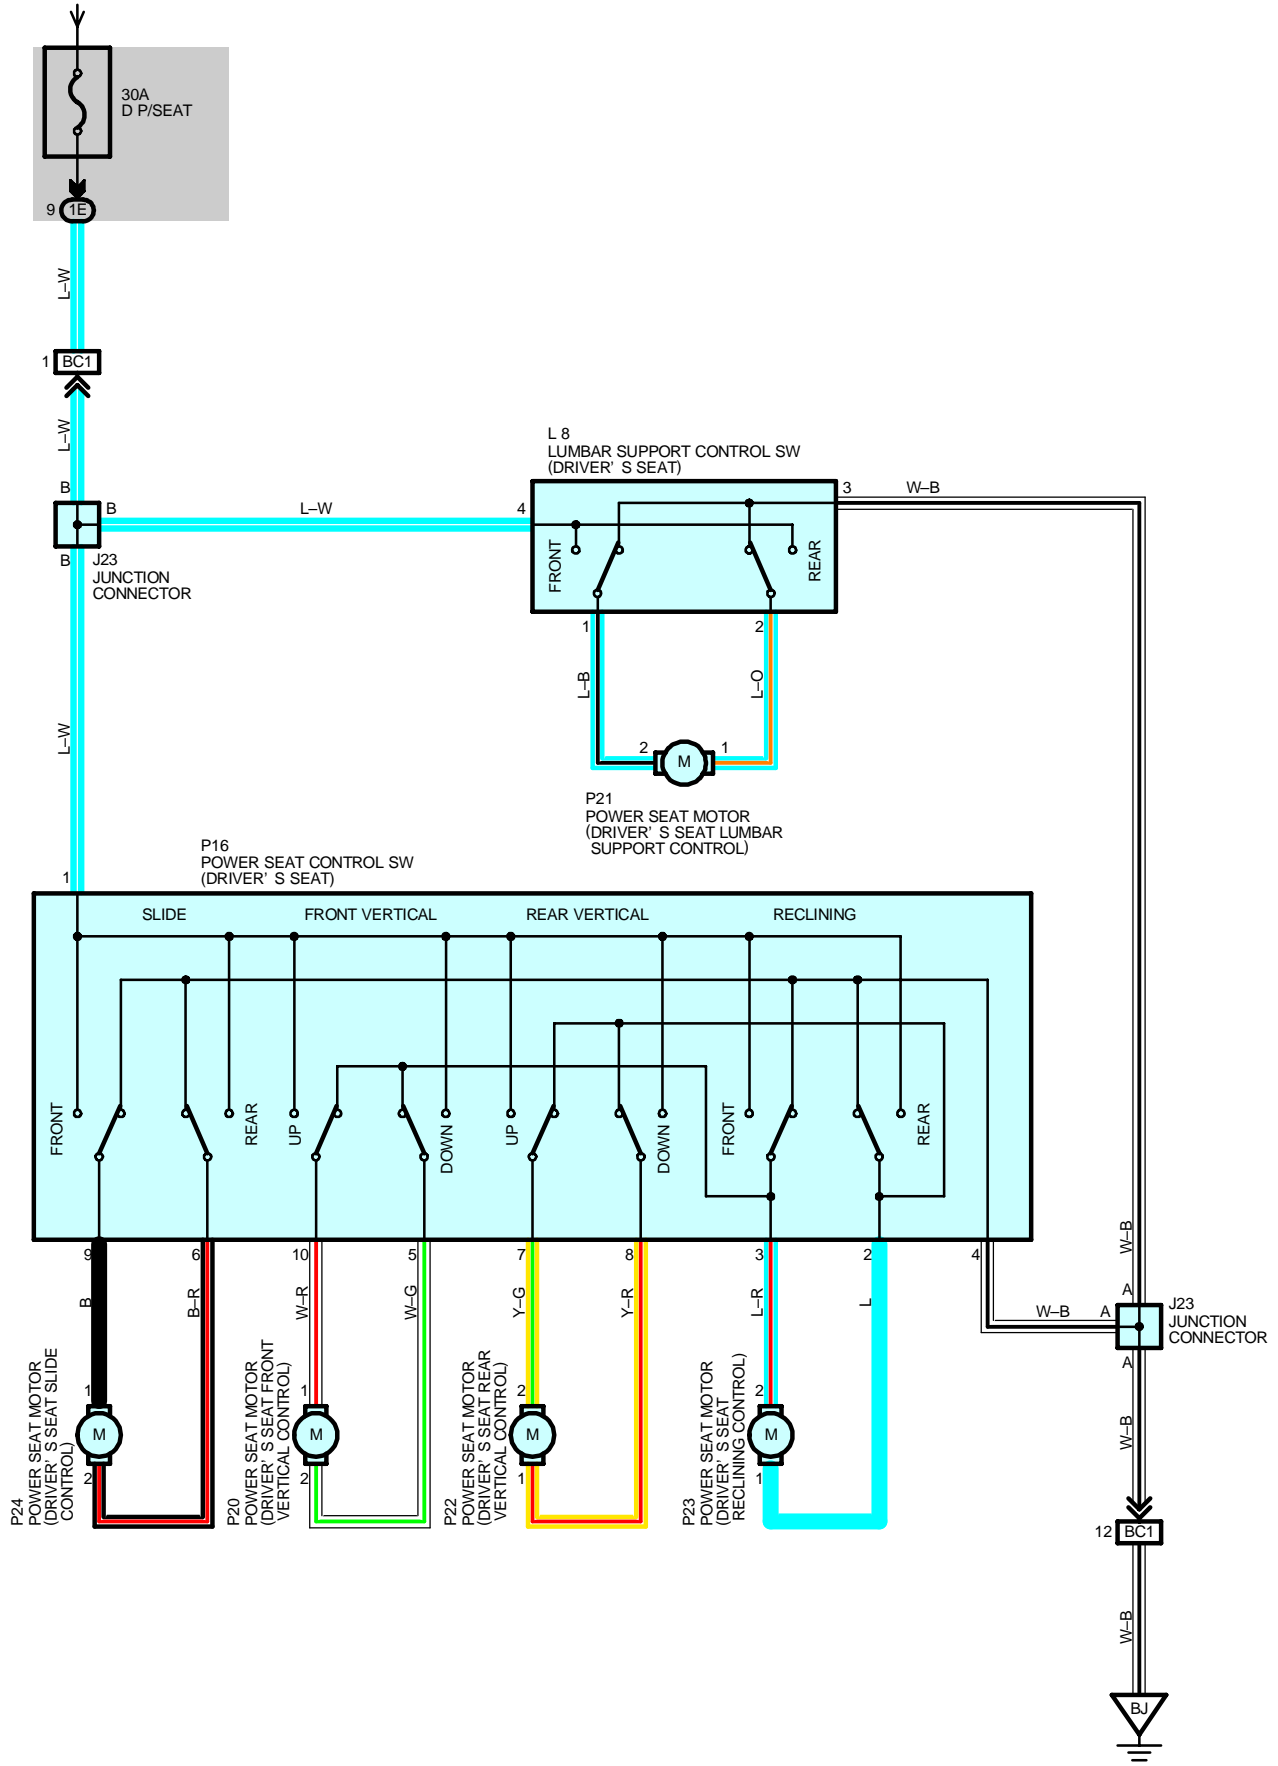

SERVICE HINTS

P16 POWER SEAT CONTROL SW (DRIVER'S SEAT)

1-GROUND : Always approx. 12 volts

4-GROUND : Always continuity

L8 LUMBAR SUPPORT CONTROL SW (DRIVER'S SEAT)

4-GROUND : Always approx. 12 volts

3-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J23	46	P20	46	P23	46
L8	46	P21	46	P24	46
P16	46	P22	46		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	28	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	58	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	56	Rear Floor Partition Panel LH