


POWER SEAT (FRONT PASSENGER'S SEAT)

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

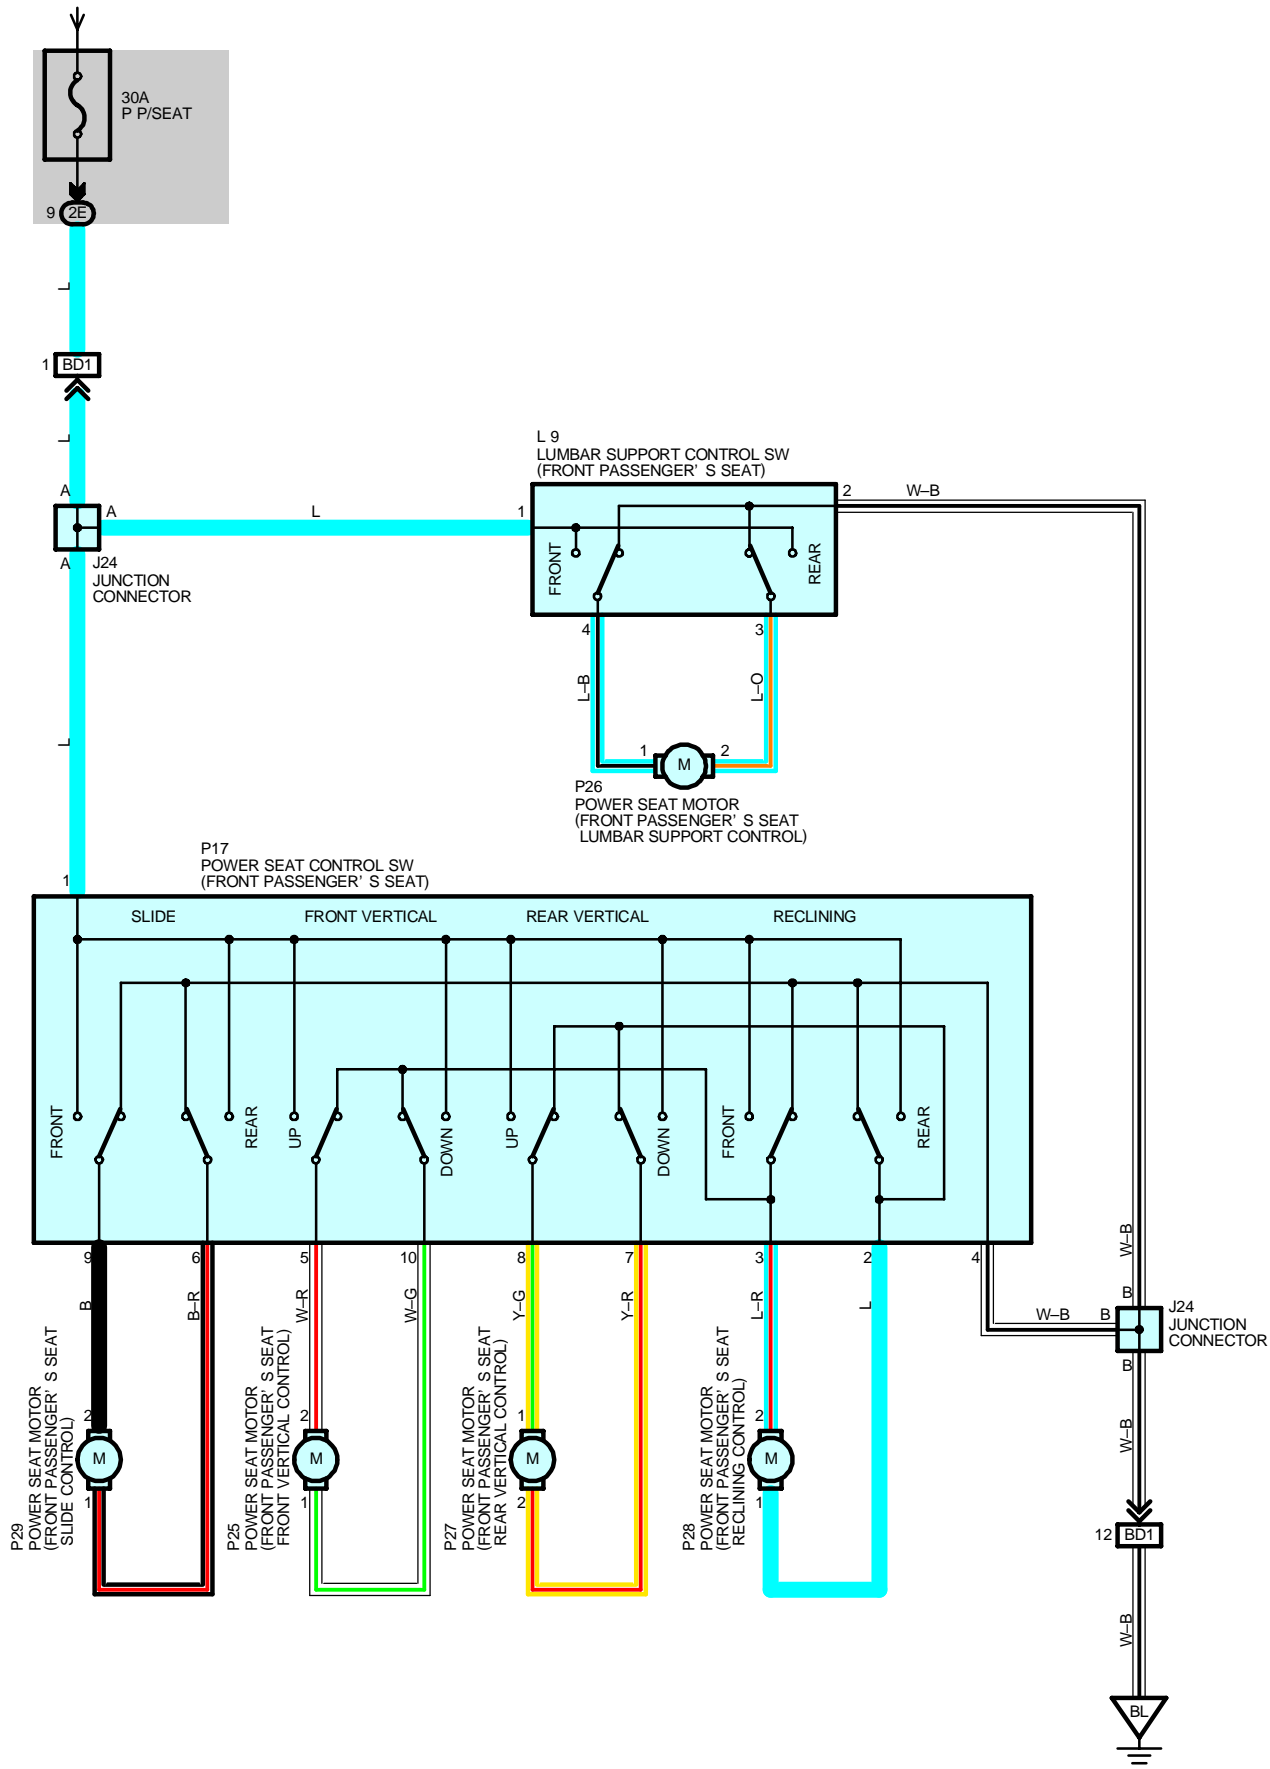

SERVICE HINTS

P17 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

1-GROUND : Always approx. 12 volts

4-GROUND : Always continuity

L9 LUMBAR SUPPORT CONTROL SW (FRONT PASSENGER'S SEAT)

1-GROUND : Always approx. 12 volts

2-GROUND : Always continuity

: PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| J24 | 46 | P25 | 46 | P28 | 46 |
| L9 | 46 | P26 | 46 | P29 | 46 |
| P17 | 46 | P27 | 46 | | |

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| 2E | 30 | Floor No.1 Wire and Passenger Side J/B (Right Kick Panel) |

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|---|
| BD1 | 58 | Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat) |

: GROUND POINTS

| Code | See Page | Ground Points Location |
|------|----------|-------------------------------|
| BL | 56 | Rear Floor Partition Panel RH |