


CIGARETTE LIGHTER AND POWER OUTLET

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

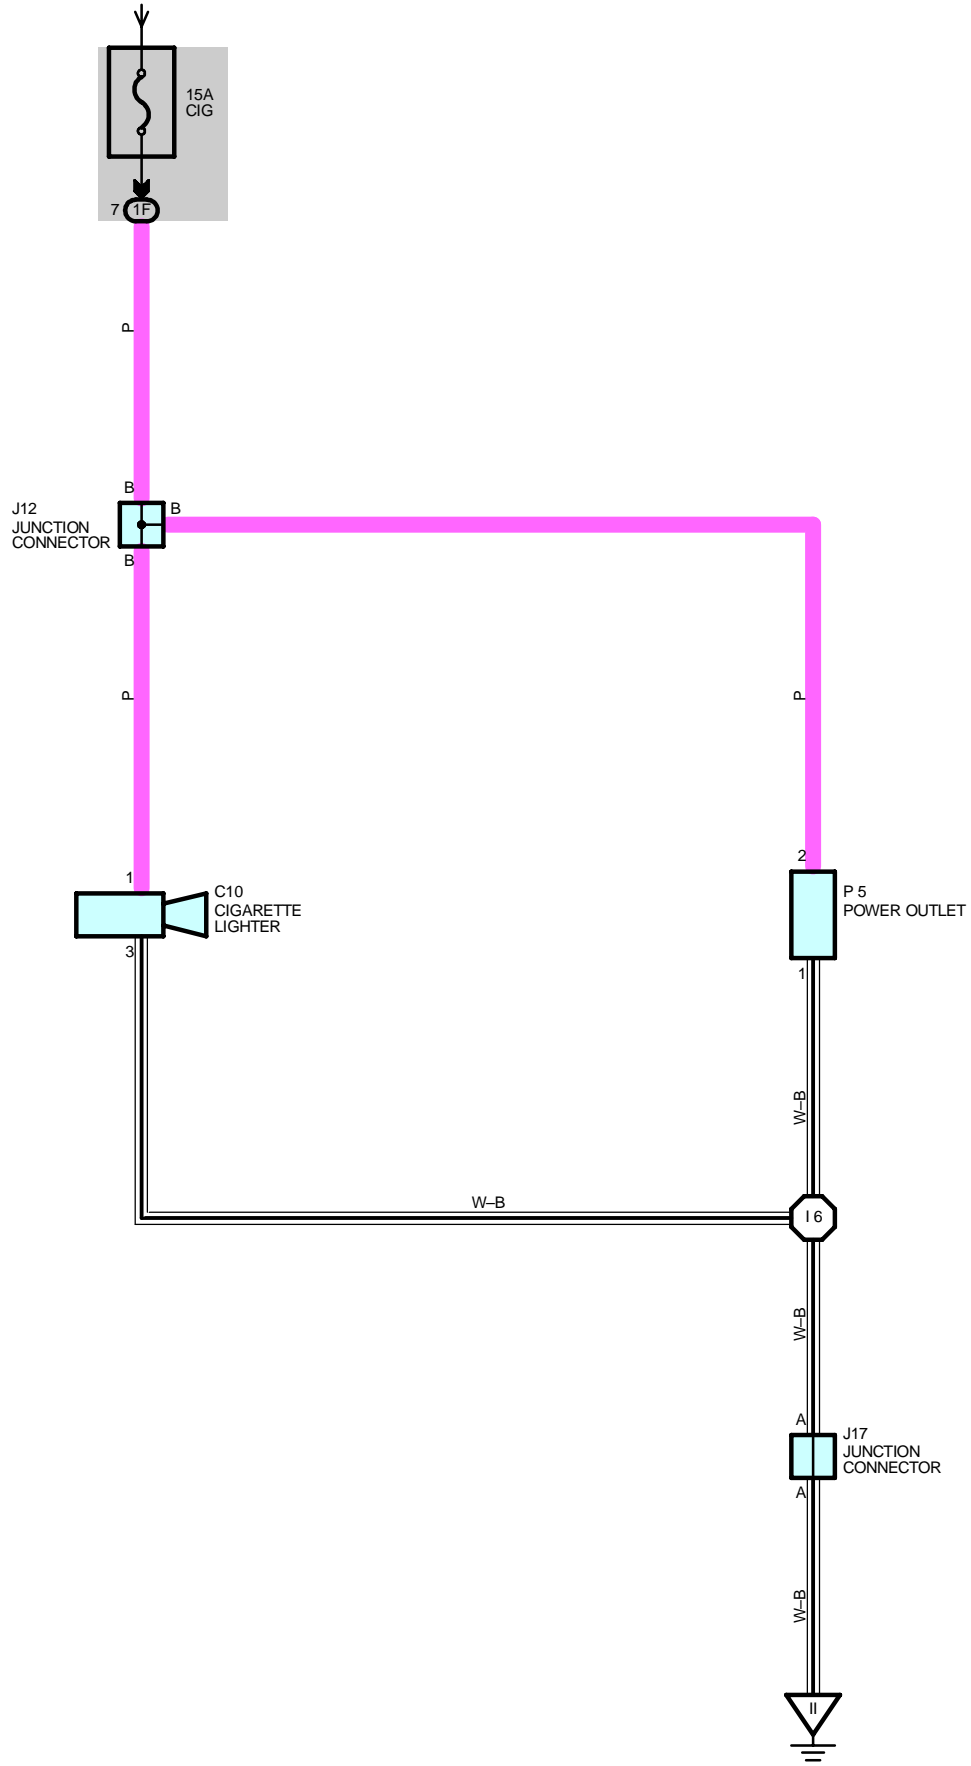

SERVICE HINTS

C10 CIGARETTE LIGHTER

1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

3-GROUND : Always continuity

P5 POWER OUTLET

2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C10	42	J17	43		
J12	43	P5	43		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
II	52	Right Side of the Cowl Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	54	Cowl Wire			