



SERVICE HINTS

C11 CLOCK

4-GROUND : Always approx. **12** volts (Power for clock)

5-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position (Power for indication)

1-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B6	42	C11	42	J17	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	28	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
2H	31	Cowl Wire and Passenger Side J/B (Right Kick Panel)
3B	32	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Reinforcement Center)
3G	33	

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ2	54	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)

: GROUND POINTS

Code	See Page	Ground Points Location
II	52	Right Side of the Cowl Panel