



HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

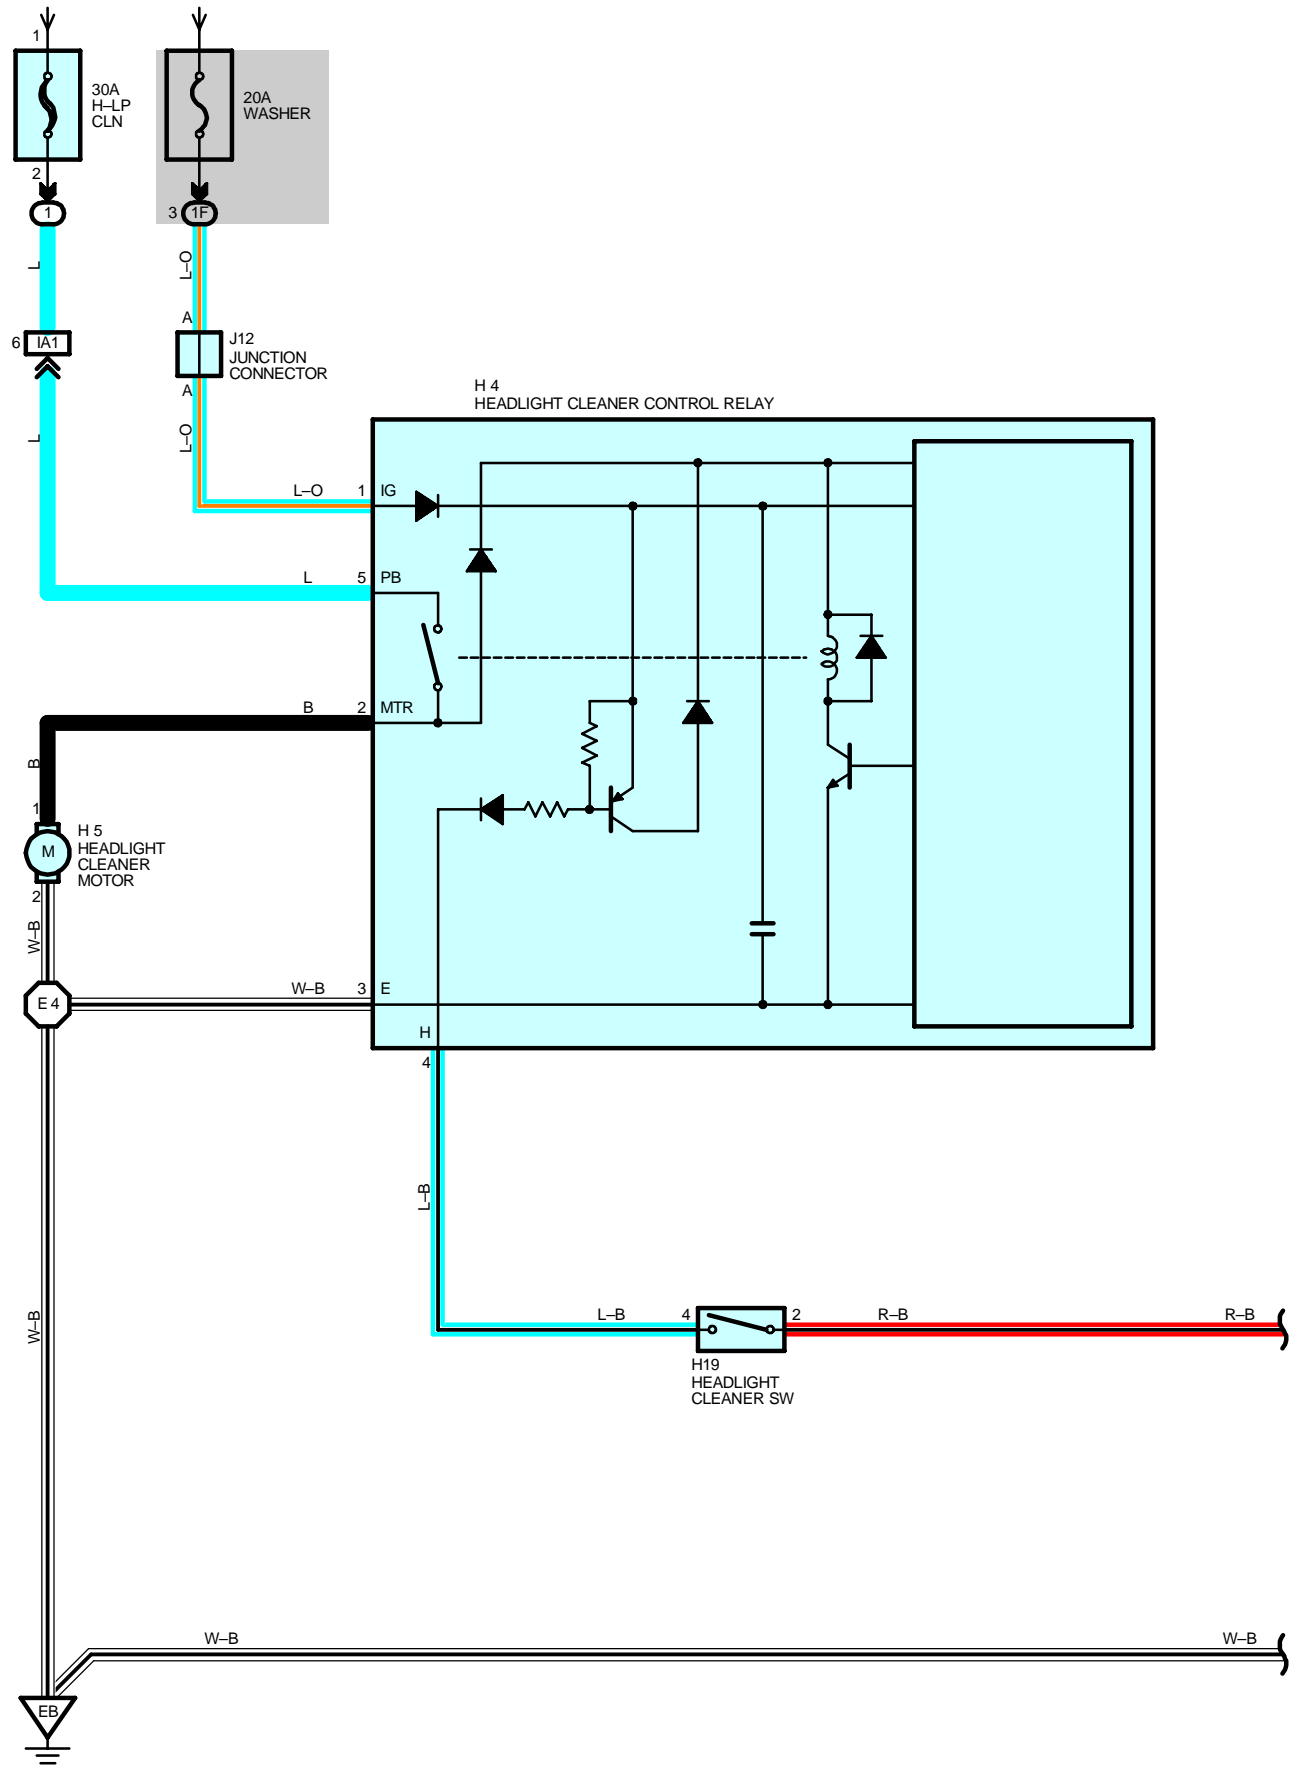

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

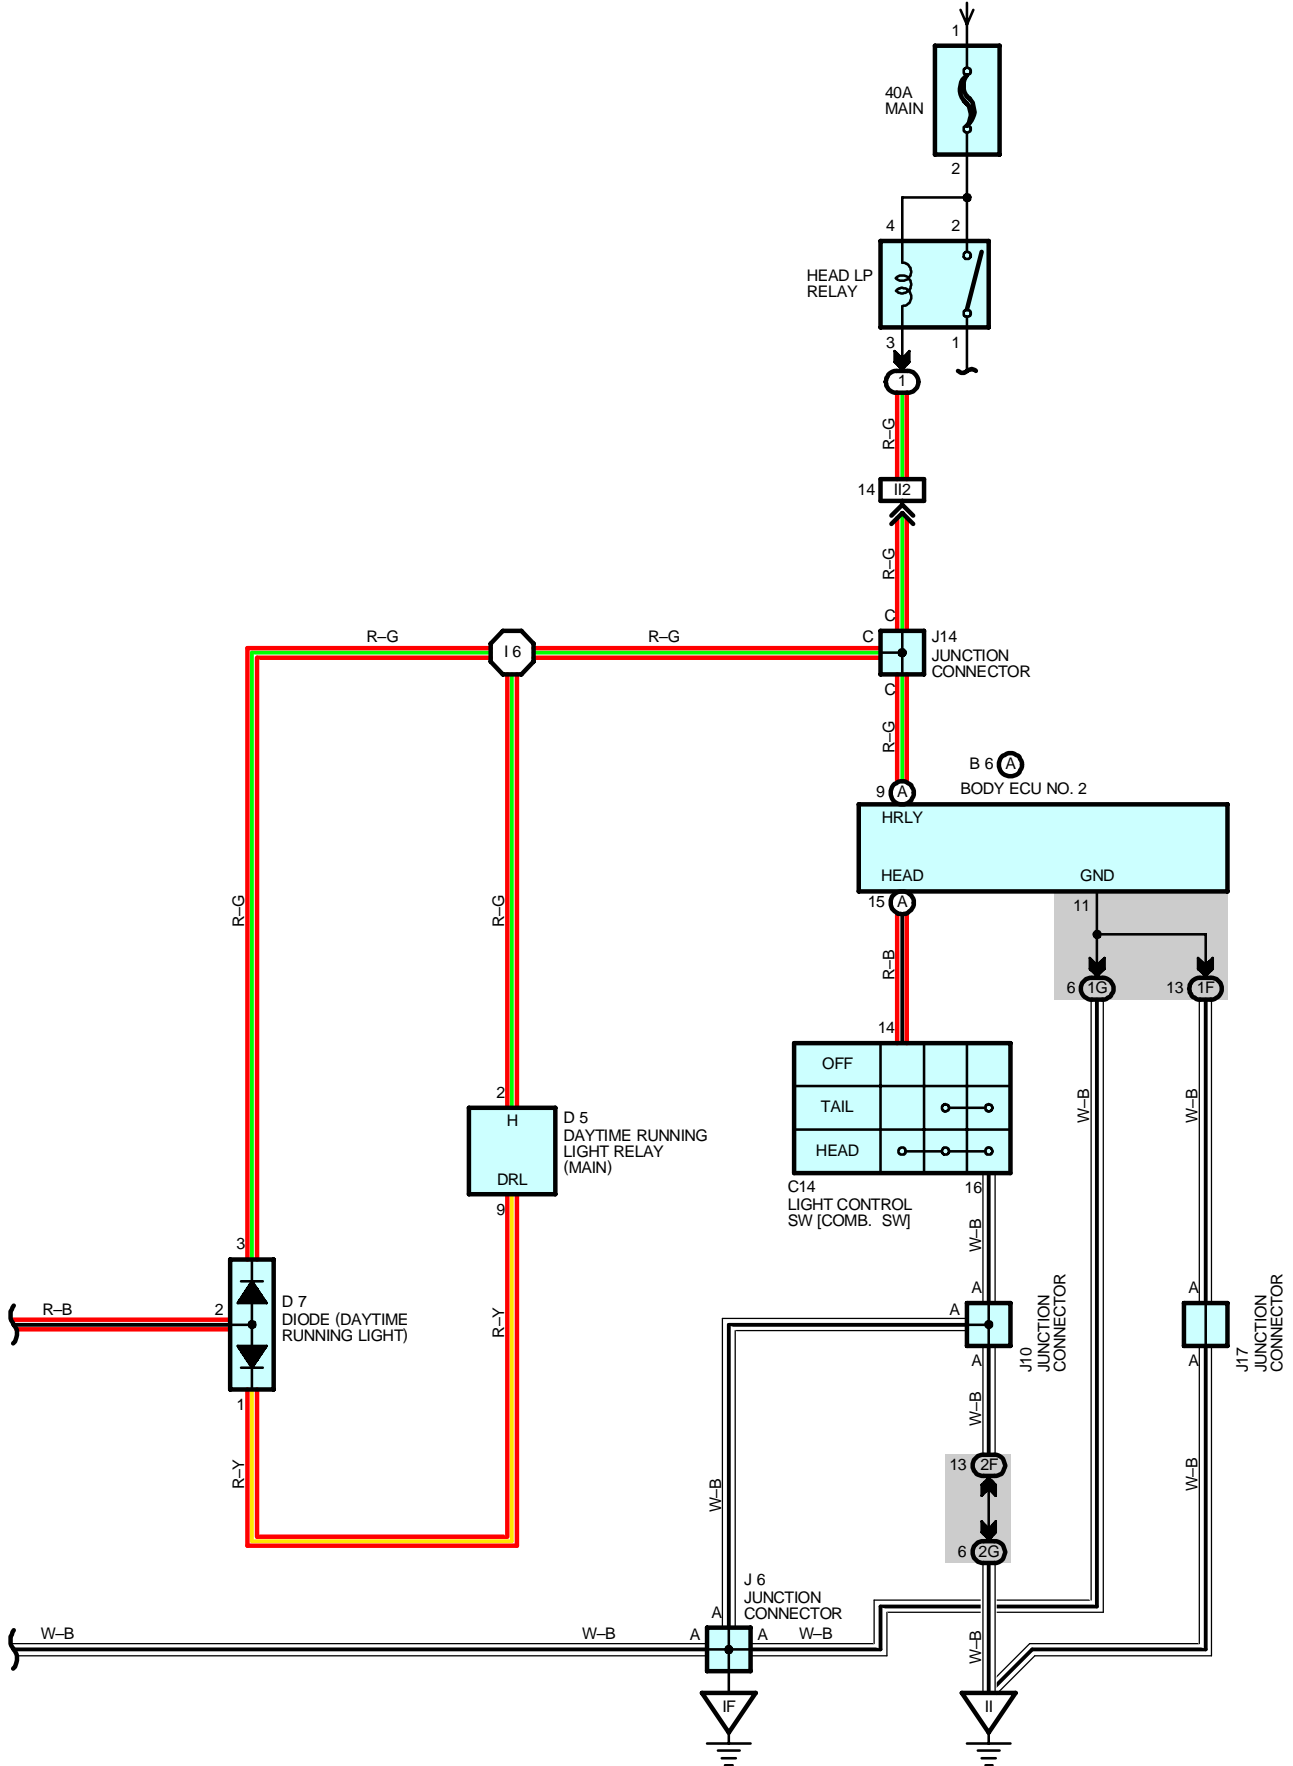

HEADLIGHT CLEANER

SERVICE HINTS

H4 HEADLIGHT CLEANER CONTROL RELAY

5-2 : Closed with ignition SW at **ON** position, light control SW at **HEAD** position and headlight cleaner SW on

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
B6	A	42	H4	40 (2JZ-GE)	J10	43
C14		42	H5	38 (3UZ-FE)	J12	43
D5		42		40 (2JZ-GE)	J14	43
D7		42	H19	42	J17	43
H4		38 (3UZ-FE)	J6	43		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)
1G	29	
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	31	

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
II2	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	48 (3UZ-FE)	Left Fender
	50 (2JZ-GE)	
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	48 (3UZ-FE)	Cowl Wire	I6	54	Cowl Wire
	50 (2JZ-GE)				

