


AUTOMATIC GLARE-RESISTANT EC MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

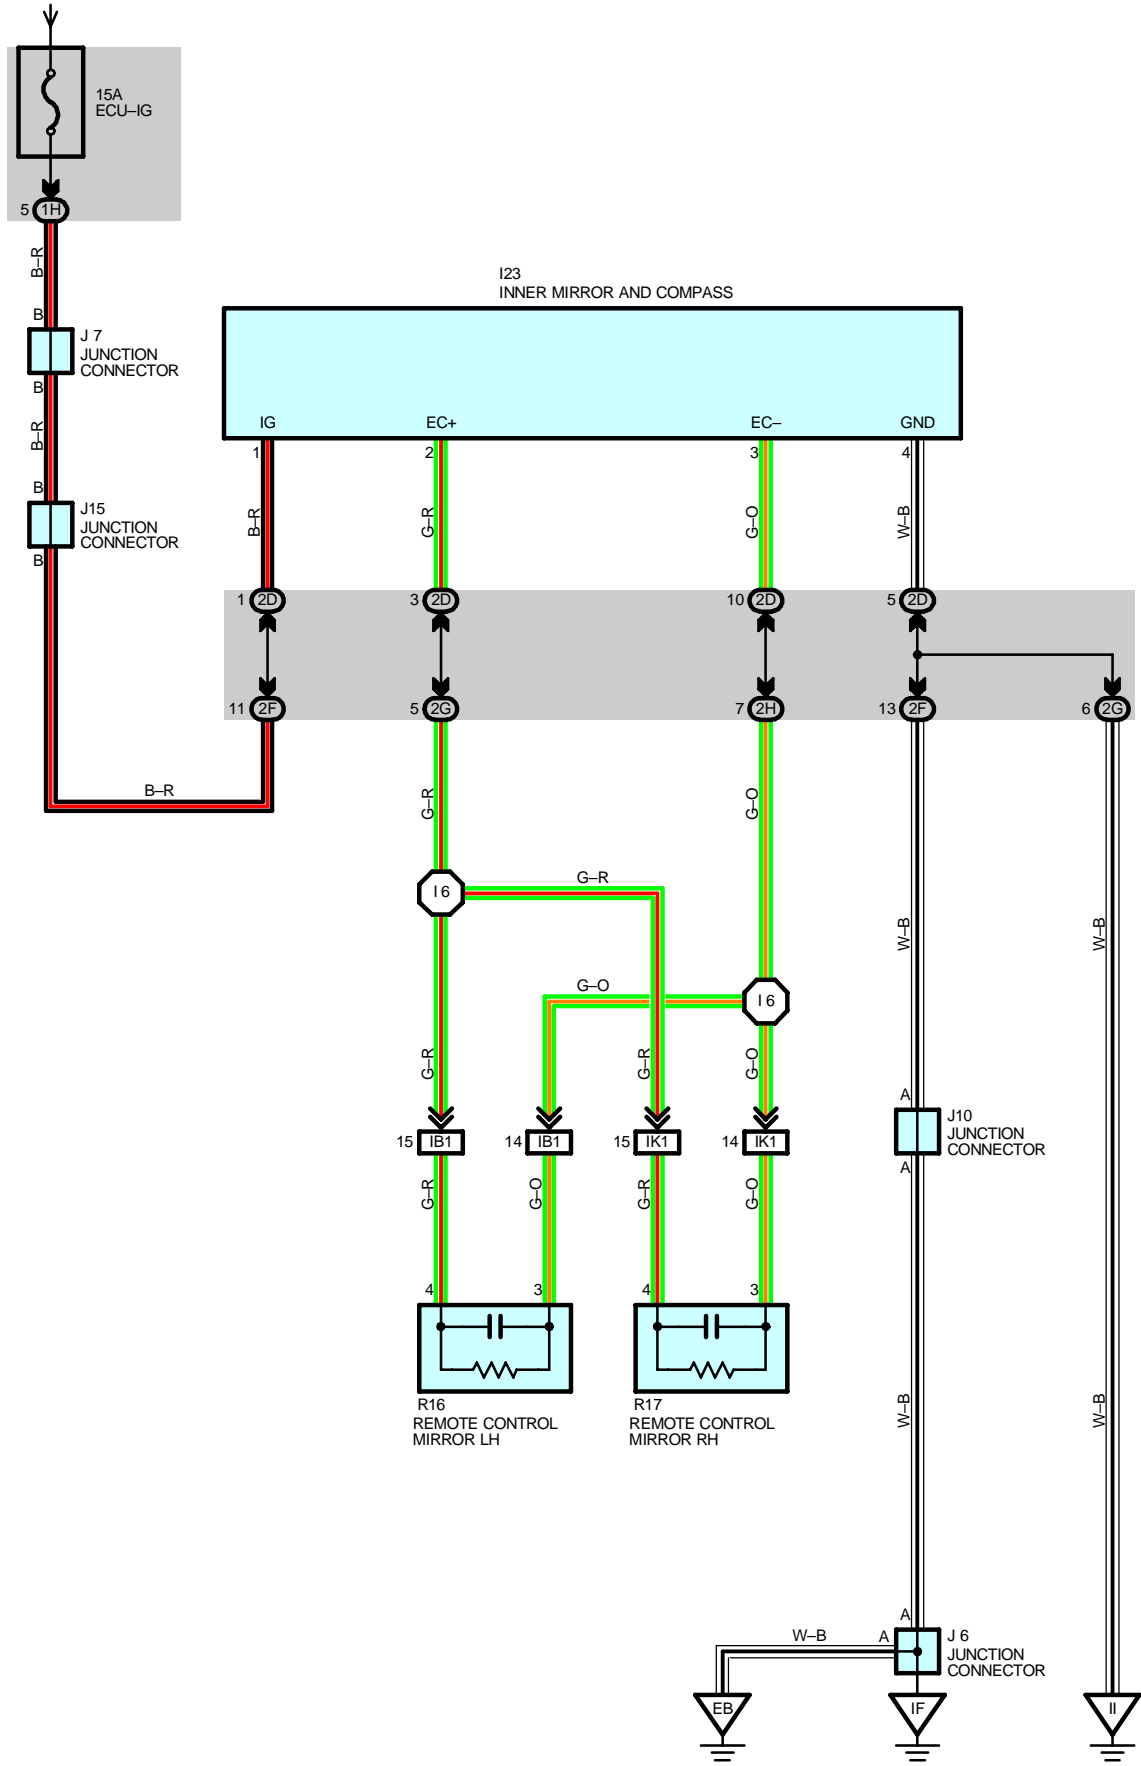

SERVICE HINTS

I23 INNER MIRROR AND COMPASS

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

4-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I23	44	J10	43	R17	45
J6	43	J15	43		
J7	43	R16	45		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)
2D	30	Roof Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	31	
2H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	52	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IK1	54	Front Door RH Wire and Cowl Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
EB	48 (3UZ-FE)	Left Fender
	50 (2JZ-GE)	
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	54	Cowl Wire			