


FUEL LID OPENER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

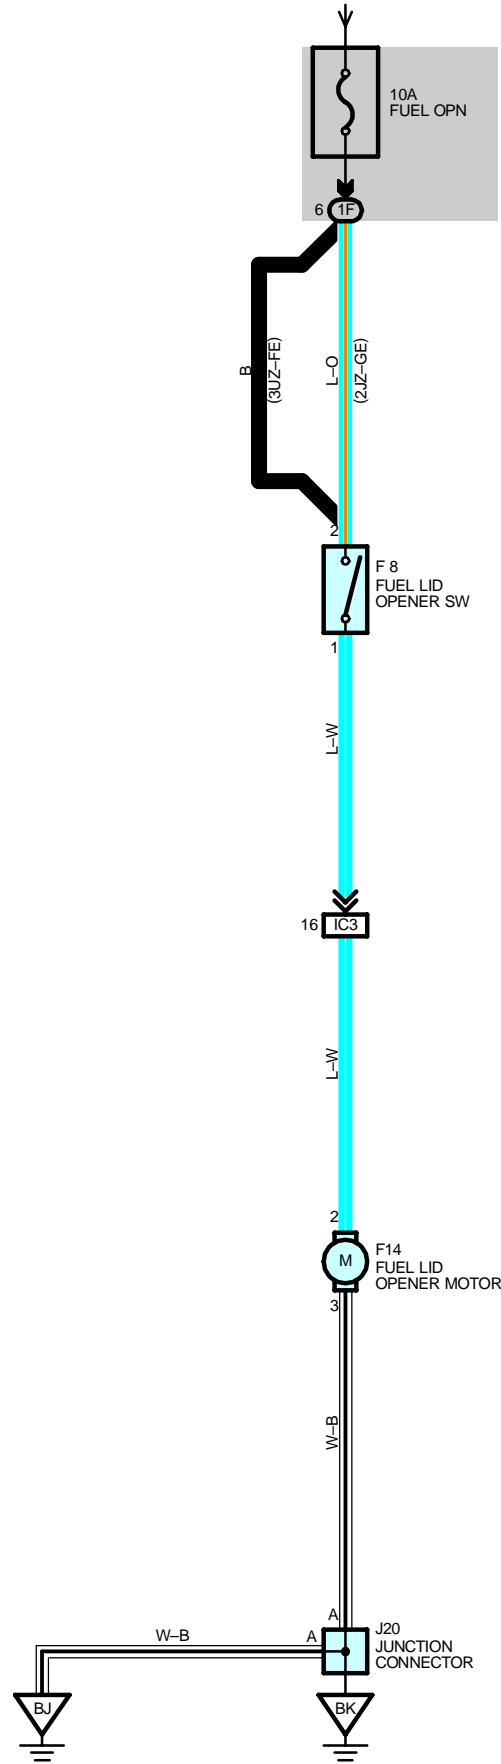

SERVICE HINTS

F8 FUEL LID OPENER SW

2-1 : Closed with fuel lid opener SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F8	42	F14	44	J20	44

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	28	Cowl Wire and Driver Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	52	Floor No.2 Wire and Cowl Wire (Left Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	56	Rear Floor Partition Panel LH
BK	56	Quarter Panel LH