


GARAGE DOOR OPENER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

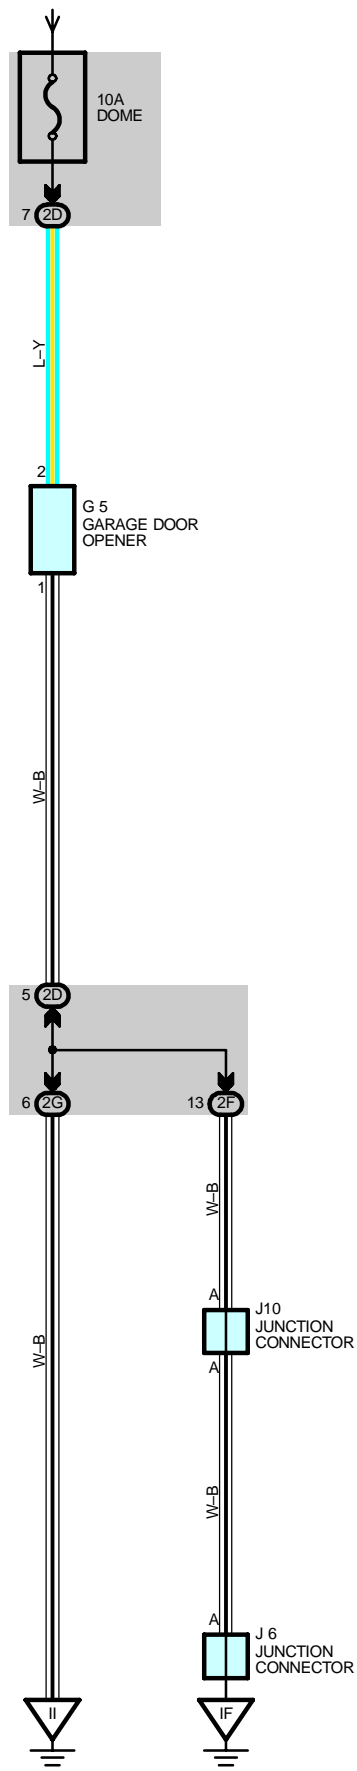

SERVICE HINTS

G5 GARAGE DOOR OPENER

2-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
G5	44	J6	43	J10	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	30	Roof Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	31	

: GROUND POINTS

Code	See Page	Ground Points Location
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel