


SEAT HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

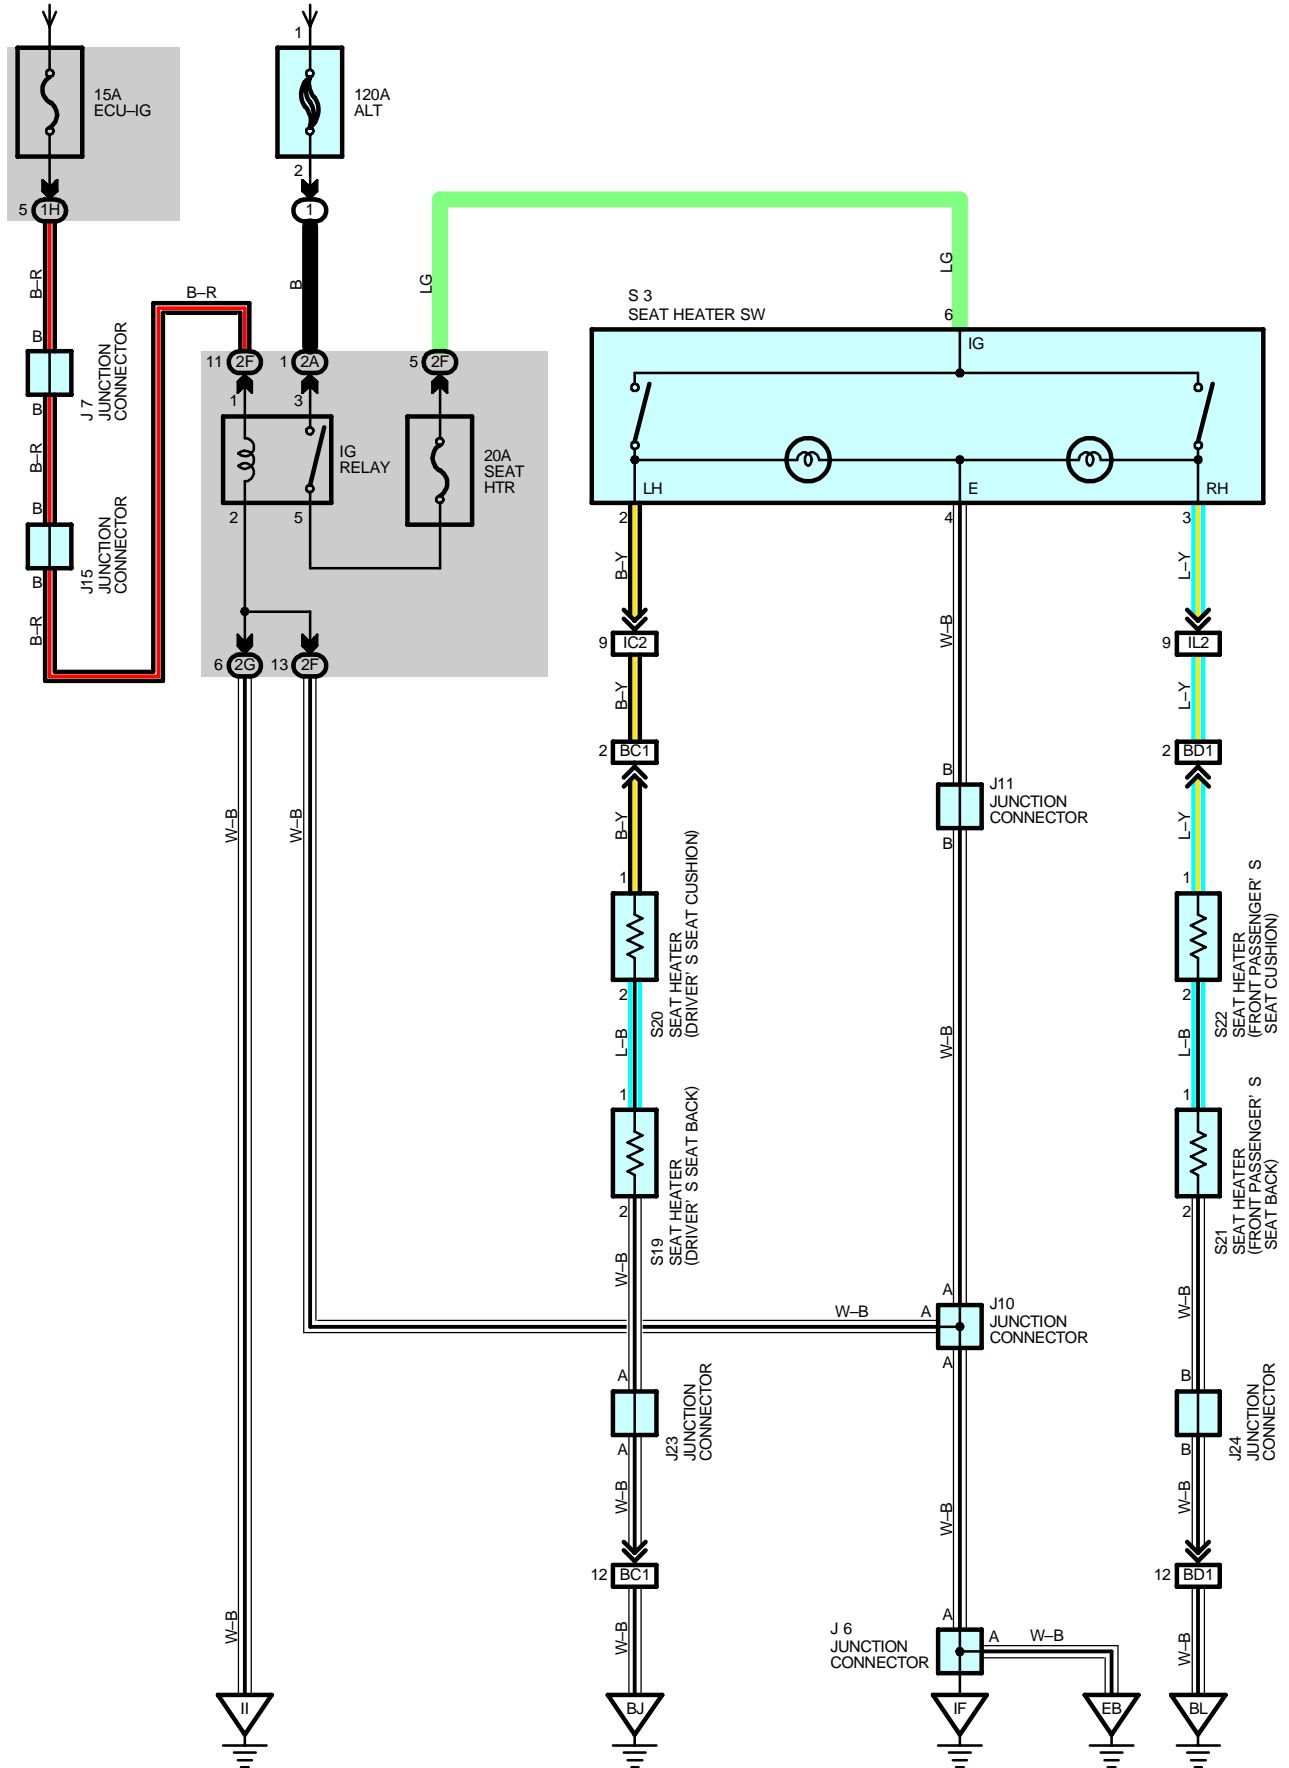

SERVICE HINTS

S3 SEAT HEATER SW

6-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

4-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J6	43	J15	43	S19	46
J7	43	J23	46	S20	46
J10	43	J24	46	S21	46
J11	43	S3	43	S22	46

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)
2A	30	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	31	

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	52	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IL2	54	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
BC1	58	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BD1	58	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
EB	48 (3UZ-FE)	Left Fender
	50 (2JZ-GE)	
IF	52	Left Kick Panel
II	52	Right Side of the Cowl Panel
BJ	56	Rear Floor Partition Panel LH
BL	56	Rear Floor Partition Panel RH