


ELECTRIC TENSION REDUCER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

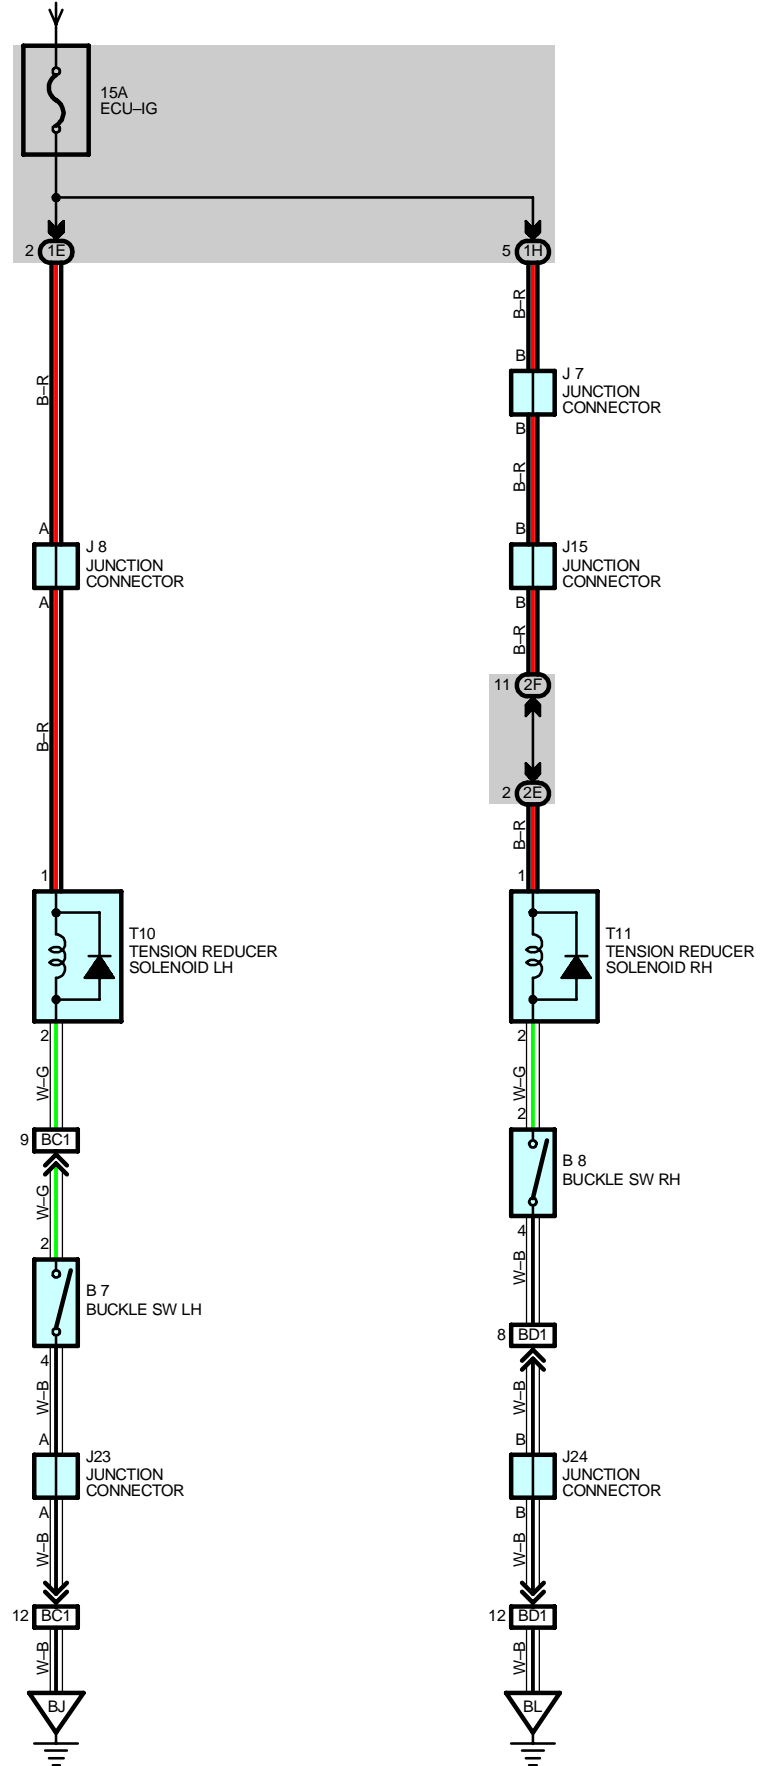

SERVICE HINTS

B7 BUCKLE SW LH

1-3 : Closed with driver seat belt in use

B8 BUCKLE SW RH

1-3 : Closed with front passenger seat belt in use

T10, T11 TENSION REDUCER SOLENOID LH, RH

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B7	46	J8	43	J24	46
B8	46	J15	43	T10	45
J7	43	J23	46	T11	45

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	28	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)
2E	30	Floor No.1 Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	58	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BD1	58	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	56	Rear Floor Partition Panel LH
BL	56	Rear Floor Partition Panel RH