



# REAR WINDOW DEFOGGER AND MIRROR HEATER

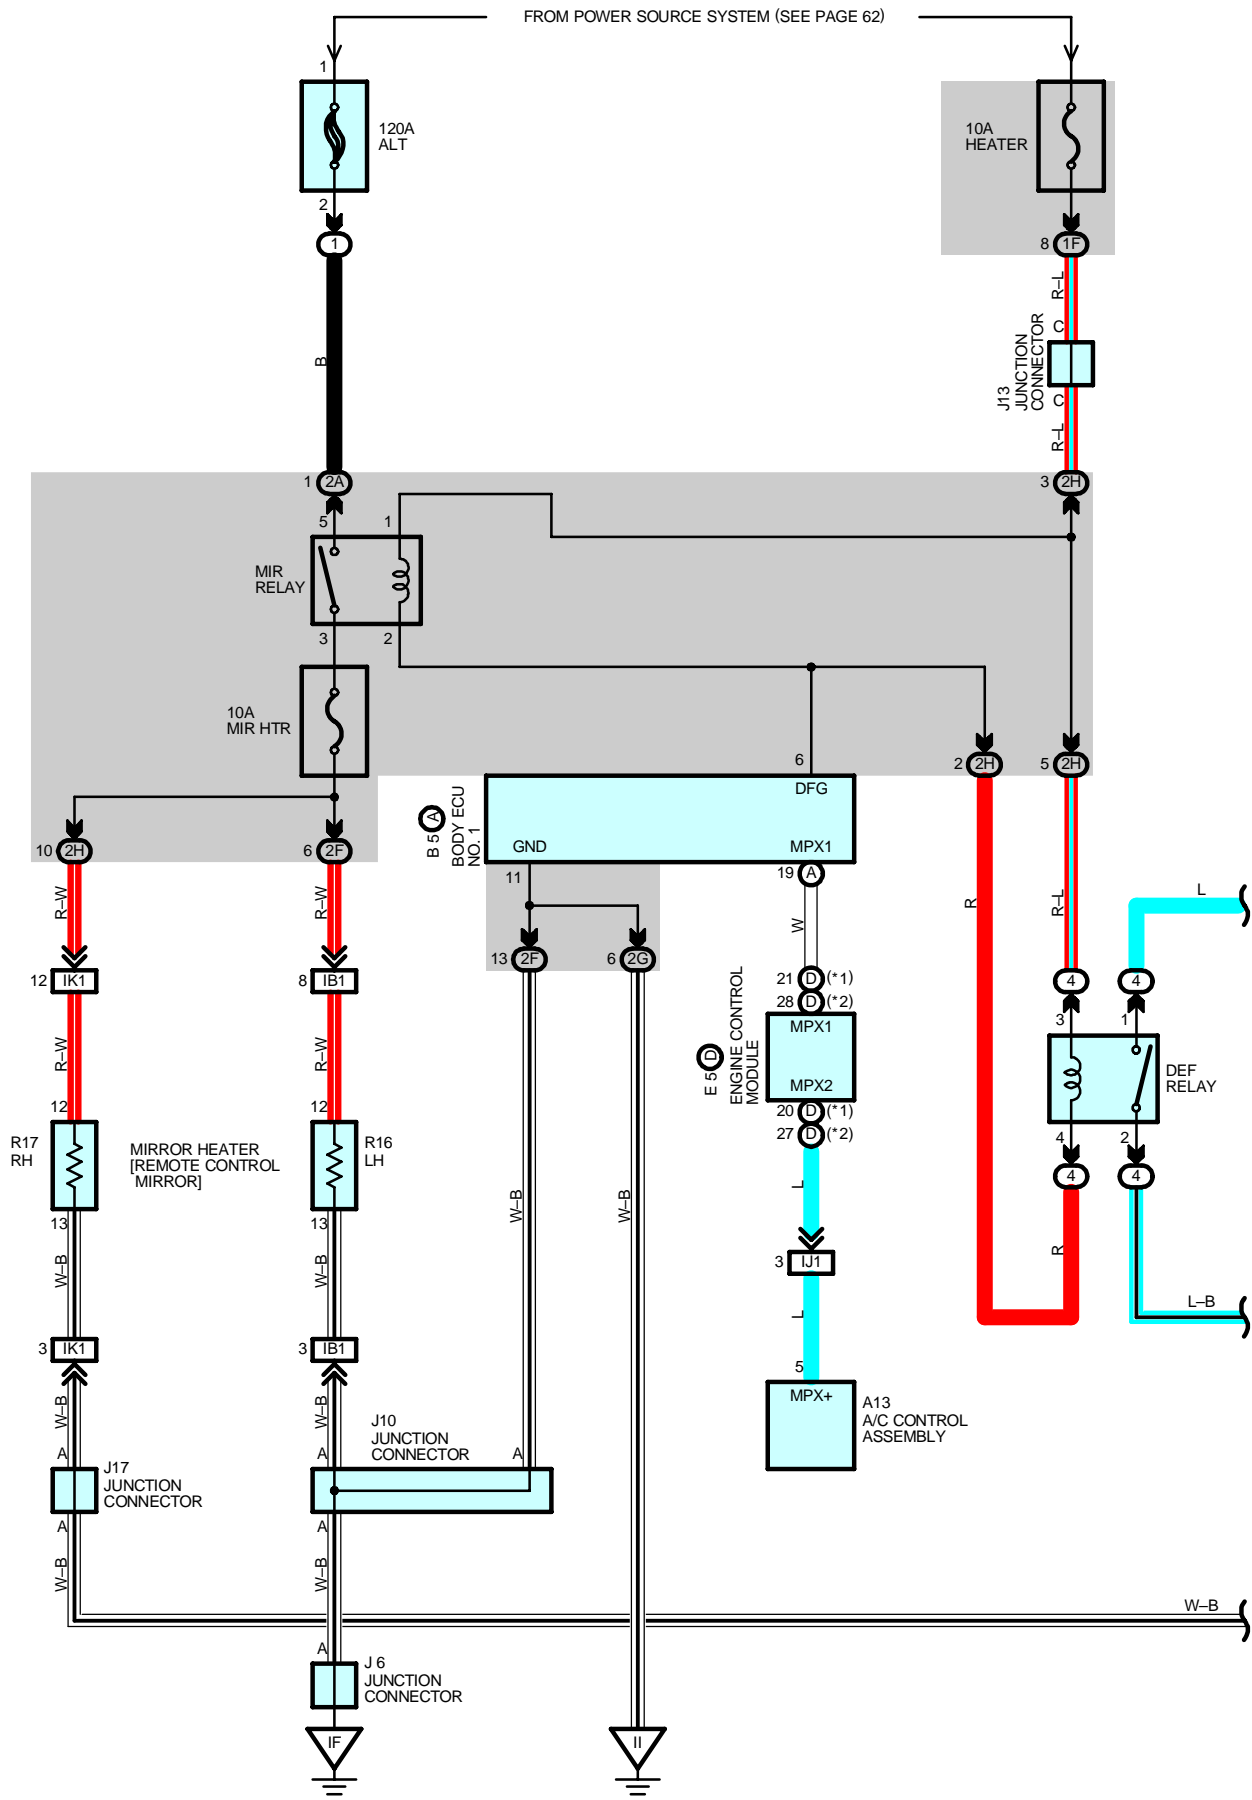

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

\* 1 : 3UZ-FE  
\* 2 : 2JZ-GE

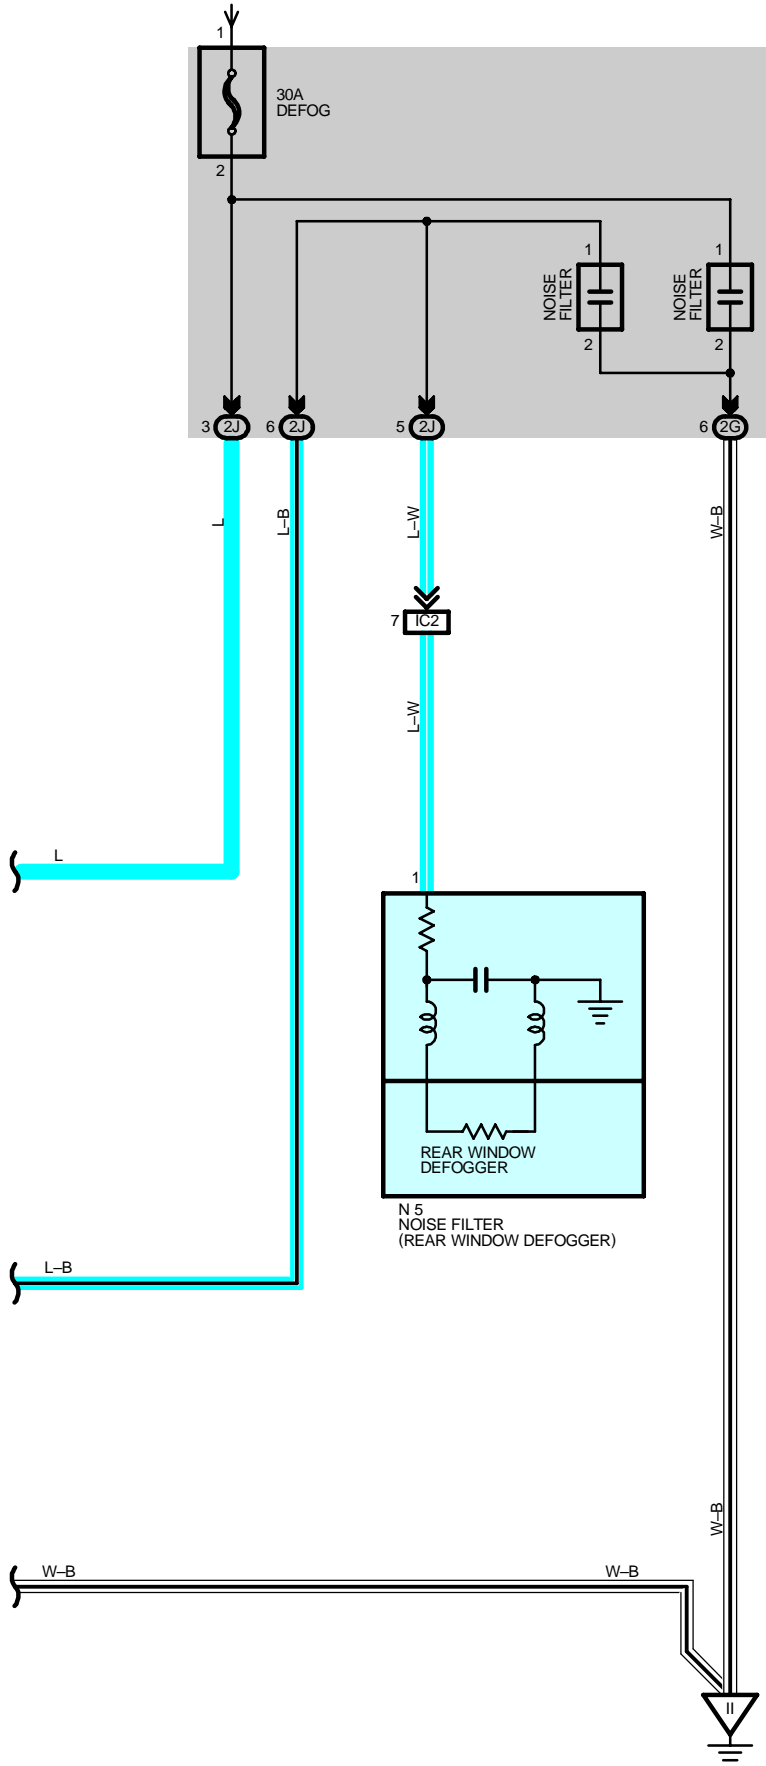

# REAR WINDOW DEFOGGER AND MIRROR HEATER

## SERVICE HINTS

### DEF RELAY

1-2 : Closed with ignition SW at **ON** position and defogger SW on

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A13	<a href="#">42</a>	J6	<a href="#">43</a>	N5	<a href="#">45</a>
B5	A <a href="#">42</a>	J10	<a href="#">43</a>	R16	<a href="#">45</a>
E5	D <a href="#">38 (3UZ-FE)</a>	J13	<a href="#">43</a>	R17	<a href="#">45</a>
	<a href="#">40 (2JZ-GE)</a>	J17	<a href="#">43</a>		

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	<a href="#">24</a>	Engine Room No.1 R/B (Engine Compartment Right)
4	<a href="#">27</a>	Passenger Side R/B (Right Kick Panel)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	<a href="#">28</a>	Cowl Wire and Driver Side J/B (Left Kick Panel)
2A	<a href="#">30</a>	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
2F	<a href="#">30</a>	Cowl Wire and Passenger Side J/B (Right Kick Panel)
2G	<a href="#">31</a>	
2H		
2J		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	<a href="#">52</a>	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IC2	<a href="#">52</a>	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IJ1	<a href="#">54</a>	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IK1	<a href="#">54</a>	Front Door RH Wire and Cowl Wire (Right Kick Panel)

## : GROUND POINTS

Code	See Page	Ground Points Location
IF	<a href="#">52</a>	Left Kick Panel
II	<a href="#">52</a>	Right Side of the Cowl Panel

