


AUTO ANTENNA

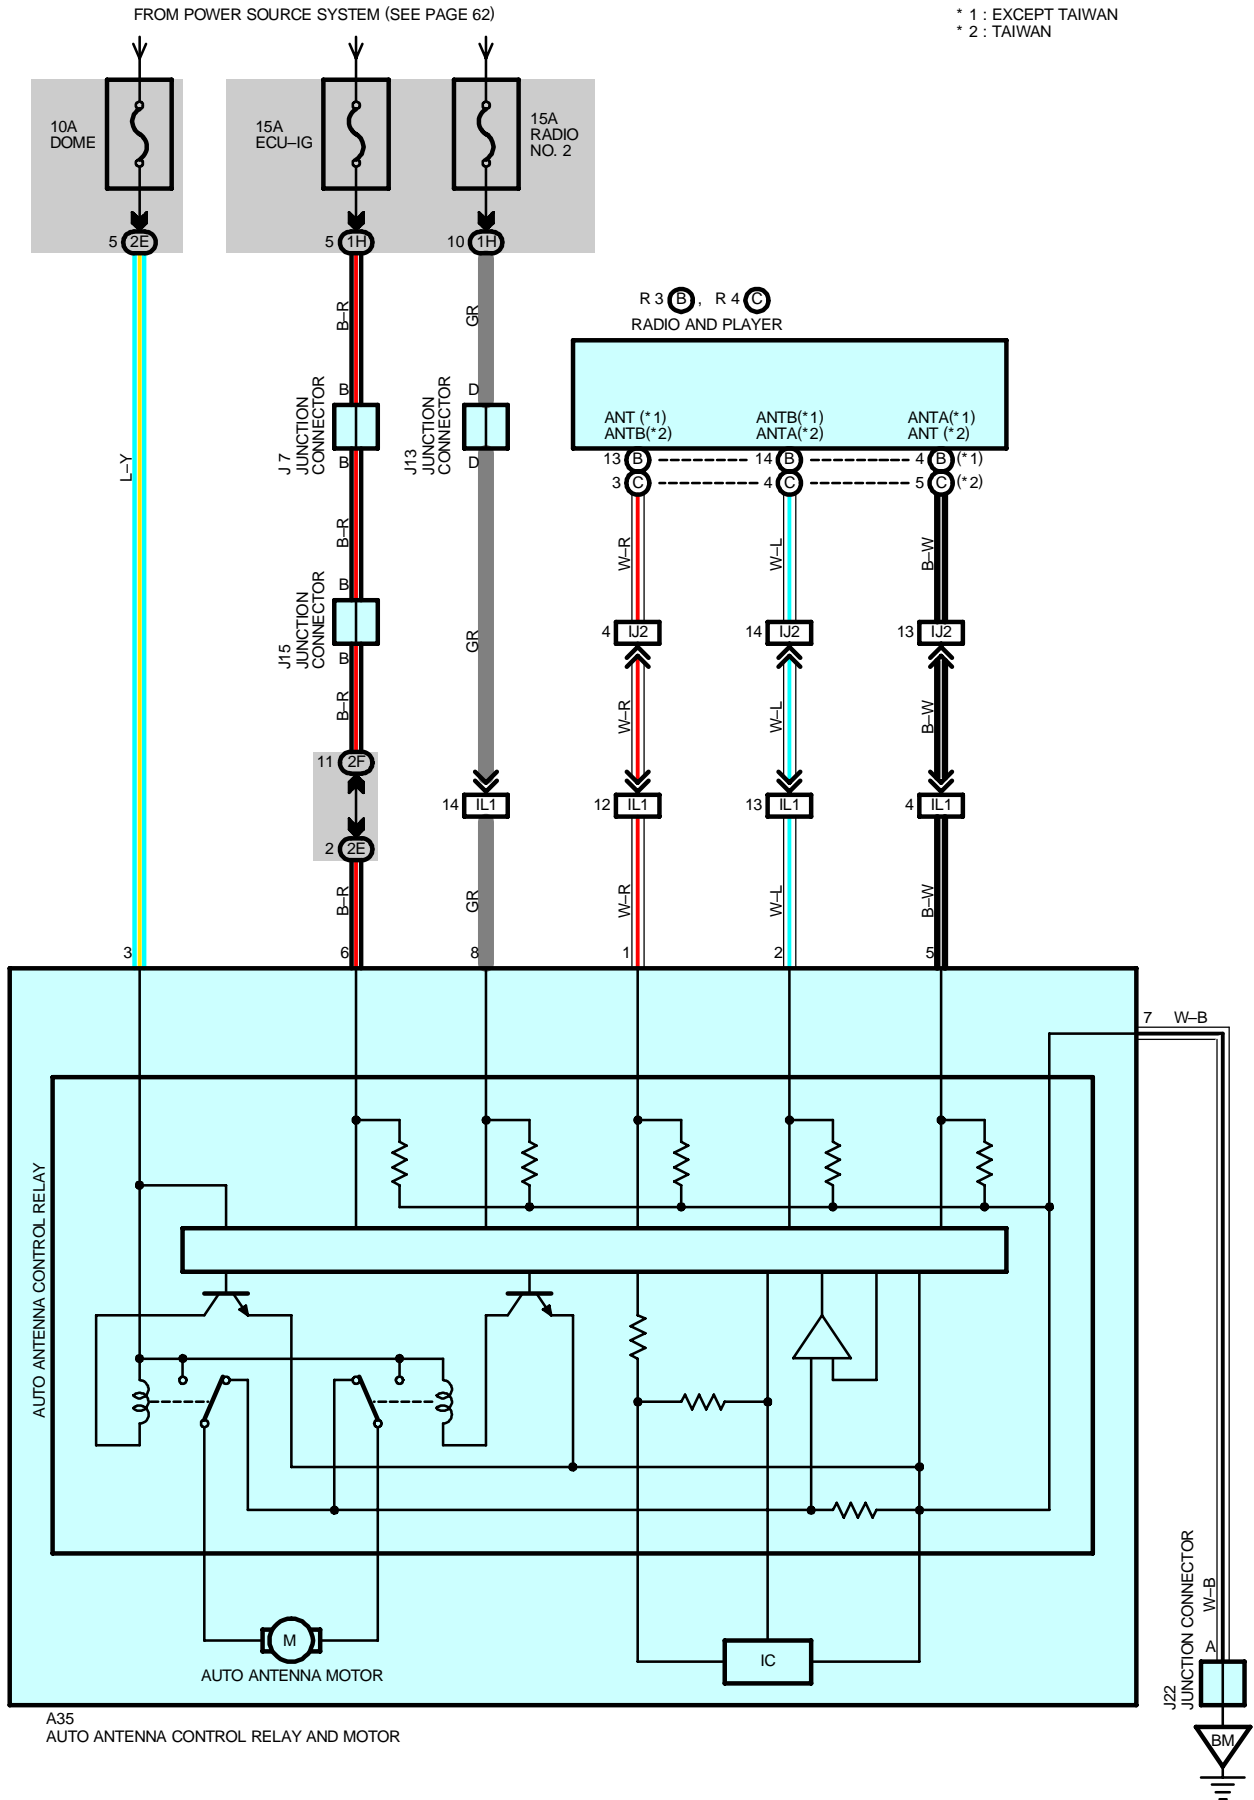

SERVICE HINTS

A35 AUTO ANTENNA CONTROL RELAY AND MOTOR

3-GROUND : Always approx. **12** volts

6-GROUND : Approx. **12** volts with ignition SW at **ON** position

8-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

7-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A35	44	J15	43	R4	C 43
J7	43	J22	44		
J13	43	R3	B 43		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)
2E	30	Floor No.1 Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ2	54	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IL1	54	Floor No.1 Wire and Cowl Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
BM	56	Quarter Panel RH