


AIR CONDITIONING CONTROL ASSEMBLY REMOVAL

AC0XR-02


1. REMOVE THESE PARTS:

- (a) No.2 register
- (b) Cluster finish panel
(See page [BO-91](#))

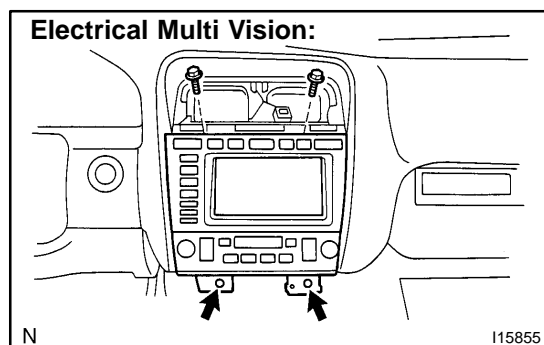

2. REMOVE A/C CONTROL ASSEMBLY WITH RADIO

Remove the 4 bolts and pull out the A/C control assembly, then disconnect the connectors.

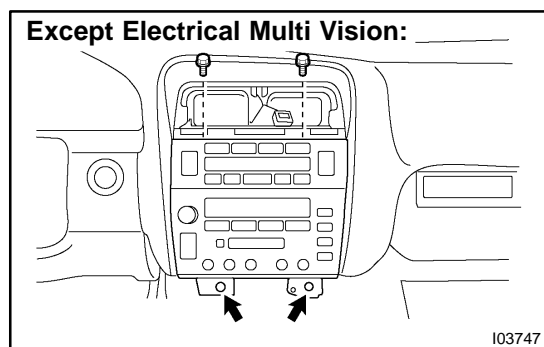

3. REMOVE A/C CONTROL ASSEMBLY FROM RADIO

Remove the 8 bolts, 2 screw and 2 brackets, then remove the A/C control assembly.

