


AIR CONDITIONING AMPLIFIER (Electrical Multi Vision) REMOVAL

AC0XU-02

1. REMOVE A/C CONTROL ASSEMBLY
(See page [AC-86](#))

2. REMOVE A/C AMPLIFIER

Remove the 8 bolts, 2 screws and 2 bracket, then remove the amplifier.

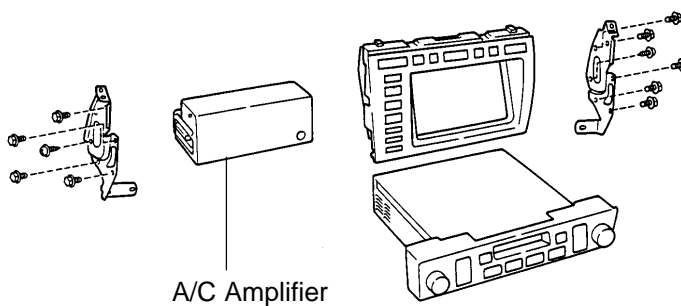

N

I15857