


AIR REFINER FILTER REMOVAL

AC0Y0-01

1. REMOVE GLOVE COMPARTMENT DOOR
(See page [BO-91](#))

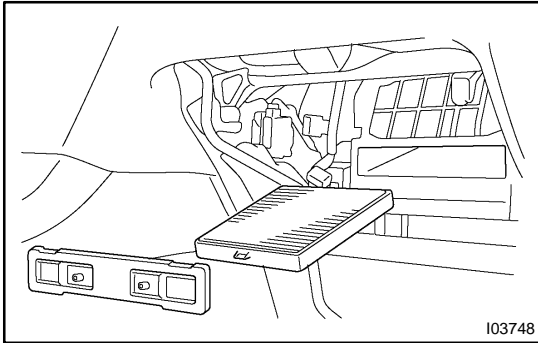

2. REMOVE AIR REFINER FILTER
 - (a) Remove the cover.
 - (b) Pull out the air refiner filter.