


BLOWER MOTOR REMOVAL

AC0XB-01

1. REMOVE No.2 UNDER COVER
(See page [BO-91](#))

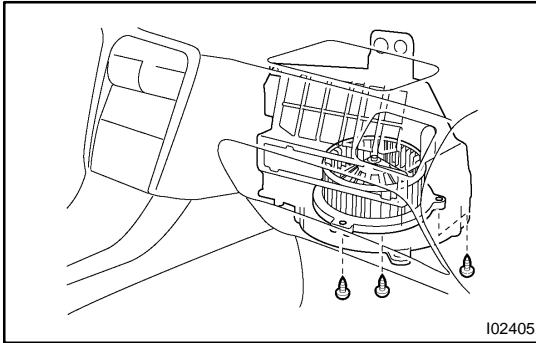

2. REMOVE BLOWER MOTOR
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and blower motor.