


## BLOWER MOTOR CONTROL RELAY REMOVAL

AC0XE-01

### 1. REMOVE THESE PARTS:


- (a) Front door scuff plate RH
- (b) Cowl side trim RH
- (c) No.2 under cover
- (d) Glove compartment door
- (e) Glove compartment panel (See page [BO-91](#))

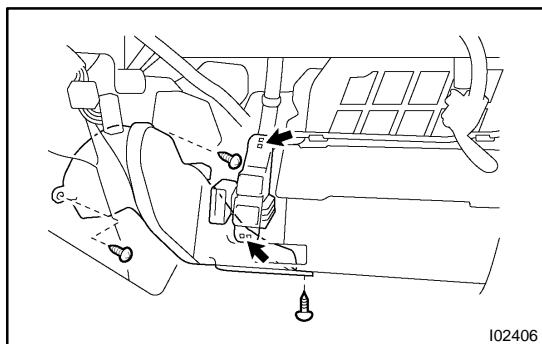

### 2. REMOVE AIR DUCT

Remove the 3 screws and duct.

### 3. DISCONNECT WIRE HARNESS

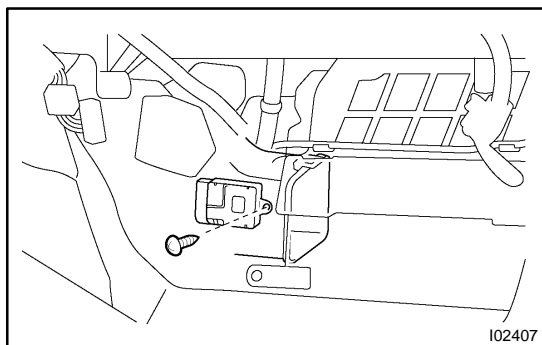

### 4. REMOVE BLOWER MOTOR CONTROL RELAY

Remove the screw and blower motor control relay, then disconnect the connectors.